

Eaton 9PXM Rack Installation Service Scope of Work Attachment L-12

The following is an outline of general procedures, if applicable, that are normally performed by Field Service Personnel prior to a standard start-up for 9PXM UPS models (non-preassembled system products). Start-up service is not included in 9PXM Rack Installation Service (may be purchased separately and described in the Eaton Startup SOW Attachment L-2). "Rack Installation" includes inserting the 9PXM chassis and/or mounting in to a customer supplied IT equipment rack. All checks and processes may not be applicable to all equipment models.

Note: Customer is responsible for inside delivery of all equipment, removal/disposal of existing equipment, suitable equipment environment (e.g., clearances, floor loading, and temperature), installation of any power and battery modules (and connectivity cards) and arranging a licensed electrician to provide all necessary input power and any hardwired output connections and locating all equipment in the site area where the equipment is to be started. Suitable equipment racks may be supplied either by Eaton or customer and be compatible with the customer ordered system, accessories and cables for the intended application and site location; this service does not apply any power nor validate settings.

1. UNPACK

- 1.1. Unpack and/or unload UPS cabinet and accessories
- 1.2. Removal of all packing materials to customer disposal location
- 1.3. Roll equipment from pallet to final position and anchor per installation manual (if applicable)

2. VISUAL INSPECTION

- 2.1. Verify that all equipment and accessories listed in packing list are included.
- 2.2. Visually inspect all equipment and accessories for signs of damage and/or foreign materials.
- 2.3. Observe type of ventilation, room cleanliness, use of proper signs and any safety-related items that may be noteworthy.

3. INSTALL UPS IN SUITABLE IT EQUIPMENT RACK OR ROOM

- 3.1. Install 9PXM Rackmount Tray in bottom of customer rack.
- 3.2. Install Rack Mount Ears on 9PXM chassis.
- 3.3. Disengage 9PXM Chassis from caster base and transition onto rackmount tray in customer rack. Secure Rackmount Ears using supplied hardware.
- 3.4. If optionally purchased and performed during the 9PXM UPS rack installation, install a 9PXM external battery cabinet (EBC-8-slot or EBC-12-slot) in to a customer rack using supplied hardware.