

Eaton® 300kVA Three-Phase Power Distribution Unit (PDU) Floor Mounting Bracket Installation Instructions

Use these instructions to install front and rear floor mounting brackets to secure the PDU to the facility floor.



NOTE Refer to the applicable installation and operation manual supplied with PDU for dimensions and required clearances.

| Floor Mounting Bracket Kit Contents | |
|-------------------------------------|---|
| Front Mounting Bracket | 1 |
| Rear Mounting Bracket | 1 |
| Hex Bolts | 8 |

To install the brackets:

1. Unload and mechanically install the PDU according to the instructions in the applicable installation and operation manual.
2. Drill holes in the floor for the mounting brackets. Size the holes for the type of customer-supplied hardware being used to secure the bracket to the floor. See Figure 1 for the bracket mounting hole locations.
3. Remove the front floor mounting bracket from the kit and secure to the PDU cabinet base using the bolts supplied with the kit. See Figure 2 for mounting bracket installation location.
4. Remove the rear floor mounting bracket from the kit and secure to the PDU cabinet base using the bolts supplied with the kit. See Figure 3 for mounting bracket installation location.
5. Secure the cabinet to the floor with customer-supplied hardware.

For More Information

Refer to the Eaton Three-Phase Power Distribution Unit (PDU) 300 kVA Installation and Operation Manual for the following additional information:

- Installation instructions, including site preparation, planning for installation, wiring and safety information, and detailed illustrations of cabinets with dimensional and connection point drawings

Visit www.eaton.com/powerquality or contact an Eaton service representative for information on how to obtain copies of these manuals.

Getting Help

If help is needed with any of these instructions, please call the Eaton Corporation **Help Desk** at:

United States: **1-800-843-9433**
Canada: **1-800-461-9166 ext 260**
All other countries: **Call your local service representative**



Eaton® 300kVA Three-Phase Power Distribution Unit (PDU) Floor Mounting Bracket Installation Instructions

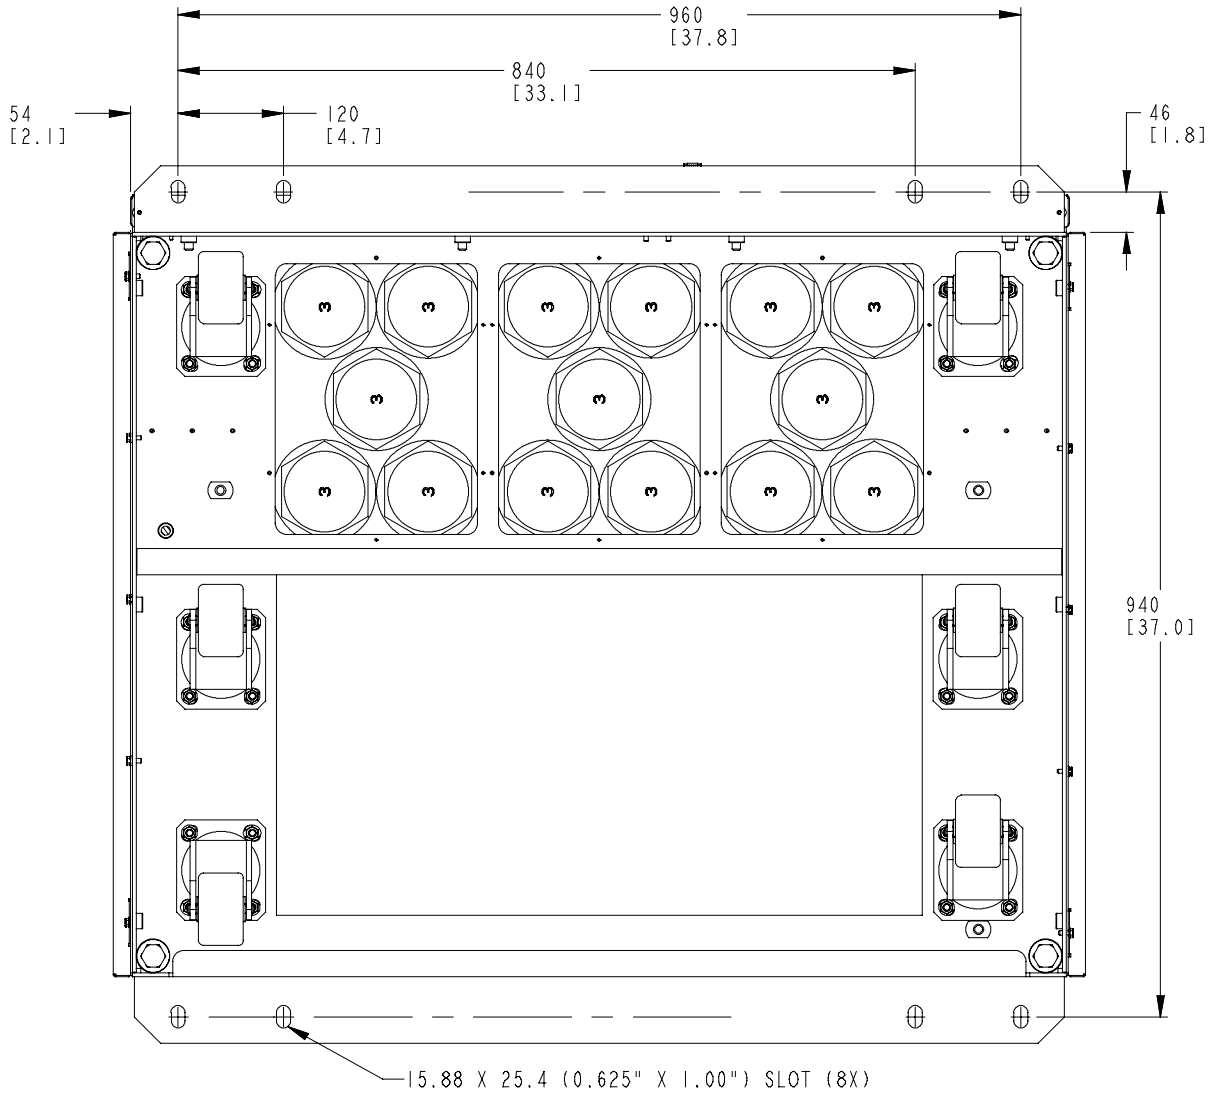


Figure 1. Floor Mounting Bracket Mounting Hole Locations

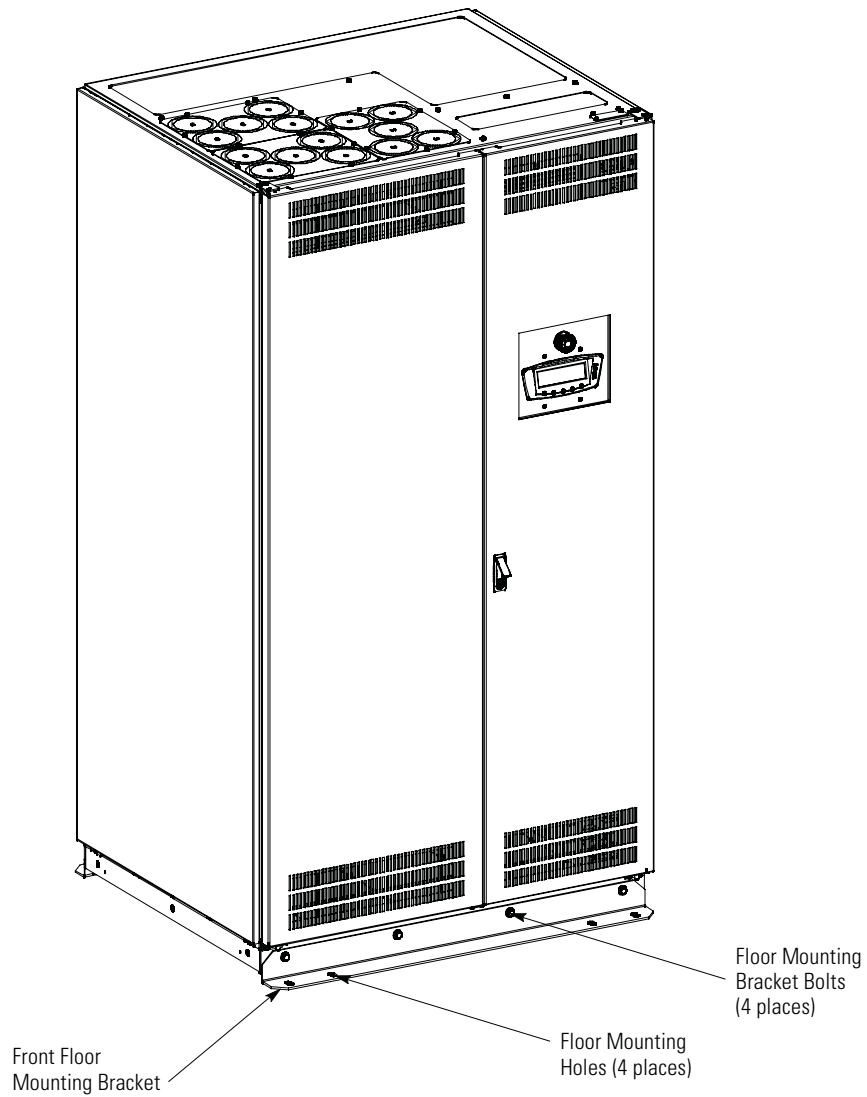


Figure 2. Front Floor Mounting Bracket Installation

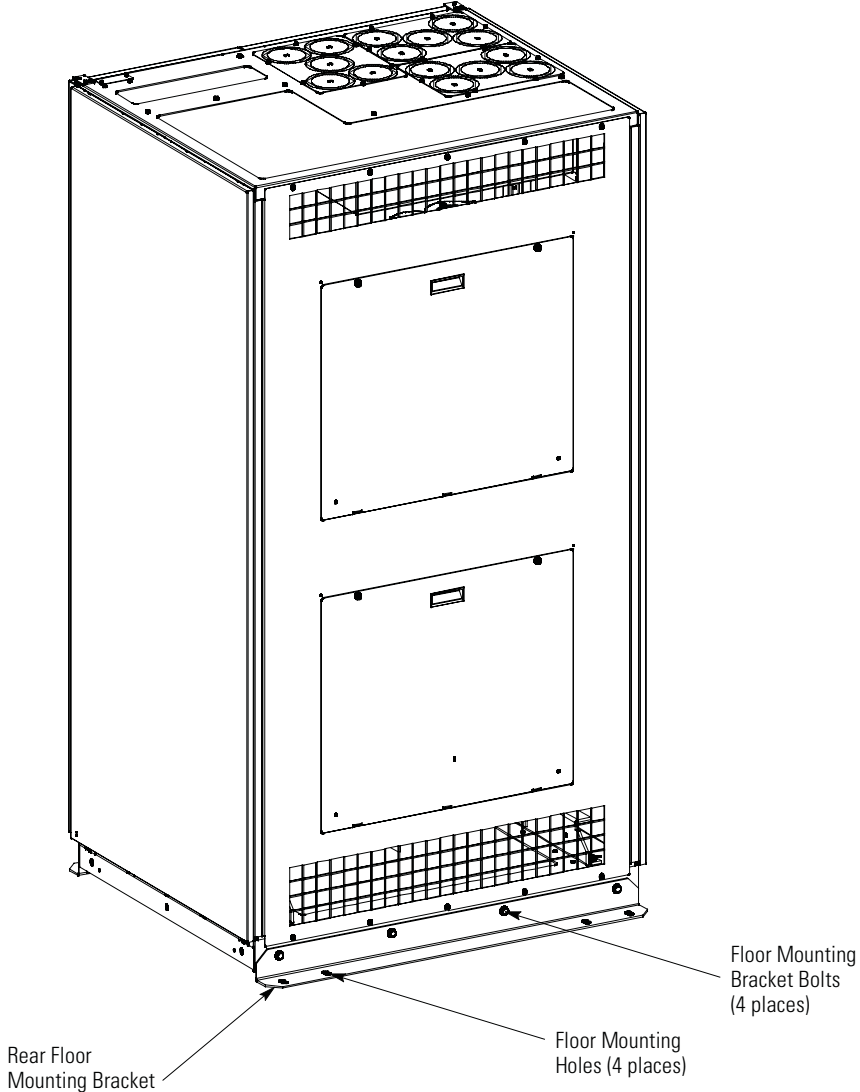


Figure 3. Rear Floor Mounting Bracket Installation

Eaton is a registered trademark of Eaton Corporation or its subsidiaries and affiliates. All other trademarks are property of their respective companies.

©Copyright 2012 Eaton Corporation, Raleigh, NC, USA. All rights reserved. No part of this document may be reproduced in any way without the express written approval of Eaton Corporation.

