




**INSTRUCTIONS FOR
ASSEMBLING COLLAR STYLE
NO. 624B100G21 TO
CIRCUIT BREAKER**

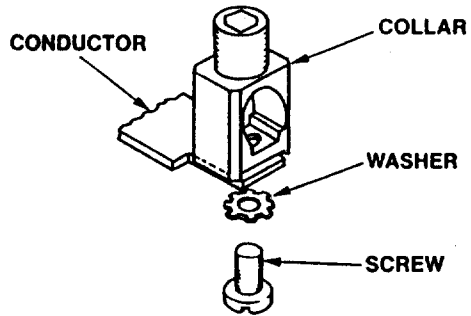

Assemble collar on top of conductor as shown. Tighten securely with screw and washer to 20 lb. in.

Wire Range: 6 to 3/0 Cu-Al.

Cutler-Hammer


I.S. 15527A

Style No. 69C0711H02

Printed in U.S.A.



**INSTRUCTIONS FOR
ASSEMBLING COLLAR STYLE
NO. 624B100G21 TO
CIRCUIT BREAKER**

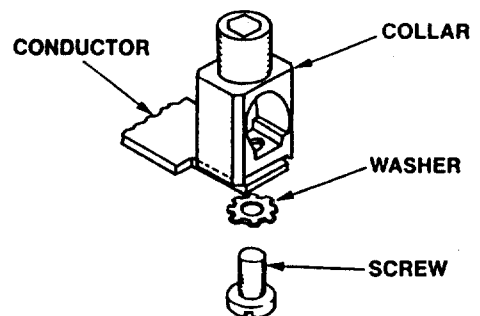

Assemble collar on top of conductor as shown. Tighten securely with screw and washer to 20 lb. in.

Wire Range: 6 to 3/0 Cu-Al.

Cutler-Hammer


I.S. 15527A

Style No. 69C0711H02

Printed in U.S.A.



**INSTRUCTIONS FOR
ASSEMBLING COLLAR STYLE
NO. 624B100G21 TO
CIRCUIT BREAKER**

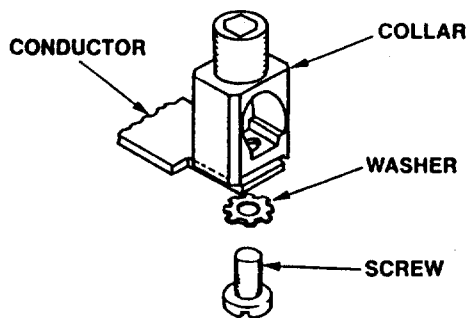

Assemble collar on top of conductor as shown. Tighten securely with screw and washer to 20 lb. in.

Wire Range: 6 to 3/0 Cu-Al.

Cutler-Hammer


I.S. 15527A

Style No. 69C0711H02

Printed in U.S.A.



**INSTRUCTIONS FOR
ASSEMBLING COLLAR STYLE
NO. 624B100G21 TO
CIRCUIT BREAKER**

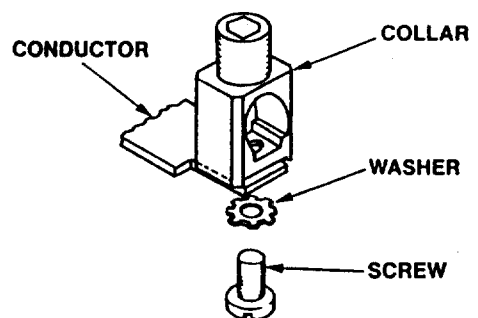

Assemble collar on top of conductor as shown. Tighten securely with screw and washer to 20 lb. in.

Wire Range: 6 to 3/0 Cu-Al.

Cutler-Hammer

I.S. 15527A

Style No. 69C0711H02

Printed in U.S.A.

