

CLOGGING INDICATOR


Series OE (visual-electrical, block execution) explosion-proof

Sheet No. 1629 F

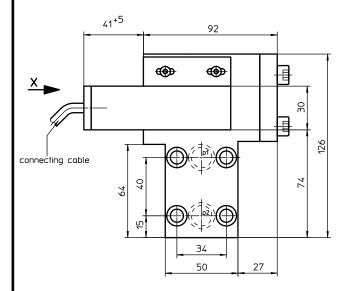

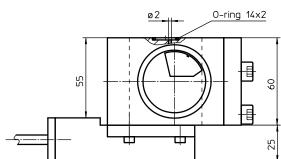

view X

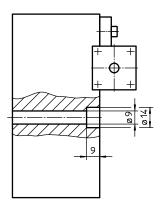

1. Type index: (ordering example)

OE. 1,2. B. -. P. VA. Ex 1 | 2 | 3 | 4 | 5 | 6 | 7 |

1 series:

= clogging indicator, visual-electrical with 1 contact maker OE with 70% switching pressure difference

2 indicator-pressure difference: Δp-nominal

= 0,8 bar = 1,2 bar 1,2 = 2,5 bar 2,5 4,5 = 4,5 bar

connection:

В = block execution with flange connection

connection size:

= standard

sealing material:

= Nitile (NBR) = Viton (FPM)

material:

VA = stainless steel

execution:

= explosion-proof

2. Technical data:

permissible operating pressure: 63 bar permissible fluid temperature:

Nitrile (NBR) -25°C to +80°C Viton (FPM) -10°C to +80°C permissible ambient temperature: -40°C to +60°C permissible pressure difference: $p_1 - p_2 \le 16 \text{ bar}$ indicator-pressure difference Δp : 0,8; 1,2; 2,5; 4,5 bar

The electrical signal takes place at 70% of the switching pressure difference.

3. Electrical data switching contact:

reed contact - normally open 200V DC contact design:

max. switching voltage:

250V AC peak - peak

max. switching current: 1 A max. breaking capacity: 30 Watt

type of protection:

 $\langle \mathsf{Ex}
angle$ II 2 GD Ex mb II T6 KEMA 00ATEX 1112 X


IP 65

certificated operating temperature range:

-40°C to +60°C connecting cable: HO5RN 2x 0,75 mm²

length connecting cable: max. 5 m

 4. Symbol:



1+2 normally open

Dimensions: mm

Designs and performance values are subject to change.

Powering Business Worldwide

EDV 05/19

Friedensstrasse 41, 68804 Altlussheim, Germany

+49 - (0)6205 - 2094-0 phone e-mail filtration@eaton.com +49 - (0)6205 - 2094-40 fax url www.eaton.com/filtration

5. Functioning:

The clogging indicator OE is a combined visual and electrical pressure difference indicator.

This type of pressure difference indicator can be mounted on all pressure filters with operating pressure \leq 63 bar, if the corresponding measuring ports on the filter housing are available.

With contamination of the filter element the difference between the supply pressure and the output pressure of the filter is increasing. Depending on this pressure difference but independent of the operating pressure, visual and electrical signals are released.

The visual control signal is indicated by a blue-red scale which is connected to the magnetic measuring piston.

In the range of low pressure differences - depending on the gauge length of the measuring piston - the blue range of the scale appears first.

The indicated switching pressure difference is reached when the dividing line between the red and the blue range of the scale points to the marking on the display window.

6. Operating instruction:

- Connection

Upon connecting the indicator to the filter make sure that the display window visual indicator shows upwards.

Note: Consider data and connecting conditions mentioned in items 2 to 4.

7. Maintenance:

The device is maintenance-free. However, make sure that no solvents get in touch with the display window visual indicator nor with the piston-spring-system of the clogging indicator.