

## NEMA SIZE "0" NON-REVERSING STARTER. WIRING DIAGRAM

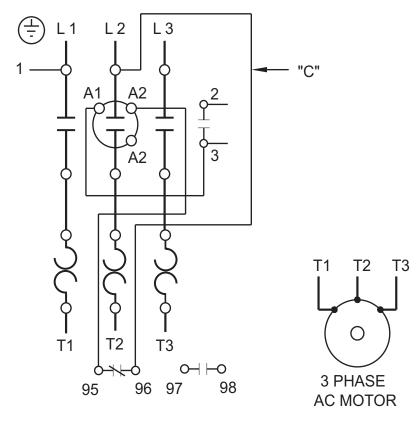


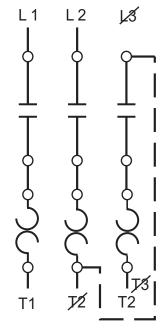

FIELD CONVERSION TO 1 PHASE - ADD DOTTED CONNECTION.


#### REMOTE PILOT DEVICES
 
#### 2 WIRE CONTROL




NOT FOR USE WITH AUTO RESET OL RELAYS.

3 WIRE CONTROL

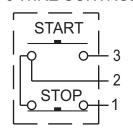

WHEN MORE THAN ONE PUSHBUTTON STATION IS USED OMIT CONNECTOR "A" AND CONNECT PER SKETCH BELOW.

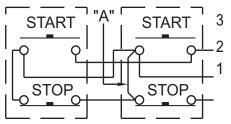

# 1 PHASE O AC MOTOR

### SEPARATE CONTROL

REMOVE WIRE "C" WHEN IT IS SUPPLIED. CONNECT SEPARATE CONTROL LINES TO THE NO.1 TERMINAL ON THE REMOTE PILOT DEVICE AND TERMINAL 96 ON THE OVERLOAD RELAY.

Pub. 51607 (284776)

Printed in U.S.A.

Rev 03 (FH11)