

OPTC6 CANopen Option Board for 9000X Drive

User Manual

Effective March 2011
Supersedes November 2003



EATON

Powering Business Worldwide

Disclaimer of Warranties and Limitation of Liability

The information, recommendations, descriptions, and safety notations in this document are based on Eaton Electrical Inc. and/or Eaton Corporation's ("Eaton") experience and judgment, and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted.

Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES. In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations, and descriptions contained herein.

The information contained in this manual is subject to change without notice.

Support Services

The goal of Eaton is to ensure your greatest possible satisfaction with the operation of our products. We are dedicated to providing fast, friendly, and accurate assistance. That is why we offer you so many ways to get the support you need. Whether it's by phone, fax, or e-mail, you can access Eaton's support information 24 hours a day, seven days a week. Our wide range of services is listed below.

You should contact your local distributor for product pricing, availability, ordering, expediting, and repairs.

Web Site

Use the Eaton Web site to find product information. You can also find information on local distributors or Eaton's sales offices.

Web Site Address

www.eaton.com/electrical

EatonCare Customer Support Center

Call the EatonCare Support Center if you need assistance with placing an order, stock availability or proof of shipment, expediting an existing order, emergency shipments, product price information, returns other than warranty returns, and information on local distributors or sales offices.

Voice: 877-ETN-CARE (877-386-2273) (8:00 a.m.–6:00 p.m. Eastern Time U.S. [UTC –5])

FAX: 800-752-8602

After-Hours Emergency: 800-543-7038

(6:00 p.m.–8:00 a.m. Eastern Time U.S. [UTC –5])

If you are in the U.S. or Canada, and have OI or PLC questions, you can take advantage of our toll-free line for technical assistance with hardware and software product selection, system design and installation, and system debugging and diagnostics. Technical support engineers are available for calls during regular business hours.

Drives Technical Resource Center

Voice: 800-322-4986 or +1 828-651-0984 (8:00 a.m.–5:00 p.m. Central Time U.S. [UTC –6])

Fax: +1 920-262-6070

e-mail: TRCDrives@Eaton.com

For Customers in Europe, Contact:

Eaton Industries GmbH

Electrical Sector

After Sales Service

Hein-Moeller-Str. 7-11

D-53115 Bonn

Phone: +49 (0) 228 6 02-3640

Fax: +49 (0) 228 6 02-61400

Hotline: +49 (0) 180 5 223822

e-mail: AfterSalesEGBonn@Eaton.com

www.moeller.net/aftersales

Table of Contents

SAFETY

Definitions and Symbols	vi
Hazardous High Voltage	vi
Warnings and Cautions	vi

GENERAL INFORMATION

General	1
---------------	---

OPTC6 CANOPEN OPTION BOARD TECHNICAL DATA

General	2
CANopen Cable	2

OPTC6 CANOPEN DESCRIPTION

CANopen	3
---------------	---

OPTC6 CANOPEN OPTION BOARD LAYOUT AND CONNECTIONS

OPTC6 CANopen Option Board	4
Bus Terminal Resistors	4
LED Indications	5
Connection of CANopen Bus Cable	6
Grounding by Clamping the Cable to the Converter Frame	6
Grounding the Bus Cable Shield Directly to the Drive Frame Using an RC-Filter	6
Grounding the Bus Cable Shield Directly to the Frequency Converter Frame Using Jumper X1	7
Grounding the Bus Cable Shield Directly to the Frequency Converter Frame Using an RC-Filter	9

INSTALLATION OF THE OPTC6 CANOPEN OPTION BOARD

Board Information Sticker	12
---------------------------------	----

COMMISSIONING

Expander Board Menu (M6)	13
OPTC6 CANopen Parameters	13
CANopen Status	14

OPTC6 CANOPEN 9000X DRIVE INTERFACE

CANopen Message Frame	15
COB-ID	15
Predefined Connection Sets	16
Network Management (NMT)	16
Process Data (PDO)	17
Transmission Types	18
Controlling the Drive via PDO Messages with Drive Profile	19
State Machine	21
Using Manufacturer-Specific PDOs with Bypass Modes	22
Controlling the 9000X Drive	23
Drive Monitoring	24
Anyparameter Service	25
Service Data (SDO)	26
Description of the Object Dictionary	28

OPTC6 CANopen Option Board for 9000X Drive

- NODE GUARDING PROTOCOL**
- Node Guarding Protocol **40**
- ELECTRONIC DATA SHEET, EDS-FILE**
- Electronic Data Sheet, EDS-File **40**
- APPENDICES**
- Appendices **41**

List of Figures

- OPTC6 CANopen Option Board **4**
- LED Indications on the CANopen Board **5**
- Grounding the Bus Cable Shield Directly to the Drive
- Frame Using an RC-Filter **6**
- CANopen Cable **6**
- Jumper X1 Positions **7**
- Strip the CANopen Cable **7**
- Terminal Block **8**
- Data Cable **8**
- CANopen Cable Connection **8**
- Data Cables **8**
- CANopen Cables Fixed to Frame **8**
- Grounding with RC Filter **9**
- Jumper X1 Positions **9**
- Information Sticker **12**
- Changing the OPTC6 CANopen Option Board Parameters **13**
- DeviceNet Status **14**
- Function of the Internal State Machine **17**
- State Machine Drive Sequence **21**
- Reading Anyparameter **25**
- Writing Anyparameter **25**
- Basic Device Control and Device Data Interface **41**

List of Tables

CANopen Technical Data	2
Bus Length for CANopen Networks	2
CANopen Board Status LED (A) Green	5
Fieldbus Status LED (M) Green	5
CANopen Parameters	13
CANopen Status Indications	14
Drive Profile—Mode	16
Bypass—Mode	16
PDO Types	17
Description of Transmission Types	18
Controlword Bits	23
Controlword Bits	23
nx_Speed_Reference	23
Processdata_in1 ... Processdata_in6	23
nx_Speed_Reference	24
nx_Status_Word, Used Only with Bypass 2 Mode	24
Statusword Bit Descriptions	24
Processdata_Out1 ... Processdata_Out6	24
Object Dictionary	26
Description of the Object Dictionary	28
OPTC6 CANopen Option Board has the Following Items for	
Guarding Purposes	40
Process Data	43
Basic, Standard, Local/Remote, Multi-Step Applications	43
Multipurpose Control Applications	43
PID Control, and Pump and Fan Control Applications	43

Safety

Definitions and Symbols

 **WARNING**

This symbol indicates high voltage. It calls your attention to items or operations that could be dangerous to you and other persons operating this equipment. Read the message and follow the instructions carefully.



This symbol is the “Safety Alert Symbol.” It occurs with either of two signal words: CAUTION or WARNING, as described below.

 **WARNING**

Indicates a potentially hazardous situation that, if not avoided, can result in serious injury or death.

 **CAUTION**

Indicates a potentially hazardous situation that, if not avoided, can result in minor to moderate injury, or serious damage to the product. The situation described in the CAUTION may, if not avoided, lead to serious results. Important safety measures are described in CAUTION (as well as WARNING).

Hazardous High Voltage

 **WARNING**

Motor control equipment and electronic controllers are connected to hazardous line voltages. When servicing drives and electronic controllers, there may be exposed components with housings or protrusions at or above line potential. Extreme care should be taken to protect against shock.

Stand on an insulating pad and make it a habit to use only one hand when checking components. Always work with another person in case an emergency occurs. Disconnect power before checking controllers or performing maintenance. Be sure equipment is properly grounded. Wear safety glasses whenever working on electronic controllers or rotating machinery.

Warnings and Cautions

 **WARNING**

Internal components and circuit boards are at high potential when the frequency converter is connected to the power source. This voltage is extremely dangerous and may cause death or severe injury if you come into contact with it.

 **WARNING**

Make sure that the frequency converter is switched off before an option or fieldbus board is changed or added!

General Information

General

Eaton 9000X drives can be connected to the CANopen system using a fieldbus board. The drive can then be controlled, monitored, and programmed from the Host system.

The CANopen fieldbus board must be installed in slot E on the control board of the frequency converter. See **Page 10** for further instructions.



WARNING

Internal components and circuit boards are at high potential when the frequency converter is connected to the power source. This voltage is extremely dangerous and may cause death or severe injury if you come into contact with it.

Note: When experiencing problems with fieldbus functionalities, please contact www.eaton.com.

OPTC6 CANopen Option Board Technical Data

General

CANopen Technical Data

Description	Specification	
CANopen connections	Interface	Open style connector (pluggable connector, 5.08 mm)
	Data transfer method	CAN (ISO 11898)
	Transfer cable	Two-wire twisted shielded cable
	Electrical isolation	500 Vdc
Communications	CANopen	CiA DS-301
		CiA DSP-402
	Baud rate	10 kBaud
		20 kBaud
		50 kBaud
		100 kBaud
		125 kBaud
		250 kBaud
500 kBaud		
1000 kBaud		
Addresses	1–127	
Environment	Ambient operating temperature	–10°C to +55°C
	Storing temperature	–40°C to +60°C
	Humidity	<95%, no condensation allowed
	Altitude	Max. 1000m
	Vibration	0.5G at 9–200 Hz
Safety	Fulfills EN50178 standard	

CANopen Cable

According to the ISO 11898 standard, cables to be chosen for CANbus lines should have a nominal impedance of 120 ohms, and a specific line delay of nominal 5 ns/m. Line termination has to be provided through termination resistors of 120 ohms located at both ends of the line. The length-related resistance should have 70 milliohms/meter. All these mentioned AC and DC parameters are suitable for a 1 Mbit/s transmission rate.

The table below shows practical bus length for CANopen networks with less than 64 nodes.

Bus Length for CANopen Networks

Baud Rate (Kbit/s)	Maximum Bus Length (m)	Bit Time (mS)
1000	30	1
800	50	1.25
500	100	2
250	250	4
125	500	8
50	1000	20
20	2500	50

OPTC6 CANopen Description

CANopen

CANopen is a networking system based on the serial bus Controller Area Network (CAN). The CANopen Communication Profile (CiA DS-301) supports both direct access to device parameters and time-critical process data communication. CANopen device profiles (CiA DS-40x) define standards for basic device functionality, while providing ample scope for additional vendor-specific device features. CANopen leashes the full power of CAN by allowing direct peer-to-peer data exchange between nodes in an organized and, if necessary, deterministic manner. The network management functions specified in CANopen simplify project design, implementation, and diagnosis by providing standard mechanisms for network startup and error management.

CANopen supports both cyclic and event-driven communication. This makes it possible to reduce the bus load to a minimum, but still maintain extremely short reaction times. High communication performance can be achieved at relatively low baud rates, thus reducing EMC problems and minimizing cable costs.

CANopen is the ideal networking system for all types of automated machinery. One of the distinguishing features of CANopen is its support for data exchange at the supervisory control level, as well as accommodating the integration of very small sensors and actuators on the same physical network. This avoids the unnecessary expense of gateways linking sensor/actuator bus systems with higher communication networks and makes CANopen particularly attractive to original equipment manufacturers.

The Device Profile Drives and Motion Control (CiA DSP-402) document represents the standardized CANopen Device Profile for digital-controlled motion products like servo controllers, frequency converters, or stepper motors. All of the above-mentioned devices use communication techniques that conform to those described in the CANopen Application Layer and Communication Profile. The starting and stopping of the drive and several mode-specific commands are executed by the state machine. The operation mode defines the behavior of the drive. The following modes are defined in this profile:

- Homing mode
- Profile Position mode
- Interpolated Position mode
- Profile Velocity mode
- Profile Torque mode
- Velocity mode

The OPTC6 CANopen Option Board supports the Velocity mode.


OPTC6 CANopen Option Board Layout and Connections

OPTC6 CANopen Board is connected to the fieldbus through a 5-pin pluggable bus connector.

The communication with the control board of the frequency converter takes place through the standard Eaton Interface Board Connector.

OPTC6 CANopen Option Board

OPTC6 CANopen Option Board

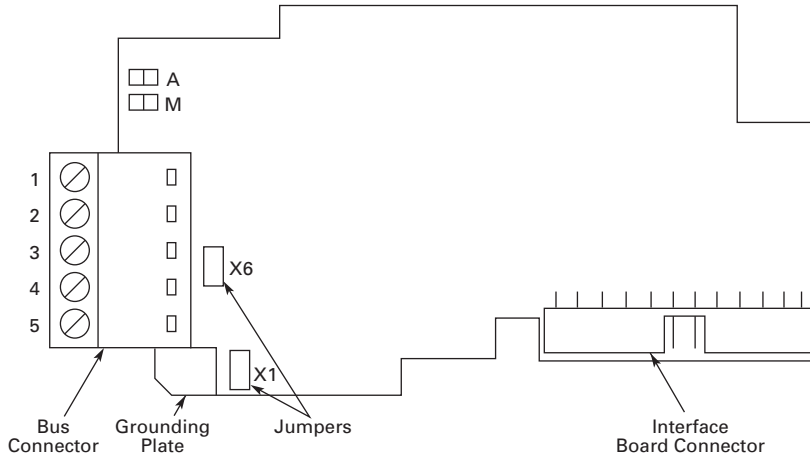

Signal	Connector	Description
CAN_GND	1	Ground / 0V / V-
CAN_L	2	CAN_L bus line (dominant low)
(CAN_SHLD)	3	Optional CAN shield
CAN_H	4	CAN_H bus line (dominant high)
(CAN_V+)	5	—

Bus Terminal Resistors

If Eaton's drive is the last device of the CANopen line, the bus termination must be set.


Use jumper X6 (ON position see figure above), or an external resistor (120 ohms) connected to terminals 2 and 4.



LED Indications

The CANopen Option Board includes two LED status indicators next to the connector: Fieldbus status (M) and CANopen(A). LED N is unused.

LED Indications on the CANopen Board

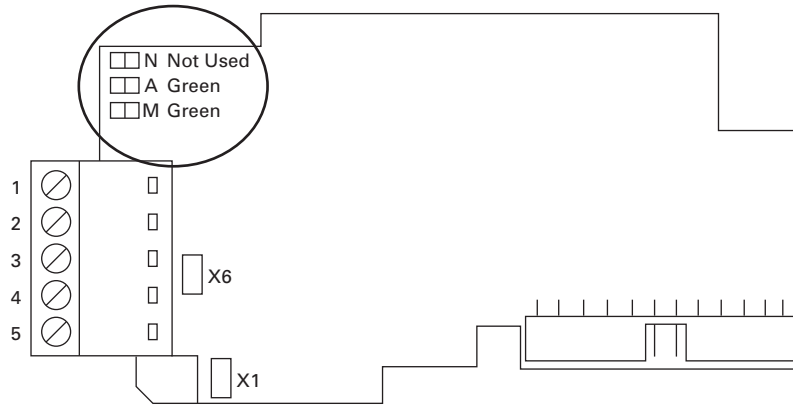

CANopen Board Status LED (A) Green

LED Description	Meaning
OFF	Option board not activated
ON	Option board in initialization state waiting for activation command from the frequency converter
Blinking fast (1 blink/s)	Option board is activated and in RUN state Option board is ready for external communication
Blinking slow (1 blink/5s)	Option board is activated and in FAULT state Internal fault of option board

Fieldbus Status LED (M) Green

LED Description	Meaning
OFF	Fieldbus module is waiting for parameters from the frequency converter. No external communication
ON	Fieldbus module is activated. Parameters received and module activated. Module is waiting for messages from the bus
Blinking fast (1 blink/s)	Module is activated and receiving messages from the bus
Blinking slow (1 blink/5s)	Module is in FAULT state. No messages from Master within the watchdog time. Bus broken, cable loose, or Master offline

OPTC6 CANopen Option Board Layout and Connections

Connection of CANopen Bus Cable

The bus cable shield can be grounded in three different ways:

1. Clamping the cable to the frequency converter frame.
2. To the frame of the frequency converter through an RC filter.
3. Directly to the converter frame.


Note: Normally, the option board has already been installed in slot E of the control board. It is not necessary to detach the whole board for the grounding of the bus cable shield. Just detach the terminal block.

Grounding by Clamping the Cable to the Converter Frame

This method of grounding is the most effective and is especially recommended when the distances between the devices are relatively short (see **Page 9**, Grounding the Bus Cable Shield). In this method of grounding, the position of jumper X1 is of no importance,

Grounding the Bus Cable Shield Directly to the Drive Frame Using an RC-Filter

This method of grounding is recommended when the distance between the devices exceeds 55 yds. (50m). When the distance between the devices is long, disturbances (e.g., voltage spikes) are more likely to appear. In this grounding method, the disturbances are filtered out. Even if the ground planes of A, B, and C are different (which is very typical in construction), there is no current between them because the points do not have a ground connection.

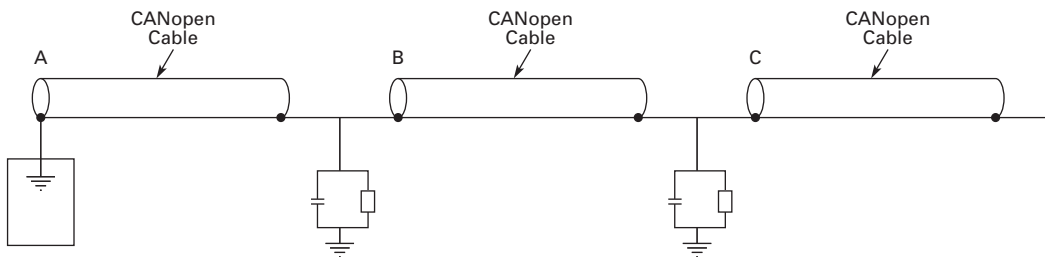

1. Strip about 5 cm of the CANopen cable in the same way as shown below, but cut off the grey cable shield. Remember to do this for both bus cables (except for the last device).
2. Leave no more than 1 cm of the data cable outside the terminal block and strip the data cables at about 0.5 cm to fit in the terminals. See **Page 7**.

Note: Do this for both bus cables.

3. Insert the data cables of both CANopen cables into terminals #2 and #4. See photo of “Terminal Block” on **Page 8**.
4. Strip the CANopen cable at such a distance from the terminal that you can attach it to the frame with the grounding clamp. See below.


CANopen Cable



Grounding the Bus Cable Shield Directly to the Frequency Converter Frame Using Jumper X1

1. Set jumper X1 in ON position:


Jumper X1 Positions

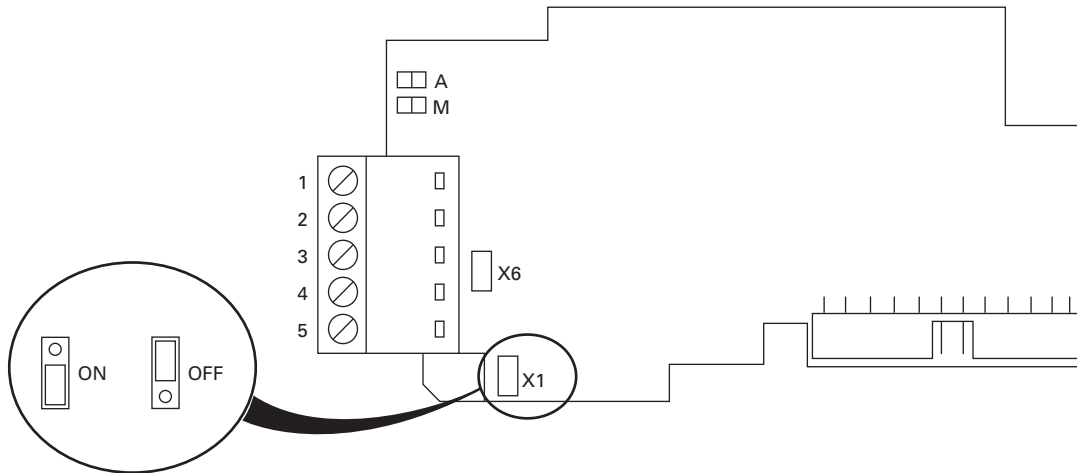

2. Strip about 5 cm of the CANopen cable as shown in the picture below.

Note: Do the same for both bus cables (except for the last device). However, because the grounding shall be done on one cable only, cut off the exposed part of the other grounding cable.

Strip the CANopen Cable

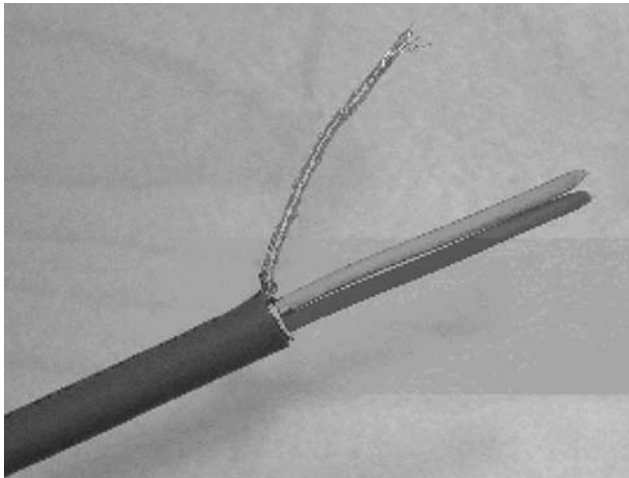


3. Leave no more than 1 cm of the red and green data cable outside the terminal block and strip the data cables at about 0.5 cm to fit in the terminals. See **Page 8**.

Note: Do this for both bus cables.


OPTC6 CANopen Option Board Layout and Connections

Terminal Block

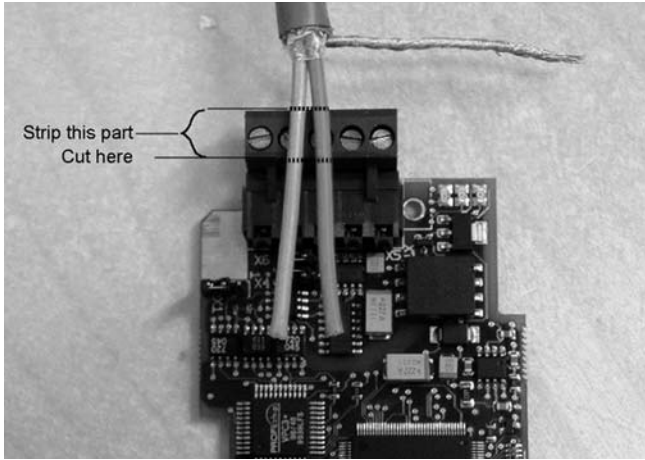


Eaton recommends that you use an Abico connector to connect the grounding cable into the grounding terminal (#3). Insert the data cables of both CANopen cables into terminals #2 (white) and #4 (brown).


CANopen Cable Connection

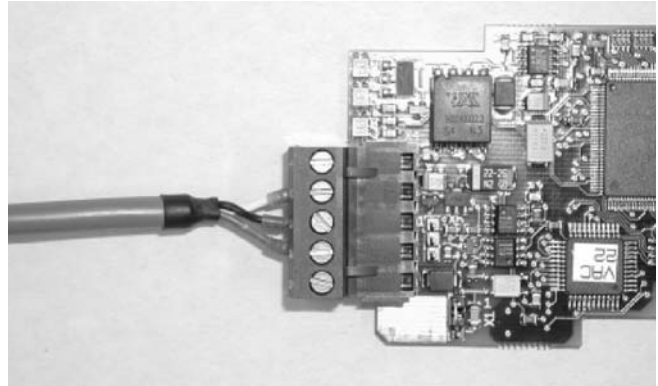

Data Cable

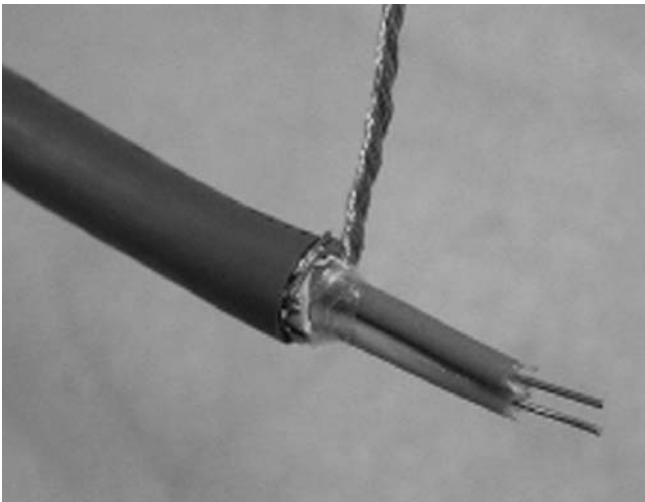


Data Cables

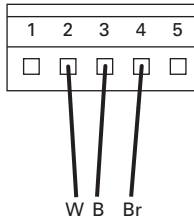

4. Place the CANopen board into slot E of the control board (see board installation on **Page 10**) and fix both the CANopen cables on the frame with the clamp.


CANopen Cables Fixed to Frame

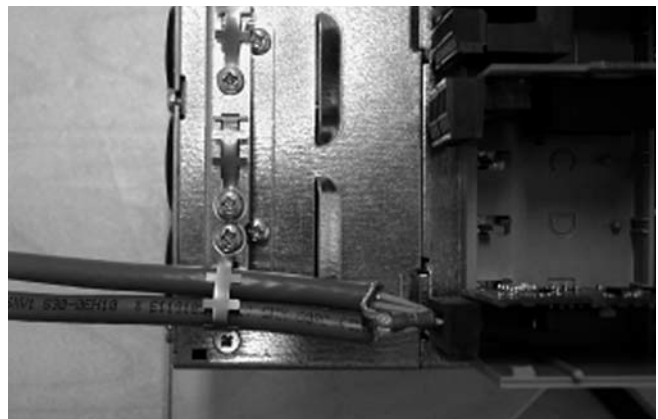

Grounding the Bus Cable Shield Directly to the Frequency Converter Frame Using an RC-Filter


Eaton recommends that you do the grounding in this manner when the distance between the devices exceeds 50 meters (55 yds). When the distance between the devices is long, disturbances (for example, voltage spikes) are more likely to appear. In this grounding method, the disturbances are filtered out. Even if the ground planes of A, B, and C are different (which is very typical, for example, in construction) there is no current between them because the points do not have a ground connection.

Grounding with RC Filter

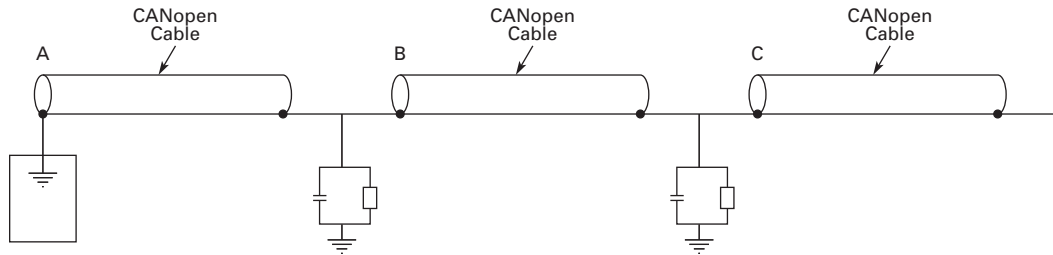

1. Set jumper X1 in the OFF position.

Jumper X1 Positions

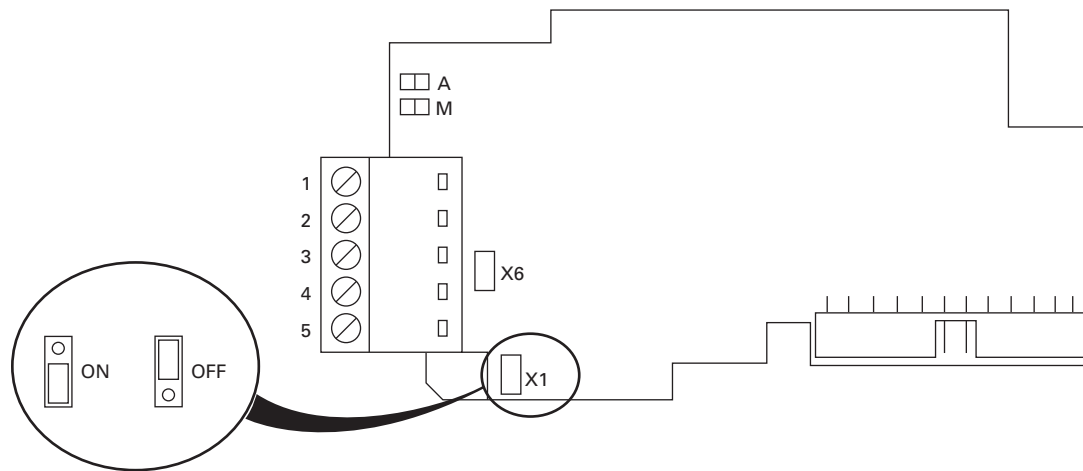

2. Carry out the grounding in the same way as advised on **Page 6**.

Installation of the OPTC6 CANopen Option Board

⚠ WARNING

NOTE: Make sure that the frequency converter is switched off before an option or fieldbus board is changed or added!

Step

1. Remove the cable cover.



Example



2. Open the cover of the control unit




3. Install CANopen Option Board in slot E on the control board of the frequency converter. Make sure that the grounding plate (see right) fits tightly in the clamp.

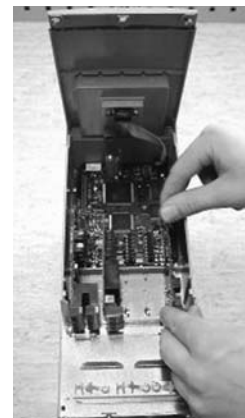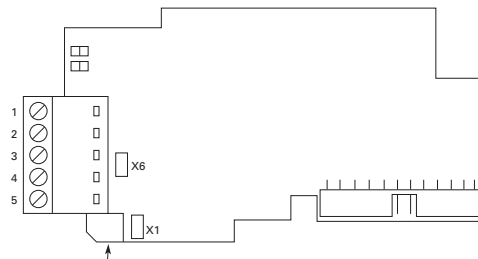

Step

Example

4. Make a sufficiently wide opening for your cable by cutting the grid as wide as necessary

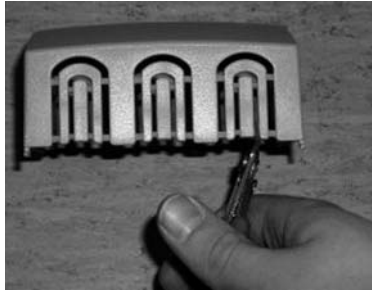

5. Close the cover of the control unit and the cable cover.



Installation of the OPTC6 CANopen Option Board


Board Information Sticker

The OPTC6 CANopen Option Board package delivered by the factory includes a sticker (shown below). Please mark the board type (1), the slot into which the board is mounted (2), and the mounting date (3) on the sticker. Finally, attach the sticker on your drive.

Information Sticker

Drive modified:

<input type="checkbox"/> Option board:	OPT.....	Date:.....
in slot:	A B C D E	
<input type="checkbox"/> IP54 upgrade/ Collar		Date:.....
<input type="checkbox"/> EMC level modified: H → T / T → H		Date:.....

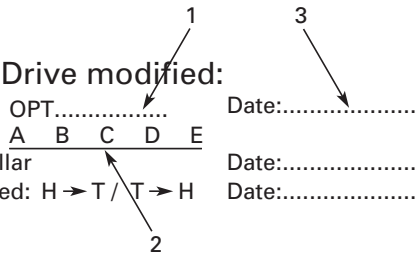

Commissioning

First read “Commissioning” in 9000X User’s Manual (Document MN04001004E; please visit <http://www.Eaton.com>).

Note: You must select Fieldbus as the active control place, if you wish to control the frequency converter through fieldbus. See Eaton’s User’s Manual.

The OPTC6 CANopen Board is commissioned with the control keypad by giving values to appropriate parameters in menu M7 (for locating the expander board menu, see Eaton’s User’s Manual, Chapter 7).

Expander Board Menu (M6)

The Expander Board Menu makes it possible for the user 1) to see what expander boards are connected to the control board and 2) to reach and edit the parameters associated with the expander board.


Enter the following menu level (G#) with the right Menu button. At this level, you can browse through slots A to E with the Browser buttons to see what expander boards are connected. On the lowermost line of the display, you also can see the number of parameter groups associated with the board.

If you press the Menu button right once, you will reach the parameter group level where there are two groups: Editable parameters and Monitored values. An additional press on the right Menu button takes you to either of these groups.

CANopen Parameters

To commission the CANopen board, enter the level P6.5.1.# from the parameters group (G6.5.1). Set desired values to all CANopen parameters.

Changing the OPTC6 CANopen Option Board Parameters

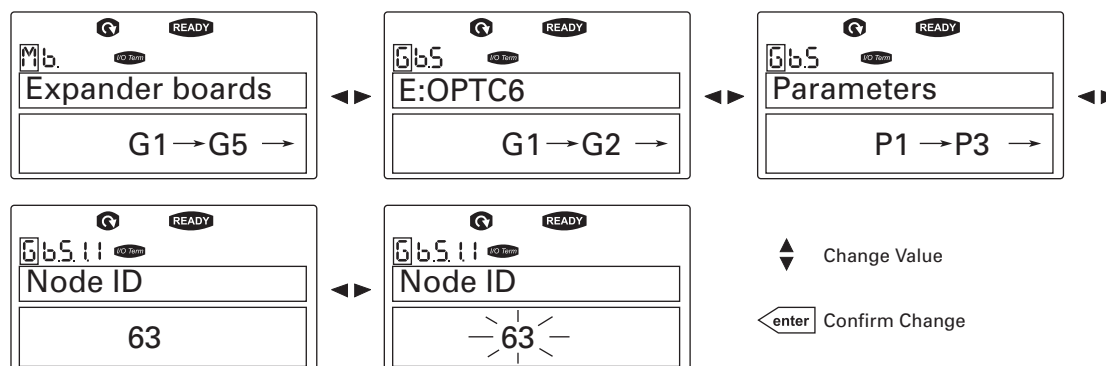

OPTC6 CANopen Parameters

Number	Name	Default	Range	Description
1	Node ID	1	1–127	
2	Baud rate	6	1–10 kBaud 2–20 kBaud 3–50 kBaud 4–100 kBaud 5–125 kBaud 6–250 kBaud 7–500 kBaud 8–1000 kBaud	Communication speed
3	Operate mode	1	1–Drive profile 2–Bypass 3–Bypass 2	Communication set selection 1 = xPDO1, xPDO6 2 = xPDO1, xPDO21, xPDO22 3 = xPDO1, xPDO21, xPDO22

Commissioning

Bypass mode can be used in customer-specific applications and in special applications, such as system interface.

Bypass 2 mode is used with standard applications, for example, Multicontrol application and All-in-One applications for SVX and SPX.

Bypass 2 mode is supported in the following system software versions:


- **SVX00031V020**
- **SPX00032V017**

The parameters of every device must be set before connecting to the bus, especially the parameters “NODE ID” and “BAUD RATE,” which must be the same as in the master configuration.

CANopen Status

To see the present status of the CANopen Fieldbus, enter the CANopen Status page from Monitor menu (G7.5.2). See picture and table below.

DeviceNet Status

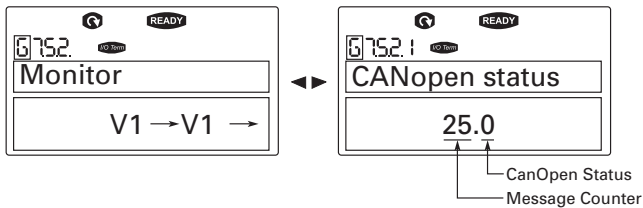

CANopen Status Indications

CANopen Status

0	INITIALIZING
4	STOPPED
5	OPERATIONAL
6	PRE_OPERATIONAL
7	RESET_APPLICATION
8	RESET_COMM
9	UNKNOWN

OPTC6 CANopen 9000X Drive Interface

CANopen communication objects transmitted via the CAN network are described by services and protocols. They are classified as follows:

- The real-time data transfer is performed by the Process Data Objects (PDOs) protocol
→ REAL-TIME CONTROL OF THE DRIVE
- Service Data Objects (SDO) protocols provide the read and write access to entries of a device object dictionary
→ CONFIGURATION OF THE DRIVE, READ/WRITE DRIVE PARAMETERS
- The Network Management (NMT) protocols provide services for network initialization, error control, and device status control
→ START/STOP CANopen COMMUNICATION

CANopen Message Frame

SOF	COB-ID	RTR	CTRL	Data Segment	CRC	ACK	EOF
1bit	11bit	1bit	5bit	0-8bytes	16bits	2bits	7bits

SOF Start of Frame

RTR Remote Transmission Request

CTRL Control Field (i.e., Data Length)

CRC Cyclic Redundancy Check

ACK Acknowledge

EOF End of Frame

COB-ID

The identification field of the CANopen-message is 11 bits.

ID-Bit	10	9	8	7	6	5	4	3	2	1	0
COB-ID	Function code					Module-ID					

The default identification field consists of a functional part and a module-ID part. The functional part determines the object priority. This kind of identification field allows communication between a master and 127 slaves. Broadcasting is indicated by a module-ID of zero. Function codes are determined with object dictionaries in device profiles.

Predefined Connection Sets

OPTC6 CANopen option board has two different communication parameter sets. These sets can be selected via Operate Mode parameter from panel. Both communication sets fulfills “drives and motor control” profile described in CiA DSP-402.

Drive Profile—Mode

Object	Function Code (Binary)	COB-ID	Communication Parameter at Index
NMT message	0000	0x0000	—
Sync message	0001	0x0080	0x1005
Time-stamp-message	0001	0x0100	—
PDO1, process data objects (tx)	0011	0x0180 +Node	0x1800
PDO1, process data objects (rx)	0100	0x0200 +Node	0x1400
PDO6, process data objects (tx)	0101	0x0280 +Node	0x1801
PDO6, process data objects (rx)	0110	0x0300 +Node	0x1401
SDO, service data objects (tx)	1011	0x0580 +Node	—
SDO, service data objects (rx)	1100	0x0600 +Node	—
Node guarding	1110	0x0700 +Node	(0x100E)

Bypass—Mode

Object	Function Code (Binary)	COB-ID	Communication Parameter at Index
NMT message	0000	0x0000	—
Sync message	0001	0x0080	0x1005
Time-stamp-message	0010	0x0100	—
PDO1, process data objects (tx)	0011	0x0180 +Node	0x1800
PDO1, process data objects (rx)	0100	0x0200 +Node	0x1400
PDO21, process data objects (tx)	0111	0x0380 +Node	0x1814
PDO21, process data objects (rx)	1000	0x0400 +Node	0x1414
PDO22, process data objects (tx)	1001	0x0480 +Node	0x1815
PDO22, process data objects (rx)	1010	0x0500 +Node	0x1415
SDO, service data objects (tx)	1011	0x0580 +Node	—
SDO, service data objects (rx)	1100	0x0600 +Node	—
Node guarding	1110	0x0700 +Node	(0x100E)

Network Management (NMT)

The CANopen network management is node-oriented and follows a master/slave structure. It requires one device in the network, which fulfills the function of the NMT master. The other nodes are NMT slaves.

The CANopen NMT slave devices implement a state machine, see illustration on **Page 17**, after power on a node initializes and transits to the “Pre-operational State.” In this state, communication across SDO channels is possible for node configuration, but not yet across PDOs. With the NMT message “Start Remote Node,” a selected node or any nodes on the network can be set into the “operational state.” In this state, also the exchange of data by means of PDOs is possible. With enabling the operation of all nodes of a network at the same time, a coordinated operation of the communicating system is secured (DS301).


To set the OPTC6 CANopen Option Board to the “operational state” the following message must be sent:

Message: Start_Remote_Node

Master to slave (1)

Header		Data								
ID	RTR	Len	1 = CS	2 = Node ID	3	4	5	6	7	8
0000	0	2	01	01						

Function of the Internal State Machine

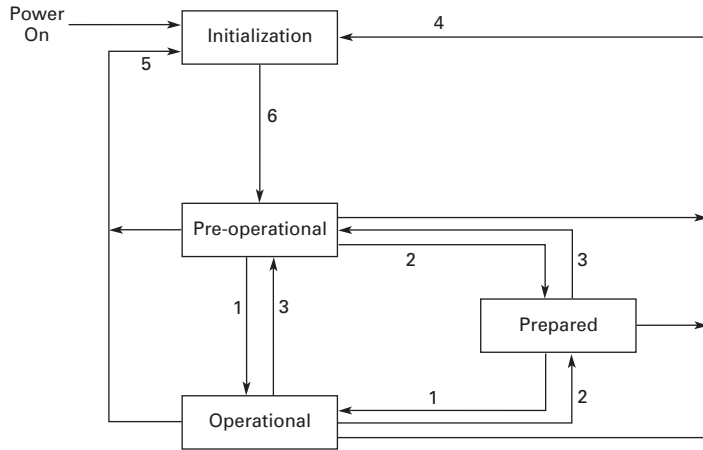

Change	Message/Event	Command Specifier (CS)
1	Start remote node	CS = 1
2	Stop remote node	CS = 2
3	Enter pre-operational state	CS = 128
4	Reset node	CS = 129
5	Reset communication	CS = 130
6	Initialization finished	Automatic

Process Data (PDO)

The real-time data transfer is performed by means of “process data objects” (PDO). The transfer of PDOs is performed with no protocol overhead. Process data is time-critical data used for control of the drive and for monitor status of the drive. Transmit PDOs support several transmission modes, which are cyclic, acyclic, synchronous, asynchronous, and RTR only mode. Most PDOs support also event timer for transmitting PDOs. TPDO1 is an exception that is defined for asynchronous only operation. Receive PDOs support only asynchronous transmission mode (event driven). Eaton CANopen Option Board uses eight types of PDOs as follows:

PDO Types

PDO Type	Mapped Data	Mapped Data	Mapped Data	Mapped Data	Cyclic	Acyclic	Synchronous	Asynchronous (Default)	RTR	Event
									Only	Mode
TPDO1	statusword	—	—	—				x		
TPDO6	statusword	vl_control_effort	—	—	X	X	X	x	X	X
TPDO21	nx_status_word	nx_actual_speed	process_data_out1	process_data_out2	X	X	X	x	X	X
TPDO22	process_data_out3	process_data_out4	process_data_out5	process_data_out6	X	X	X	x	X	X
RPDO1	controlword	—	—	—				x		
RPDO6	controlword	vl_target_velocity	—	—				x		
RPDO21	nx_control_word	nx_speed_reference	process_data_in1	process_data_in2				x		
RPDO22	process_data_in3	process_data_in4	process_data_in5	process_data_in6				x		

Note: Manufacturer-specific PDOs (TPDO21/RPDO21/TPDO22/RPDO22) consist of application-specific process data. See appendix for contents of these process datas in different applications. See **Page 22** (Using Manufacturer-Specific PDOs with Bypass Modes) or a specific application manual.

Note: All Tx objects are event-driven by default. (Message is sent out if one or several values within the message change.)

Transmission Types

Description of Transmission Types

Transmission Type	PDO Transmission				
	Cyclic	Acyclic	Synchronous	Asynchronous	RTR Only
0		X	X		
1–240	X		X		
241–251			—Reserved—		
252			X		X
253				X	X
254				X	
255				X	

Synchronous (transmission types 0–240 and 252) means that the transmission of the PDO shall be related to the SYNC object. Preferably, the devices use the SYNC as a trigger to output or to actuate based on the previous synchronous Receive PDO, respectively, to update the data transmitted at the following synchronous Transmit PDO. Asynchronous means that the transmission of the PDO is not related to the SYNC object. A zero transmission type means that the message shall be transmitted synchronously with the SYNC object, but not periodically. A value between 1 and 240 means that the PDO is transferred synchronously and cyclically. The transmission type indicating the number of SYNC is necessary to trigger PDO transmissions. Receive PDOs are always triggered by the following SYNC upon reception of data independent of the transmission types 0–240.

The transmission types 252 and 253 mean that the PDO is only transmitted on remote transmission request. At transmission type 252, the data is updated (but not sent) immediately after reception of the SYNC object. At transmission type 253, the data is updated at the reception of the remote transmission request (hardware and software restrictions may apply). These values are only possible for TPDOs. For TPDOs, transmission type 254 means that the application event is manufacturer-specific (manufacturer-specific part of the Object Dictionary); transmission type 255 means that the application event is defined in the device profile. RPDOs with that type trigger the update of the mapped data with the reception. PDOs sub-index 3h contains the inhibit time. This time is a minimum interval for PDO transmission. The value is defined as multiple of 100 ms. It is not allowed to change the value while the PDO exists (bit 31 of sub-index 1 is 0).

In mode 254/255, an event time can be additionally used for TPDO. If an event timer exists for a TPDO (value not equal to 0), the elapsed timer is considered to be an event. The event timer elapses as a multiple of 1 ms of the entry in sub-index 5h of the TPDO. This event will cause the transmission of this TPDO in addition to otherwise defined events. The occurrence of the events set the timer. Independent of the transmission type, the RPDO event timer is used to recognize the expiration of the RPDO.

Controlling the Drive via PDO Messages with Drive Profile

PD01 Rx

Master to slave (1)

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x201	0	2	controlword		—	—	—	—	—	—

PD01 Tx

Slave (1) to master

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x181	0	2	statusword		—	—	—	—	—	—

PD06 Rx

Master to slave (1)

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x301	0	4	controlword		vl_target_velocity		—	—	—	—

PD06 Tx

Slave (1) to master

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x281	0	4	statusword		vl_control_effort		—	—	—	—

The state of the drive can be controlled by the controlword. The state of the drive is shown in the statusword.

The state machine describes the device status and the possible control sequency of the drive.

Controlword		Statusword	
Bit	Name	Bit	Name
0	Switch ON	0	Ready to Switch ON
1	Disable Voltage	1	Switched ON
2	Quick Stop	2	Operation Enable
3	Enable Operation	3	Fault
4	Operation Mode Specific	4	Voltage Disable
5	Operation Mode Specific	5	Quick Stop
6	Operation Mode Specific	6	Swich ON Disable
7	Reset Fault	7	Warning
8	Halt	8	Manufacturer Specific
9	Reserved	9	Remote
10	Reserved	10	Target Reached
11	Manufacturer Specific	11	Internal Limit Active
12	Manufacturer Specific	12	Operation Mode Specific
13	Manufacturer Specific	13	Operation Mode Specific
14	Manufacturer Specific	14	Manufacturer Specific
15	Manufacturer Specific	15	Manufacturer Specific

OPTC6 CANopen 9000X Drive Interface

By using a controlword, the drive can be controlled as follows:

Command	Controlword	Description
Prepare READY	0006hex	Set state machine to "Ready To Switch ON" state
Prepare RUN	0007hex	Set state machine to "Switched ON" state
RUN	000Fhex	Start motor if "Fieldbus" is the active control place
STOP	0007hex	Stop motor
FAULT RESET (step 1)	Bit 7 = 0	Rising edge to bit 7
FAULT RESET (step 2)	Bit 7 = 1	

vl_target_velocity

- The vl_target_velocity is the required speed reference to the frequency converter
- The unit is rpm

vl_control_effort

- The vl_control_effort is the actual speed of the motor
- The unit is rpm


State Machine

The state machine describes the device status and the possible control sequence of the drive. The state transitions can be generated by using "controlword." The "statusword" parameter indicates the current status of the state machine. The modes **INIT**, **STOP**, **RUN**, and **FAULT** correspond to the actual mode of the drive.

SW = Statusword

CW = Controlword word

State Machine Drive Sequence

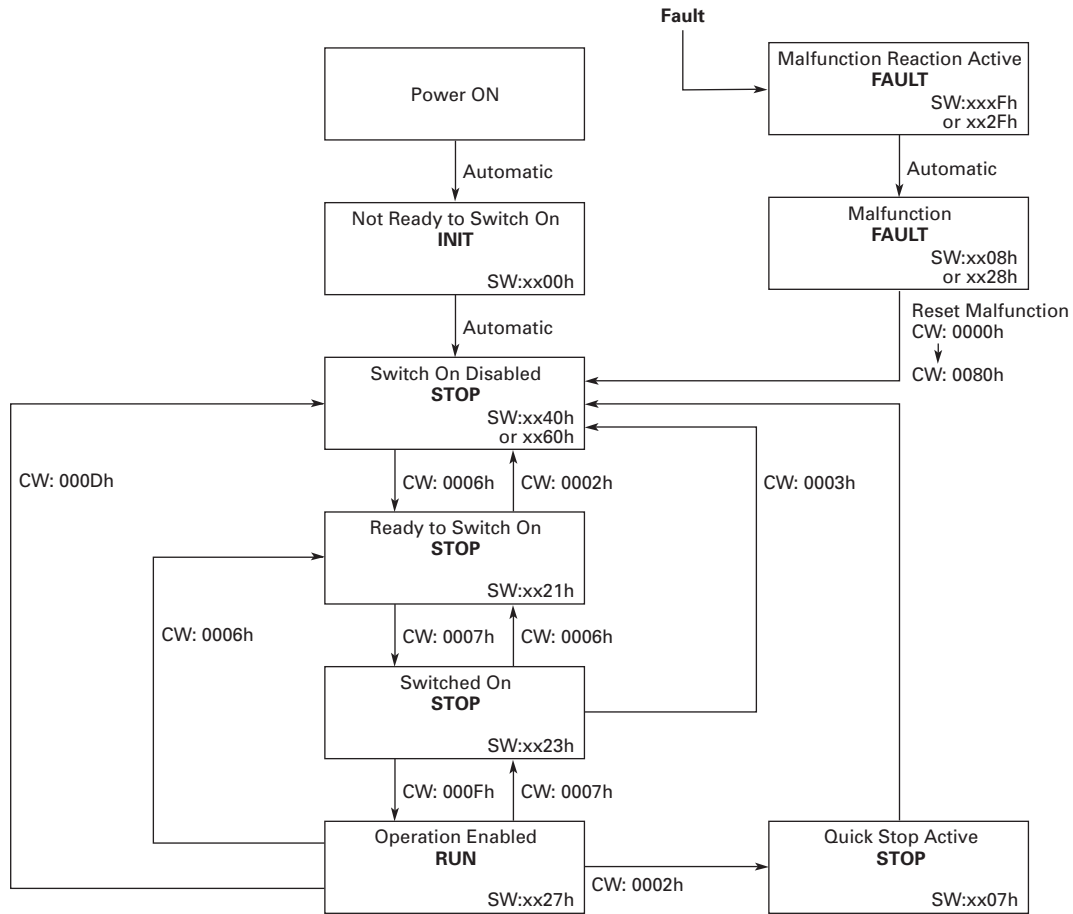

Using Manufacturer-Specific PDOs with Bypass Modes

Manufacturer-specific PDOs are in use when “operate mode” parameter in panel is set to Bypass or Bypass 2. For communication set used in Bypass modes, see **Page 16**. Manufacturer-specific PDOs are TPDO21, TPDO22, RPDO21, and RPDO22.

PD021 Rx

Master to slave (1)

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x401	0	8	nx_control_word		nx_speed_reference		process_data_in1		process_data_in2	

PD021 Tx

Slave (1) to master

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x381	0	8	nx_status_word		nx_actual_speed		process_data_out1		process_data_out2	

PD022Rx

Master to slave (1)

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x501	0	8	process_data_in3		process_data_in4		process_data_in5		process_data_in6	

PD022 Tx

Slave (1) to master

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x481	0	8	process_data_out3		process_data_out4		process_data_out5		process_data_out6	

Controlling the 9000X Drive

Note: Some 9000X drive applications may use “Bypass mode” for an enhanced implementation of “Velocity mode” rather than for a manufacturer-specific interface. Please refer to the specific application manual for details.

The Reference to the drive can be set also via manufacturer-specific process data object 21 (rx) when option board is set to Bypass or Bypass 2. In the application, the value is scaled in percentage of frequency area between the set minimum and maximum frequencies.

`nx_control_word`, used only with Bypass 2 mode. When Bypass mode is used, check more detailed controlword in the application manual.

Controlword Bits

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
—	—	—	—	—	—	—	—	—	—	—	—	—	RST	DIR	RUN

In 9000X drive applications, the first three bits of the controlword are used to control the frequency converter. However, you can customize the content of the controlword for your own applications because the controlword is sent to the frequency converter as such.

Controlword Bits

Bit	Description	
	Value = 0	Value = 1
0	Run	Stop
1	Clockwise	Counterclockwise
2	Rising edge of this bit will reset active fault	
3–15	Not in use	

nx_Speed Reference

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MSB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	LSB

This is the Reference 1 to the frequency converter, used normally as speed reference. The allowed scaling is –10000 to 10000. In the application, the value is scaled in percentage of the frequency area between the set minimum and maximum frequencies.

Processdata_in1 ... Processdata_in6

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MSB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	LSB

These are application-specific process data. See Appendix C for content of these process data in different applications.

Drive Monitoring

Several drive actual values/parameters can be monitored by using manufacturer-specific PDOs.

nx_Speed_Reference

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MSB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	LSB

This is the reference 1 to the frequency converter, used normally as speed reference. The allowed scaling is 0 to 10000. In the application, the value is scaled in percentage of the frequency area between set minimum and maximum frequency.

nx_Status_Word, Used Only with Bypass 2 Mode

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
—	—	—	—	—	UVFS	DDIR	TCSPDL	FR	Z	AREF	W	FLT	DIR	RUN	RDY

Note: When Bypass mode is used, check more detailed statusword in the application manual.

Information about the status of the device and messages is indicated in the statusword. The statusword is composed of 16 bits that have the following meanings.

Statusword Bit Descriptions

Bit	Description	
	Value = 0	Value = 1
0	Not Ready	Ready
1	STOP	RUN
2	Clockwise	Counterclockwise
3	—	Faulted
4	—	Warning
5	Ref. frequency not reached	Ref. Frequency reached
6	—	Motor is running at zero speed
7	Flux Ready	Flux Not Ready
8	TC Speed Limit Active (depends on drive model)	TC Speed Limit Not Active (depends on drive model)
9	Detected Encoder Direction Clockwise (depends on drive model)	Encoder Direction Counterclockwise (depends on drive model)
10	UV Fast Stop Active (depends on drive model)	UV Fast Stop Not Active (depends on drive model)
11–15	Not in use	Not in use

Processdata_Out1 ... Processdata_Out6

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MSB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	LSB

These are application-specific process data. See Appendix C for content of these process data in different applications.

Anyparameter Service

SDO protocol can be used to read any parameter or actual value, and write any parameter from drive. These parameters are read from drive with its ID number specified in user manual. There are three index in the object dictionary as follows for anyparameter service.

Index	Description	Size	Type	Hi 16b	Low 16b
2000	AnyparameterReadID	U16	RW	-	Read ID
2001	AnyparameterReadValue	U32	RO	Status	Value
2002	AnyparameterWrite	U32	RW	ID	Write Value


Reading Anyparameter

Writing new value to index 2000 will trigger read event, while read is in process index 2001 is zero. Read event will return value to index 2001. If read is a success, status will get the value of ID. If read fails, status will get value 0xFFFF (dec 65535).


Writing Anyparameter

When new ID and value is written to index 2002, a write event will be triggered. Index 2002 value will remain as long as writing is processed (normal SDO/PDO operation during this time). If write is a success, index 2002 ID and value will be cleared and new write is possible. If write fails, ID will clamp to 0xFFFF and value zero.

Reading Anyparameter

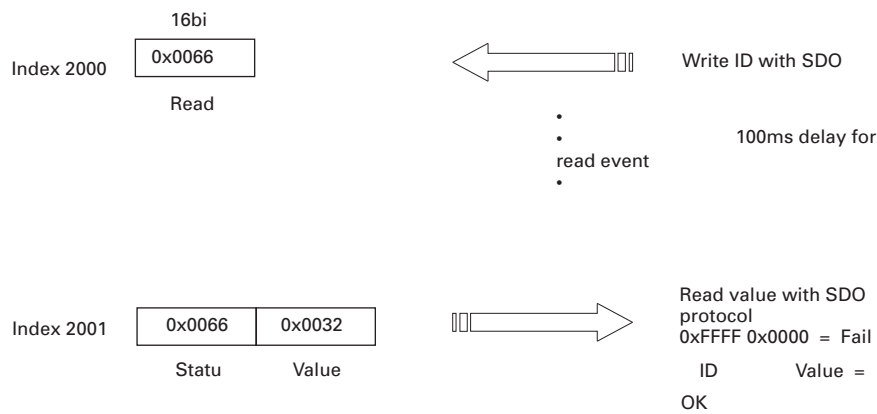

Writing Anyparameter

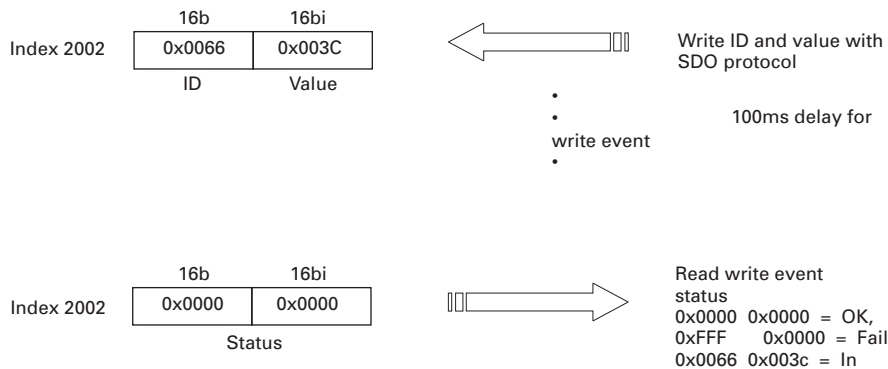

OPTC6 CANopen 9000X Drive Interface

Service Data (SDO)

With service data objects (SDOs), the access to entries of a device object dictionary is provided. Via SDO, all items from object dictionary can be read/written.

SDOs are normally used for device configuration such as setting device parameters. They are also used to define the type and format of information communicated using the process data objects. CANopen Configuration tools with EDS-files can be used for that purpose. The construction and the method of operation of the SDOs can be found in the CANopen (DS301) Communication Profile document. Appendix B consists of a short description of the SDOs used with Eaton CANopen Option Board.

Object Dictionary

Index

hex	dec	Name	Type	Attr.
1000	4096	device_type	Unsigned32	CO
1001	4097	error_register	Unsigned8	RO
1003	4099	pre defined error field	Unsigned32	RO
1005	4101	cob-id sync message	Unsigned32	RO
100C	4108	guard_time	Unsigned32	RW
100D	4109	life_time_factor	Unsigned32	RW
1018	4120	Identity Object	Identity	
1200	4608	1st_server_SDO_parameter	SDOParameter	
1400	5120	1st_receive_PDO_parameter	PDOCommPar	
1405	5125	6st_receive_PDO_parameter	PDOCommPar	
1414	5140	21st_receive_PDO_parameter	PDOCommPar	
1415	5141	22st_receive_PDO_parameter	PDOCommPar	
1600	5632	1st_receive_PDO_mapping	PDOMapping	
1605	5637	6st_receive_PDO_mapping	PDOMapping	
1614	5652	21st_receive_PDO_mapping	PDOMapping	
1615	5653	22st_receive_PDO_mapping	PDOMapping	
1800	6144	1st_transmit_PDO_parameter	PDOCommPar	
1805	6149	6nd_transmit_PDO_parameter	PDOCommPar	
1814	6164	21nd_transmit_PDO_parameter	PDOCommPar	
1815	6165	22nd_transmit_PDO_parameter	PDOCommPar	
1A00	6656	1st_transmit_PDO_mapping	PDOMapping	
1A05	6661	6st_transmit_PDO_mapping	PDOMapping	
1A14	6676	21st_transmit_PDO_mapping	PDOMapping	
1A15	6677	22st_transmit_PDO_mapping	PDOMapping	
2000	8192	AnyParameterReadID	Integer16	RW
2001	8193	AnyParameterReadValue	Integer32	RO
2002	8194	AnyParameterWrite	Integer32	RW
2003	8195	nx_current_percentage	Integer16	RO
2004	8196	nx_torque_percentage	Integer16	RO
2063	8291	nx_fault_code	Integer16	RO
27D1	10193	NX controlword	Integer16	RW
27D3	10195	NX speed reference	Integer16	RW

Object Dictionary, continued**Index**

hex	dec	Name	Type	Attr.
27D4	10196	Process data in1	Integer16	RW
27D5	10197	Process data in2	Integer16	RW
27D6	10198	Process data in3	Integer16	RW
27D7	10199	Process data in4	Integer16	RW
27D8	10200	Process data in5	Integer16	RW
27D9	10201	Process data in6	Integer16	RW
2836	10294	NX status word	Integer16	RO
2838	10296	NX actual speed	Integer16	RO
2839	10297	Process data out1	Integer16	RO
283A	10298	Process data out2	Integer16	RO
283B	10299	Process data out3	Integer16	RO
283C	10300	Process data out4	Integer16	RO
283D	10301	Process data out5	Integer16	RO
283E	10302	Process data out6	Integer16	RO
6040	24640	controlword	Unsigned16	RW
6041	24641	statusword	Unsigned16	RO
6042	24642	vl_target_velocity	Integer16	RW
6043	24643	vl_velocity_demand	Integer16	RO
6044	24644	vl_control_effort	Integer16	RO
6046	24646	vl_velocity_min_max_amount	Unsigned32	RW
6048	24648	vl_velocity_acceleration	Ramp	RW
6049	24649	vl_velocity_deceleration	Ramp	RW
604A	24650	vl_velocity_quick_stop	Ramp	RW
604E	24654	vl_velocity_reference	Unsigned32	RW
6060	24672	modes_of_operation	Integer8	RO
6061	24673	modes_of_operation_display	Integer8	RO

Description of the Object Dictionary

Abbreviations

- ro** read only
- wo** write only
- rw** read write
- co** constant
- bool** Boolean
- i8** Integer8
- i16** Integer8
- i32** Integer8
- u8** Unsigned8
- u16** Unsigned16
- u32** Unsigned32
- float** Floating Point

Description of the Object Dictionary

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
General Parameters					
1000	00	Device Type	0x00010192 0x00000000 0xFFFFFFFF	u32 co	The device type specifies the kind of device. The lower 16 bits contain the device profile number and the upper 16 bits contain additional information.
1001	00	Error Register	0x00 0x00 0xFF	u8 ro	The error register is a field of 8 bits, each for a certain error type. If an error occurs, the bit has to be set. Bit Meaning 0 generic error 1 current 2 voltage 3 temperature 4 communication error (overrun, error state) 5 device profile specific 6 reserved 7 manufacturer specific
1003		Pre-defined Error Field			This object holds errors that have occurred on the device and have been signaled via Emergency Object. It is an error history. Writing value 0 to sub-index 0 deletes the entire error history.
	00	Number of Errors	0x0000 0x0000 0x00FE	u8 rw	
	01	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	02	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	03	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
General Parameters, continued					
1003	04	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	05	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	06	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	07	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	08	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	09	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
	0A	Standard Error Field	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
1005	00	COB-ID sync message	0x80000080 0x00000001 0xFFFFFFFF	u32 ro	COB-ID used for synchronize PDO messages
100C	00	Guard Time	0x03E8 0x0000 0xFFFF	u16 rw	This entry contains the guard time in milliseconds. It is 0 if not used. Unit: ms
100D	00	Life Time Factor	0x02 0x00 0xFF	u8 rw	The life time factor multiplied with the guard time gives the life time for the device. It is 0 if not used.
1018		Identity Object			This object contains general information about the device.
	00	Number of entries	0x4 0x1 0x4	u8 ro	
	01	Vendor ID	0x00000090 0x0 0xFFFFFFFF	u32 ro	Sub-index 1 contains a unique value allocated to each manufacturer.
	02	Product Code	0x00000119 0x0 0xFFFFFFFF	u32 ro	Sub-index 2 identifies the manufacturer-specific product code (device version).
	03	Revision number	0x00000001 0x0 0xFFFFFFFF	u32 ro	Sub-index 3 contains the revision number. Bit 31–16 is the major revision number and bit 15–0 the minor revision number.
	04	Serial number	0x0 0x0 0xFFFFFFFF	u32 ro	Sub-index 4 identified a manufacturer-specific serial number.

OPTC6 CANopen 9000X Drive Interface

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Server SDO Parameters					
1200		Server SDO Parameter			The object contains the parameters for the SDOs for which the device is the server.
	00	Number of Entries	0x02 0x02 0x02	u8 ro	
	01	COB-ID Client → Server	0x600+NodeID 0x00000601 0xFFFFFFFF	u32 ro	
	02	COB-ID Server → Client	0x580+NodeID 0x00000581 0xFFFFFFFF	u32 ro	
Receive PDO Communication Parameters					
1400		Receive PDO1 Communication Parameter			It contains the communication parameters of the first PDO that the device is able to receive.
	00	Number of Entries	0x02 0x02 0x05	U8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x200+NodeID 0x00000201 0xFFFFFFFF	U32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 ro	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
1405		Receive PDO6 Communication Parameter			It contains the communication parameters of the second PDO that the device is able to receive.
	00	Number of Entries	0x02 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x300+NodeID 0x00000301 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 ro	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
1414		Receive PDO21 Communication Parameter			It contains the communication parameters of the manufacturer-specific PDO21 that the device is able to receive.
	00	Number of Entries	0x02 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x400+NodeID 0x00000401 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 ro	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Receive PDO Communication Parameters, continued					
1415		Receive PDO 22 Communication Parameter			It contains the communication parameters of the manufacturer-specific PDO22 that the device is able to receive.
	00	Number of Entries	0x02 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x500+NodeID 0x00000501 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 ro	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
Receive PDO Mapping Parameters					
1600		Receive PDO1 Mapping Parameter			It contains the mapping parameters of the first PDO that the device is able to receive. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length.
	00	Number of Entries	0x01 0x00 0x40	u8 ro	
	01	PDO Mapping Entry	0x60400010 0x00000000 0xFFFFFFFF	u32 ro	
1605		Receive PDO6 Mapping Parameter			It contains the mapping parameters of the PDO6 that the device is able to receive. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length.
	00	Number of Entries	0x02 0x0 0x40	u8 ro	
	01	PDO Mapping Entry	0x60400010 0x00000000 0xFFFFFFFF	u32 ro	
	02	PDO Mapping Entry	0x60420010 0x00000000 0xFFFFFFFF	u32 ro	

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Receive PDO Mapping Parameters, continued					
1614		Receive PDO21 Mapping Parameter			It contains the mapping parameters of the PDO6 that the device is able to receive. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length.
	00	Number of Entries	0x04 0x00 0x40	u8 ro	
	01	PDO Mapping Entry	0x27D10010 0x00000000 0xFFFFFFFF	u32 ro	
	02	PDO Mapping Entry	0x27D30010 0x00000000 0xFFFFFFFF	u32 ro	
	03	PDO Mapping Entry	0x27D40010 0x00000000 0xFFFFFFFF	u32 ro	
	04	PDO Mapping Entry	0x27D50010 0x00000000 0xFFFFFFFF	u32 ro	
1615		Receive PDO22 Mapping Parameter			It contains the mapping parameters of the PDO6 that the device is able to receive. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length.
	00	Number of Entries	0x04 0x00 0x40	u8 ro	
	01	PDO Mapping Entry	0x27D60010 0x00000000 0xFFFFFFFF	u32 ro	
	02	PDO Mapping Entry	0x27D70010 0x00000000 0xFFFFFFFF	u32 ro	
	03	PDO Mapping Entry	0x27D80010 0x00000000 0xFFFFFFFF	u32 ro	
	04	PDO Mapping Entry	0x27D90010 0x00000000 0xFFFFFFFF	u32 ro	

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Transmit PDO Communication Parameters					
1800		Transmit PDO1 Communication Parameter			It contains the communication parameters of the first PDO that the device is able to transmit.
	00	Number of Entries	0x04 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x180+NodeID 0x00000181 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 ro	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
	03	Inhibit Time	0x03E8 0x0000 0xFFFF	u16 rw	An inhibit time can be defined on sub-index 3 in 100 μ s. This time is the minimum interval for PD transmission. Default 100 ms
	04	Compatibility Entry	0x03 0x00 0xFF	u8 ro	
1805		Transmit PDO6 Communication Parameter			It contains the communication parameters of the PDO6 that the device is able to transmit.
	00	Number of Entries	0x05 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x280+NodeID 0x00000281 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 rw	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
	03	Inhibit Time	0x03E8 0x0000 0xFFFF	u16 rw	An inhibit time can be defined on sub-index 3 in 100 μ s. This time is the minimum interval for PD transmission. Default 100 ms
	04	Compatibility Entry	0x03 0x00 0xFF	u8 ro	
	05	Event Timer	0x0000 0x0000 0xFFFF	u16 rw	Event Time can be defined on sub-index 5 in 1 ms resolution. This is the time interval that the PDO will be transmitted. Value 0—Disable Event Timer

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Transmit PDO Communication Parameters, continued					
1814		Transmit PDO21 Communication Parameter			It contains the communication parameters of the PDO21 that the device is able to transmit.
	00	Number of Entries	0x05 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x380+NodeID 0x00000381 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 rw	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
	03	Inhibit Time	0x03E8 0x0000 0xFFFF	u16 rw	An inhibit time can be defined on sub-index 3 in 100 µs. This time is the minimum interval for PD transmission. Default 100 ms
	04	Compatibility Entry	0x03 0x00 0xFF	u8 ro	
	05	Event Timer	0x0000 0x0000 0xFFFF	u16 rw	Event Time can be defined on sub-index 5 in 1 ms resolution. This is the time interval that the PDO will be transmitted. Value 0 = Disable Event Timer
1815		Transmit PDO22 Communication Parameter			It contains the communication parameters of the PDO22 that the device is able to transmit.
	00	Number of Entries	0x05 0x02 0x05	u8 ro	Sub-index 0 contains the number of PDO-parameters implemented.
	01	COB-ID	0x480 + NodeID 0x00000481 0xFFFFFFFF	u32 ro	Sub-index 1 describes the COB-ID. If bit 31 is set, the PDO is disabled.
	02	Transmission Type	0xFF 0x00 0xFF	u8 rw	The transmission mode is defined by sub-index 2. Value 0xFF (255) = asynchronous transmission mode (=event driven)
	03	Inhibit Time	0x03E8 0x0000 0xFFFF	u16 rw	An inhibit time can be defined on sub-index 3 in 100 µs. This time is the minimum interval for PD transmission. Default 100 ms
	04	Compatibility Entry	0x03 0x00 0xFF	u8 ro	
	05	Event Timer	0x0000 0x0000 0xFFFF	u16 rw	Event Time can be defined on sub-index 5 in 1 ms resolution. This is the time interval that the PDO will be transmitted. Value 0 = Disable Event Timer

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Transmit PDO Mapping Parameters					
1A00		Transmit PDO 1 Mapping Parameter			It contains the mapping parameter for the PDOs that the device is able to transmit. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length. The structure of a mapping entry is: index, sub-index, length.
	00	Number of Entries	0x01 0x00 0x40	u8 ro	
	01	PDO Mapping Entry	0x60410010 0x00000000 0xFFFFFFFF	u32 ro	
1A05		Transmit PDO 6 Mapping Parameter			It contains the mapping parameter for the PDOs that the device is able to transmit. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length. The structure of a mapping entry is: index, sub-index, length.
	00	Number of Entries	0x02 0x0 0x40	u8 ro	
	01	PDO Mapping Entry	0x60410010 0x00000000 0xFFFFFFFF	u32 ro	
	02	PDO Mapping Entry	0x00000000 0xFFFFFFFF	u32 ro	
1A14		Transmit PDO 21 Mapping Parameter			It contains the mapping parameter for the PDOs that the device is able to transmit. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length. The structure of a mapping entry is: index, sub-index, length.
	00	Number of Entries	0x04 0x00 0x40	u8 ro	
	01	PDO Mapping Entry	0x28360010 0x00000000 0xFFFFFFFF	u32 ro	
	02	PDO Mapping Entry	0x28380010 0x00000000 0xFFFFFFFF	u32 ro	
	03	PDO Mapping Entry	0x28390010 0x00000000 0xFFFFFFFF	u32 ro	
	04	PDO Mapping Entry	0x283A0010 0x00000000 0xFFFFFFFF	u32 ro	

Description of the Object Dictionary, continued


Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Transmit PDO Mapping Parameters, continued					
1A15		Transmit PDO 22 Mapping Parameter			It contains the mapping parameter for the PDOs that the device is able to transmit. Sub-index 0 contains the number of the mapped data objects. All further entries define the data by its index, sub-index, and length. The structure of a mapping entry is: index, sub-index, length.
	00	Number of Entries	0x04 0x00 0x40	u8 ro	
	01	PDO Mapping Entry	0x283B0010 0x00000000 0xFFFFFFFF	u32 ro	
	02	PDO Mapping Entry	0x283C0010 0x00000000 0xFFFFFFFF	u32 ro	
	03	PDO Mapping Entry	0x283D0010 0x00000000 0xFFFFFFFF	u32 ro	
	04	PDO Mapping Entry	0x283E0010 0x00000000 0xFFFFFFFF	u32 ro	
Manufacturer-Specific Parameters					
2000		AnyParameterReadID	0x0000 0x0000 0xFFFF	u16 rw	
2001		AnyParameterReadValue	0x00000000 0x00000000 0xFFFFFFFF	u32 ro	
2002		AnyParameterWrite	0x00000000 0x00000000 0xFFFFFFFF	u32 rw	
2003		NX current percentage	0x0000 0x0000 0xFFFF	u16 ro	Measured motor current. (1 = 0.01A)
2004		NX torque percentage	0x0000 0x0000 0xFFFF	u16 ro	Calculated torque. Scaled in 0.0%–100.0% (0–1000)
2063		NX fault code	0x0000 0x0000 0xFFFF	i16 ro	Shows the drive fault code (=0, if no fault active)
27D1		NX controlword	0x0000 0x8000 0x7FFF	i16 rw	
27D3		NX speed reference	0x0000 0x8000 0x7FFF	i16 rw	
27D4		Process Data In1	0x0000 0x8000 0x7FFF	i16 rw	
27D5		Process Data In2	0x0000 0x8000 0x7FFF	i16 rw	

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Manufacturer-Specific Parameters, continued					
27D6		Process Data In3	0x0000 0x8000 0x7FFF	i16 rw	
27D7		Process Data In4	0x0000 0x8000 0x7FFF	i16 rw	
27D8		Process Data In5	0x0000 0x8000 0x7FFF	i16 rw	
27D9		Process Data In6	0x0000 0x8000 0x7FFF	i16 rw	
2836		NX statusword	0x0000 0x8000 0x7FFF	i16 rw	
2838		NX actual speed	0x0000 0x8000 0x7FFF	i16 rw	
2839		Process data out1	0x0000 0x8000 0x7FFF	i16 rw	
283A		Process data out2	0x0000 0x8000 0x7FFF	i16 rw	
283B		Process data out3	0x0000 0x8000 0x7FFF	i16 rw	
283C		Process data out4	0x0000 0x8000 0x7FFF	i16 rw	
283D		Process data out5	0x0000 0x8000 0x7FFF	i16 rw	
283E		Process data out6	0x0000 0x8000 0x7FFF	i16 rw	

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Device Profile Parameters					
6040		controlword	0x0000 0x0000 0xFFFF	u16 rw	The control command for the state machine. The state machine describes the device status and possible control sequence of the drive.
6041		statusword	0x0000 0x0000 0xFFFF	u16 ro	The statusword indicates the current status of the drive.
6042		vl target velocity	0x0000 0x8000 0x7FFF	i16 rw	Speed reference of the drive. Unit: rpm
6043		vl velocity demand	0x0000 0x8000 0x7FFF	i16 ro	Speed reference after ramp function. Unit: rpm
6044		vl control effort	0x0000 0x8000 0x7FFF	i16 ro	Actual speed of the motor. Unit: rpm
6046		vl velocity min max amount			Defines speed limits of the drive in rpm. The parameter consists of a minimum and a maximum speed.
	00	Number of Entries	0x02 0x00 0x02	u8 ro	
	01	Minimum Speed	0x00000000 0x00000000 0xFFFFFFFF	u32 rw	
	02	Maximum Speed	0x00000000 0x00000000 0xFFFFFFFF	u32 rw	
6048		vl velocity acceleration			This parameter specifies the slope of the acceleration ramp. The parameter consists of two parts: the delta speed and the delta time.
	00	Number of Entries	0x02 0x00 0x02	u8 ro	
	01	delta_speed	0x00000000 0x00000000 0xFFFFFFFF	u32 rw	
	02	delta_time	0x0001 0x0000 0xFFFF	u16 rw	

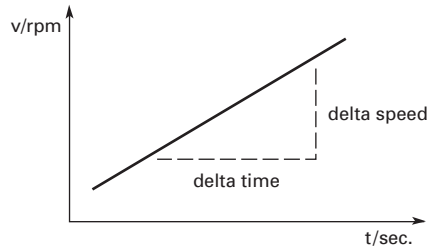

Description of the Object Dictionary, continued

Index (hex)	Sub-Index	Name	Default Min. Max.	Type Attr.	Descriptions
Device Profile Parameters, continued					
6049		vl velocity deceleration			This parameter specifies the slope of the deceleration ramp. The parameter consists of two parts: the delta speed and the delta time.
	00	Number of Entries	0x02 0x00 0x02	u8 ro	
	01	delta_speed	0x00000000 0x00000000 0xFFFFFFFF	u32 rw	
	02	delta_time	0x0001 0x0000 0xFFFF	u16 rw	
604A		vl velocity quick stop			Not used
	00	Number of Entries	0x02 0x00 0x02	u8 ro	
	01	delta_speed	0x00000000 0x00000000 0xFFFFFFFF	u32 rw	
	02	delta_time	0x0001 0x0000 0xFFFF	u16 rw	
6060		modes of operation	0x02 0x80 0x7F	i8 ro	This parameter switches the actual chosen operation mode.
6061		modes of operation display	0x02 0x80 0x7F	i8 ro	This parameter shows current mode of operation.

Node Guarding Protocol

Node Guarding Protocol

This protocol is used to detect remote errors in the network. The master can update the status of slaves, and the slaves can guard in master active.

Each NMT slave uses one remote COB for node guarding protocol. The NMT master polls each NMT slave at a regular time interval. This time interval is called guard time and it may be different for each NMT slave. The response of the NMT slave contains the state of that NMT slave. The slave starts guarding after one Node Guarding message is received from the MNT master. After that, if the slave (=drive) doesn't receive a Node Guarding message during "life time," it will generate a "Fieldbus Fault."

OPTC6 CANopen Option Board has the Following Items for Guarding Purposes

Index (hex)	Sub-Index	Name	Default		Type Attr.	Descriptions
			Min.	Max.		
100C	00	Guard Time	1000 0 65535		u16 rw	This entry contains the guard time in milliseconds. It is 0 if not used. Unit: ms
100D	00	Life Time Factor	2 0 255		u8 rw	The life time factor multiplied with the guard time gives the life time for the device. It is 0 if not used.

Default "life time" is $1000 \text{ ms (Guard Time)} * 2 \text{ (Life Time Factor)} = 2\text{s}$

Example node guarding messages:

MASTER -> SLAVE (node ID = 1)

Message	ID	Len	RTR
NMT (Node Guarding)	0x701	0	1

SLAVE RESPONSE (node ID = 1)

Message	ID	Len	RTR
NMT (Node Guarding)	0x701	1	X

X = bit7 0 / 1 (Toggle bit)

bit6...0 Slave state (esim. 5 operational)

Electronic Data Sheet, EDS-File

The usage of devices in a communication network requires configuration of the device parameters and communication facilities. CANopen defines a standardized way to access these parameters via the object dictionary.

For handling of the complexity of CANopen systems, software tools are required. This reduces the complexity of the planning, configuration, and analysis process, and significantly increases the security of the system.

For this purpose, software tools need an electronic description of the CANopen devices. To allow the usage of manufacturer-independent tools, this document defines a standardized file format—called electronic data sheet EDS.


The EDS-file for OPTC6 CANopen Option Board can be found on the Eaton Web site.

Appendices

Appendix A—Device Profile for 9000X Drives

OPTC6 CANopen Option Board follows the drive device profile DSP-402. The Velocity mode is supported.

Basic Device Control and Device Data Interface

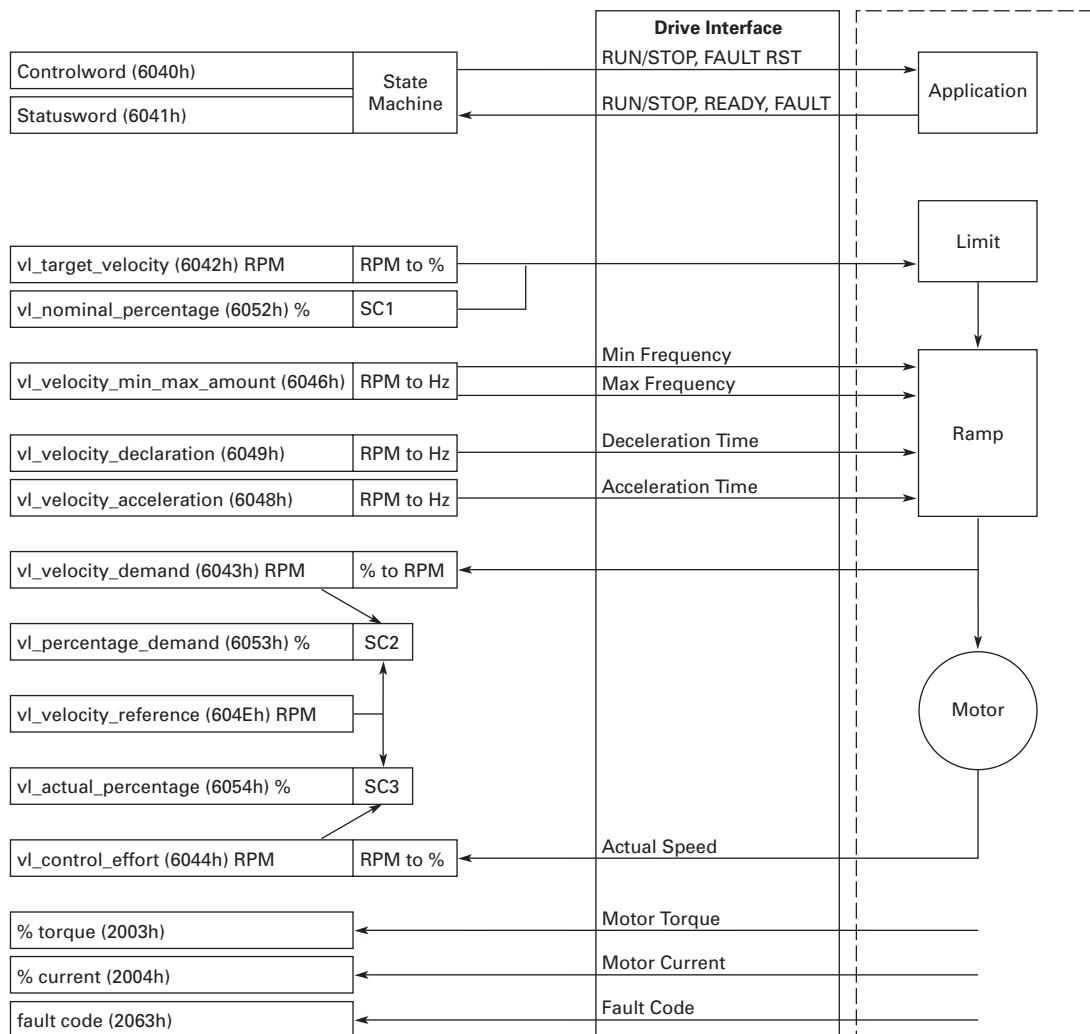

Appendices

Appendix B—SDO Messages

Read Dictionary Object: SDO1 Rx

Master to Slave (1)

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x601	0	4	Command	Object Index		Sub-Index	D0	D1	D2	D3

Command = 0x40

Command aaabbbb (= 0100 0000)

aaa = 010, Initiate upload request

Response: SDO1 Tx

Slave (1) to Master

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x581	0	4	Reply	Object Index		Sub-Index	D0	D1	D2	D3

Reply = e.g., 0x43

Reply aaabcces (= 0100 0011)

aaa = 010 Initiate upload response

b = 0 not used

cc = 00 number of empty bytes (that case answer consist of 4 bytes)

e = 1 expedited transfer

s = 1 data set size is indicated

Data D0...D4

Write Dictionary Object: SDO1 Rx

Master to Slave (1)

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x601	0	4	Command	Object Index		Sub-Index	D0	D1	D2	D3

Command = e.g., 0x2B

Command aaabcces (= 0100 0011)

aaa = 010 Initiate upload response

b = 0 not used

cc = 00 number of empty bytes (that case answer consist of 4 bytes)

e = 1 expedited transfer

s = 1 data set size is indicated

Data D0...D4

Response: SDO1 Tx

Slave (1) to Master

Header			Data							
ID	RTR	Len	1	2	3	4	5	6	7	8
0x581	0	4	Reply	Object Index		Sub-Index	D0	D1	D2	D3

Reply = 0x60

Reply aaabbbb (= 0110 0000)

aaa = 010 Initiate download response

bbbb = 0 0000 not used

Appendix C—Process Data Contents

Process Data OUT (Slave → Master)

The fieldbus master can read the frequency converter's actual values using process data variables.

Basic, Standard, Local/Remote, Multi-Step, PID control, and Pump and Fan control applications use process data as follows:

Process Data

Data	Value	Unit	Scale
Process data OUT 1	Output frequency	Hz	0.01 Hz
Process data OUT 2	Motor speed	rpm	1 rpm
Process data OUT 3	Motor current	A	0.1A
Process data OUT 4	Motor torque	%	0.1%
Process data OUT 5	Motor power	%	0.1%
Process data OUT 6	Motor voltage	V	0.1V

The Multipurpose application has a selector parameter for every Process Data. The monitoring values and drive parameters can be selected using the ID number (see 9000X Drives All in One Application Manual, Tables for monitoring values and parameters). For default selections, see the table above.

Process Data IN (Master → Slave)

Controlword, Reference, and Process Data are used with All-in-One applications as follows:

Basic, Standard, Local/Remote, Multi-Step Applications

Data	Value	Unit	Scale
Reference	Speed Reference	%	0.01%
Controlword	Start/Stop Command Fault Reset Command	—	—
PD1–PD6	Not used	—	—

Multipurpose Control Applications

Data	Value	Unit	Scale
Reference	Speed Reference	%	0.01%
Controlword	Start/Stop Command Fault Reset Command	—	—
Process Data IN1	Torque Reference	%	0.1%
Process Data IN2	Free Analog INPUT	%	0.01%
PD3–PD6	Not Used	—	—

PID Control, and Pump and Fan Control Applications

Data	Value	Unit	Scale
Reference	Speed Reference	%	0.01%
Controlword	Start/Stop Command Fault Reset Command	—	—
Process Data IN1	Reference for PID controller	%	0.01%
Process Data IN2	Actual Value 1 to PID controller	%	0.01%
Process Data IN3	Actual Value 2 to PID controller	%	0.01%
PD4–PD6	Not u sed	—	—

Appendix D

Version 8 of the C6 Option Board doesn't work the same way as the others. Some changes are required at the end of the PLC.

Eaton's Electrical Sector is a global leader in power distribution, power quality, control and automation, and monitoring products. When combined with Eaton's full-scale engineering services, these products provide customer-driven PowerChain™ solutions to serve the power system needs of the data center, industrial, institutional, public sector, utility, commercial, residential, IT, mission critical, alternative energy and OEM markets worldwide.

PowerChain solutions help enterprises achieve sustainable and competitive advantages through proactive management of the power system as a strategic, integrated asset throughout its life cycle, resulting in enhanced safety, greater reliability and energy efficiency. For more information, visit www.eaton.com/electrical.

Eaton Corporation

Electrical Sector
1111 Superior Ave.
Cleveland, OH 44114
United States
877-ETN-CARE (877-386-2273)
Eaton.com

©2011 Eaton Corporation
All Rights Reserved
Printed in USA
Publication No. MN04003007E / Z10650
March 2011



Eaton is a registered trademark of Eaton Corporation. All other trademarks are property of their respective owners.