



PWR	ON	L	ERR	Description
				Emergency stop active
				Ready for operation
				Running in forward
				Running in reverse
				Replace device
				Phases missing in Fwd
				Phases missing in Rev
				Fwd overload and cooling*
				Rev overload and cooling
				Reset possible
				Reset possible
				No load in forward
				No load in reverse
*Manual reset required. Press reset button after correction and cooling period.				
  = 50/50 represents flashing				