

IZM61 motor operator

WARNING

- (1) **ONLY QUALIFIED ELECTRICAL PERSONNEL SHOULD BE PERMITTED TO WORK ON THE EQUIPMENT.**
- (2) **ALWAYS DE-ENERGIZE PRIMARY AND SECONDARY CIRCUITS IF A CIRCUIT BREAKER CANNOT BE REMOVED TO A SAFE WORK LOCATION.**
- (3) **DRAWOUT CIRCUIT BREAKERS SHOULD BE LEVERED (RACKED) OUT TO THE DISCONNECT POSITION.**
- (4) **ALL CIRCUIT BREAKERS SHOULD BE SWITCHED TO THE OFF POSITION AND MECHANISM SPRINGS DISCHARGED.**

FAILURE TO FOLLOW THESE STEPS FOR ALL PROCEDURES DESCRIBED IN THIS INSTRUCTION LEAFLET COULD RESULT IN DEATH, BODILY INJURY, OR PROPERTY DAMAGE.

Section 1: General information

The circuit breaker offers motor charging and automatic recharging functions.

Tools required

- Phillips screwdriver

Kit parts identification

- Motor operator (1)
- Mounting plate (1)
- Screws M4×10 (1)
- Screws M5×12 (1)

Section 2: Installing the motor operator

Follow below steps for installation:

Step 1: Remove the mounting screws from the circuit breaker panel with the Phillips screwdriver. Pull down the charging handle (by an approx. 45° angle) to remove the cover.

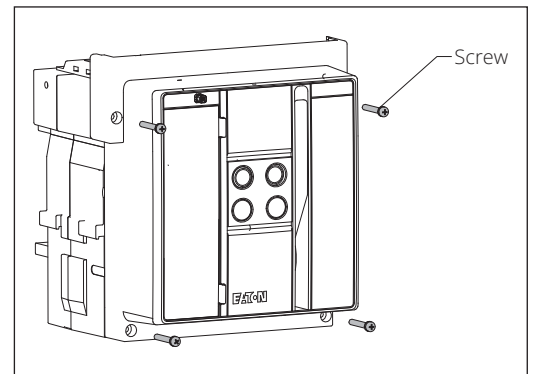


Figure 1. Step 1

Step 2: Rotate the V-slot angle of the motor operator to align with the V-shaft of the operating mechanism, and mount it in parallel to the operating mechanism.

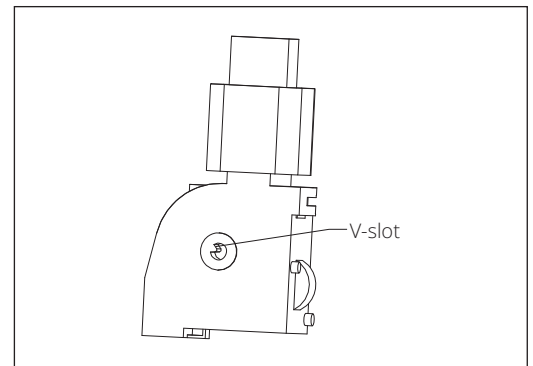
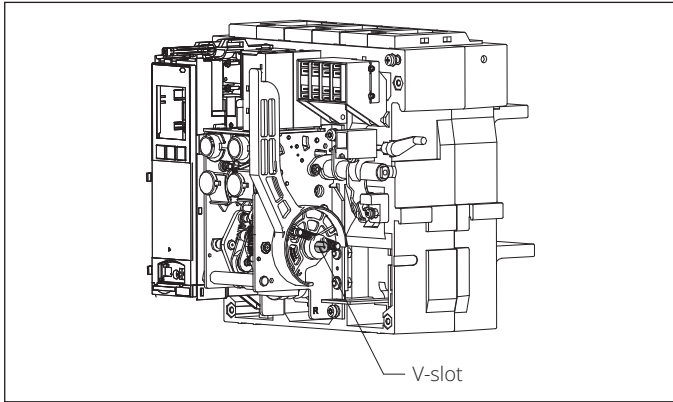



Figure 2. Step 2

EATON

Powering Business Worldwide

**Figure 3. Step 2**

Step 3: As shown in the figure, secure the upper end of the motor operator with M4×10 cross countersunk screws (2), then the lower end with the mounting plate and M5×12 screws.

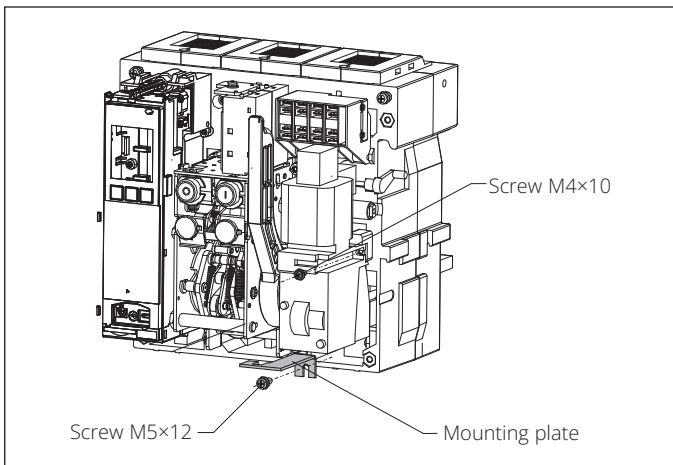**Figure 4. Step 3**

Step 4: Connect the three conductors of the motor operator to Terminal 40, 41 and 42 respectively.

Step 5: Put the cover back on.

Disclaimer of warranties and limitation of liability

The information, recommendations, descriptions, and safety notations in this document are based on Eaton Corporation's ("Eaton") experience and judgment, and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted.

Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability, or otherwise for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations, and descriptions contained herein.

The information contained in this manual is subject to change without notice.

Eaton Corporation
Asia Pacific Headquarter
 No.3, Lane 280, Linhong Road,
 Changning District,
 Shanghai 200335
 Tel: 86-21-52000099
 Fax: 86-21-52000200

© 2023 Eaton
 All Rights Reserved
 Printed in China
 Publication No. IL0131209EN
 March 2023

Eaton is a registered Trademark.

All other trademarks are property of their respective owners.