VMVS Series Champ[™] and DMVS Series Champ[™] Luminaires w/ Suffix IR

Rapid Restrike Module Field Replacement Instructions

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

The following instructions provide the procedure for replacement of a rapid restrike module in 50, 70, 100, and 150 watt high pressure sodium VMVS and DMVS Series Champ luminaires. Replacement can be accomplished without removing the fixture from its mounting location.


Replacement of the rapid restrike module must be preformed by qualified and competent personnel familiar with high pressure sodium luminaire maintenance and repair.

RAPID RESTRIKE MODULE REPLACEMENT

▲ WARNING

Electrical power must be OFF before and during installation and maintenance.

- Make certain that power is OFF, then loosen captive screw that secures fixture cover to ballast housing. Allow ballast housing to swing open and hang on cover module hinge hook.
- Before removing the rapid restrike module, note its mounting position, required mounting hardware, and numbered and color-coded wiring connections for later reference.
- 3. Disconnect wiring from the rapid restrike module.
- 4. Remove two screws that secure the rapid restrike module and discard the old module.
- 5. Using the two screws removed in Step 4, secure replacement rapid restrike module in position.
- 6. Locate lamp holder wires (a black and white wire from center of unit).

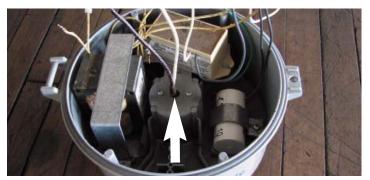


7. Cut both wires to 5" length and strip ends (1/2 inch).



- 8. Insert Silicone Rubber Sleeve on the black wire first, pushing it down the center hole.
- 9. Insert Silicone Rubber Sleeve on the white wire. It does not have to go into the center hole.



10. Connect wiring from replacement rapid restrike module to fixture wiring.

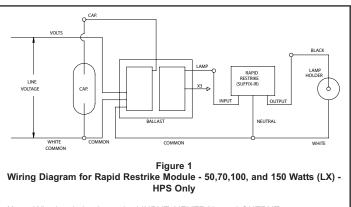

Note: Wire insulation is marked INPUT, NEUTRAL, and OUTPUT

Connect INPUT wire to ballast wire marked LAMP. Connect NEUTRAL wire to COMMON and WHITE lamp-holder wire. Connect OUTPUT to BLACK lampholder wire.

- Close ballast housing onto cover module, making sure that all wiring is safely inside. Securely tighten captive screw holding cover module to ballast housing.
- 12. Make sure that lamp is installed before turning power on to fixture.

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.



Cooper Industries Inc. Crouse-Hinds Division PO Box 4999, Syracuse, New York 13221 • U.S.A. Copyright© 2007, Cooper Industries, Inc. IF 1036 Revision 1 Revised 02/07 Supercedes 04/87

IF 1036

COOPER Crouse-Hinds