## Installation & Maintenance Information




**IF 1654** 


## SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

## INSTALLATION

- 1. Disconnect power supply.
- 2. Remove lens retaining bezel from the LED sub-assembly.

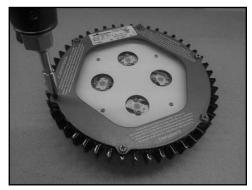

Insert flat head screwdriver between gasket and lens, being careful not to damage gasket.

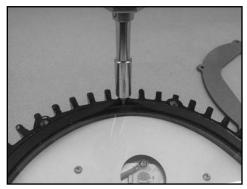


Break seal between gasket and housing. This can be difficult depending on the amount of time the fixture was in service.



5. Pull out lens with gasket.


6. Remove gasket from clear lens.

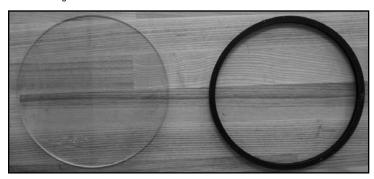


Install gasket onto diffused lens.



8. Push lens/gasket assembly into fixture with textured surface toward the outside.

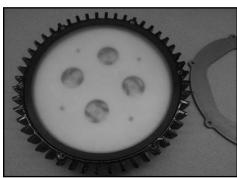

9. Reinstall lens retaining bezel; torque to 30  $\pm$  3 lb.-in. (2.26  $\pm$  0.3 N-m).

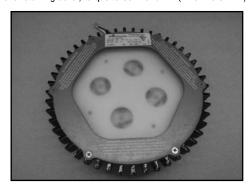

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale," and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.

