# 729F SERIES INCANDESCENT LUMINAIRES



**G** 

## Installation & Maintenance Information

**IF LBL1401** 

### **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

A CAUTION Read carefully before installing and wiring the luminaire. Check the ratings to insure suitability for the area. Must be installed in accordance with the NEC (National Electrical Code) and all other applicable codes. All luminaires must be properly grounded. These luminaires are not suitable for hazardous locations. These luminaires are not typically provided with cable entry holes.

All holes added should be done by qualified personnel through the thickened areas of the junction box suitable for threading. The junction box can be drilled and tapped a maximum of (4) places, up to a maximum 1"NPT. Do not attempt to install this luminaire unless you are familiar with warnings, cautions and procedures outlined in this information sheet.


A WARNING Risk of electrical shock hazard, only qualified personnel should conduct this procedure! Do not make electrical connections with the power ON. Use cu or cu clad wire only, rated for 105°C.

- 1. Make the 4-5/8" cut out and mounting hole locations as per the illustration below.
- 2. Install cable gland(s) (not provided) into junction box (0A) and assure a proper seal as per the manufacturers instructions.
- 3. Strip the supply cable(s) jacket (not provided) back approximately 15", route cable(s) thru the gland and tighten as per the manufactures instructions to create a proper seal. Attach the ground wire to the green screw (9E) in junction box (0A).
- **4.** Mount junction box **(0A)** and gasket **(7C)** with **(4)** minimum size #10 screws.
- 5. Route the cable thru the junction box gasket (7B) and thru the 90° adapter (1C). Align the holes in the 90° adapter with the gasket (7B) and junction box (0A) holes. Install screws (9C) (qty 4, #10-24) in place and tighten to approx.
- 12-15 in/lbs. For aluminum fixtures, apply the lubricant provided to the screw threads
- 6. Install gasket (7A) into the 90° adapter (1C) and align the (4) holes to accept the lampholder screws (9D).
- 7. Strip the insulation of the supply wires back approximately 3/8".
- 8. On the back of the lampholder (4A), connect the black hot lead(s) to the dark colored screws contacts, connect the white neutral lead(s) to the light colored screw contacts. Tighten screws to approximately 8-10 in/lbs.
- 9. Install screws (9D) (qty 4, #8-32), passing them thru the lampholder (4A), gasket (7A) and thread into the 90° adapter (1C). Tighten to approximately 10 in/lbs. For aluminum fixtures, apply the lubricant provided to the screw threads.


**ACAUTION** Note maximum lamp wattage rating as indicated on the luminaire. Exceeding this can cause over heating, premature failure and be dangerous. The lampholder is rated for a maximum of 600 volts. The voltage of the lamp must correspond with the supply voltage.

- 10. Install the proper wattage lamp (not provided) into the lampholder, making sure the center contact of the lamp seats well into the lampholder
- 11. Thread the glass globe (1A) clockwise into the tighten firmly by hand until the globe stops and se gasket.
- 12. Thread the guard (2A) on clockwise and tight aluminum fixtures, apply the lubricant provided to (Luminaires with option "PG" plastic globes, the

seats well into the lamprockwise into the 90° adapobe stops and seats well a kwise and tighten firmly cant provided to the threatic globes, the guard (2.4)	pter (1C), and gainst the internal by hand. For ads of the guard.	Assembled
Part Number	3 5/8 (5 1/8	SQ.
GKT3000SIL	ø5 5/8 —	5.0.7
GKT2002SIL		
INX4000	/ //	1/ /
INX2006* see note		N )
INX2007* see note	\ \ \	} /
INX1036A or B**	ø1/4 (4 PLCS)	
INX1037A or B**	(+ FLC3)	19
s to the part number	Ø4 5/8 S CUT OUT	SUGGESTED
Non IID IID		

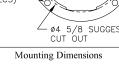



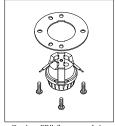

Option "P" for porcelain lampholder

*Add	one of the	e follow	ring suf	fixes to	the pa	rt numl	oer
above	to obtain	the pro	per glol	be:			
~11	OT D	T 1	*** * * *	~ 1	***	***	

**Spare Parts** 

Description

Junction Box Gasket

Globe Gasket

Lampholder

100 watt 6" Globe

150 watt 7" Globe

100 watt 6" Guard

150 watt 7" Guard

Clear HR - HR Clear - CLR Blue - BLU Frosted - FST Red - RED Green - GRN

Yellow - YEL

Item#

7В

7A

4A

1A

1A 2A

2A

\*\*A = Aluminum B = Brass


Note: If luminaire is provided with terminal block, (option T or T6), connect incoming black and white supply leads to the screws adjacent to the black and white wires on the terminal block. Connect the black and white wires from the terminal block to the back of the lampholder as per step 8 above

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.



# INSTALLATION & ELECTRICAL WIRING



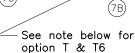



View



Option "SP" for shock proof lamp holder