


Installation Instructions for: Litex LED IP20

IP20

- Product luminaires comply with EN60598 and are suitable for use in normal interior conditions.
- This luminaire has an ambient temperature range of -30°C to 40°C for the non-emergency version
- For Emergency variants - This luminaire has an ambient temperature range of 5°C to 25°C, to ensure the batteries work correctly

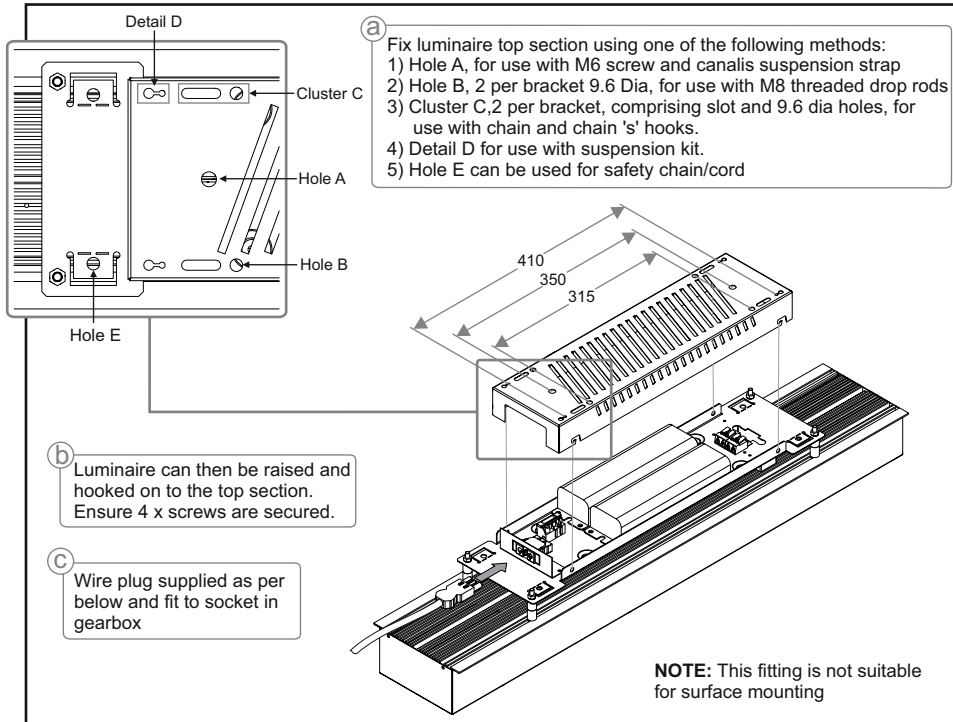

Wiring

- Ensure mains supply is turned off
- LUMINAIRE MUST BE EARTHED
- Luminaires must NOT be megger or high voltage tested

Luminaire supplied with 3 pole connector, wire as below:

- N - Blue (Neutral)
- Green/Yellow (Earth)
- L - Brown (Live)

Luminaire supplied with 4 pole connector, wire as below:

- 2 - Black (Unswitched Live)
- N - Blue (Neutral)
- Green/Yellow (Earth)
- 1 - Brown (Live)

Luminaire supplied with 5 pole connector, wire as below:

- 3 - Brown (Live)
- N - Blue (Neutral)
- Green/Yellow (Earth)
- 2 - Dimming (-)
- 1 - Dimming (+)

Luminaire supplied with 4 and 2 pole connector, wire as below:

- 2 - Black (Unswitched Live)
 - N - Blue (Neutral)
 - Green/Yellow (Earth)
 - 1 - Brown (Live)
-
- 1 - Dimming (+)
 - 2 - Dimming (-)

 
Safe Operation

1. Check the rating label for voltage and frequency before connecting this luminaire to the electrical supply.
2. Ensure that the mains supply is switched off when working on this luminaire, whether installing or carrying out any other servicing.
3. Do not mount luminaire on or close to readily flammable materials.
4. To prevent damage to driver, do not mix with conventional magnetic ballasts on the same electrical circuit.
5. Where use in more onerous situations is required, e.g. In part-completed buildings before "drying-out" is completed, or areas where ambient temperatures are outside the normal temperature range, then consult our Sales Office.


Servicing and Disposal

1. At commissioning and handing over of installation ensure that a copy of these instructions is presented to the authority responsible for the operation and maintenance of the luminaires.
2. Servicing to be carried out by authorised Cooper Lighting personnel. Mains to be switched off and the luminaire removed down to ground/bench level/safe working height.
Service Personnel: Avoid touching LED array surface. To clean - blow surface with either dry air or nitrogen gas.
3. Cleaning should be carried out at regular intervals to ensure that dirt does not accumulate to an extent that will impair the thermal safety or optical performance of the luminaire. Regular cleaning will also ensure that the optical performance of the luminaires is maintained.
4. At the end of life the luminaire is classed as WEEE under directive 2002/96/EC and should be disposed of in accordance with local legislation.


Luminaire Service



Luminaire Cleaning

 

End of Life and Components Disposal

 

Cooper Lighting and Safety Ltd

Wheatley Hall Road, Doncaster, South Yorkshire, DN2 4NB

Sales

T: +44 (0)1302 303303
 F: +44 (0)1302 367155
 E: sales@cooper-ls.com

General

+44 (0)1302 321541
 +44 (0)1302 303220
 technical@cooper-ls.com

International Sales

+44 (0)1302 303250
 +44 (0)1302 303251
 export@cooper-ls.com