
COOPER

Installation Instructions for:

Litex LED



- Product luminaires comply with EN60598 and are suitable for use in normal interior conditions.
- This luminaire has an ambient temperature range of -30°C to 40°C for the non-emergency version
- For Emergency variants This luminaire has an ambient temperature range of 5°C to 25°C, to ensure the batteries work correctly

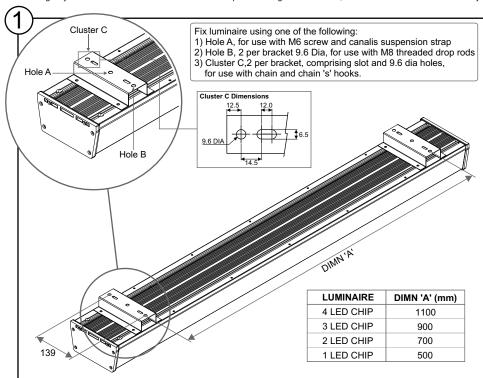

Luminaire supplied with either 3 OR 4 core cable Luminaire supplied with 6 core cable N - Blue (Neutral) Green/Yellow (Earth) N - Blue (Neutral) L - Brown (Live) - Green/Yellow (Earth) + - Red (1-10V and DALI) L - Brown (Live) - - White Ensure mains supply is turned off Emergency luminaires connect the LUMINAIRE MUST BE EARTHED Black wire NOT used on STANDARD luminaire. unswitched black wire to L2 Emergency luminaires connect the unswitched Emergency and standard black wire to L2. luminaires must NOT be meager Luminaire supplied with 3 and 2 Luminaire supplied with 4 and 2 core cable or high voltage tested core cable Emergency luminaires supplied Single LED chip 1-10V emergency Single LED chip 1-10V standard with battery pre-conencted N - Blue (Neutral) N - Blue (Neutral) Green/Yellow (Earth) - Green/Yellow (Earth) - Brown (Live) L - Brown (Live) L2 - Black (Unswitched Live) - Brown (1-10V) + - Brown (1-10V) - - Blue - - Blue

Safe Operation

- 1. Check the rating label for voltage and frequency before connecting this luminaire to the electrical supply.
- 2. Ensure that the mains supply is switched off when working on this luminaire, whether installing or carrying out any other servicing.
- 3. Do not mount luminaire on or close to readily flammable materials.
- 4. To prevent damage to driver, do not mix with conventional magnetic ballasts on the same electrical circuit.
- 5. Where use in more onerous situations is required, e.g. In part-completed buildings before "drying-out" is completed, or areas where ambient temperatures are outside the normal temperature range, then consult our Sales Office.

Servicing and Disposal

- 1. At commissioning and handing over of installation ensure that a copy of these instructions is presented to the authority responsible for the operation and maintenance of the luminaries.
- 2. Servicing to be carried out by authorised Cooper Lighting personnel. Mains to be switched off and the luminaire removed down to ground/bench level/safe working height. Service Personnel: Avoid touching LED array surface. To clean - blow surface with either dry air or
- 3. Cleaning should be carried out at regular intervals to ensure that dirt does not accumulate to an extent that will impair the thermal safety or optical performance of the luminaire. Regular cleaning will also ensure that the optical performance of the luminaries is maintained.
- 4. At the end of life the luminaire is classed as WEEE under directive 2002/96/EC and should be disposed of in accordance with local legislation.

Luminaire Service



Luminaire Cleaning







End of Life and Components Disposal









Cooper Lighting and Safety Ltd

Wheatley Hall Road, Doncaster, South Yorkshire, DN2 4NB

International Sales Sales General T: +44 (0)1302 303303 +44 (0)1302 321541 +44 (0)1302 303250

F: +44 (0)1302 367155 E: sales@cooper-ls.com

+44 (0)1302 303220 technical@cooper-ls.com

+44 (0)1302 303251 export@cooper-ls.com



