



# Conduit Hub Installation

## Installation & Maintenance Information

**IF 1399**

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

### CONDUIT HUB INSTALLATION

D2D/D2L A or S Panelboards are furnished without conduit openings. Drilling of openings for conduit hub installation is subject to the limitations of maximum size and number of openings as well as spacings. Refer to the installation instructions furnished with conduit hubs for proper installation procedure. Main feed conduit entries must comply to requirements of NEC Section 501-4(b).

The preferred conduit entrance locations are at the top and/or sides of the terminal housing where more adequate field wiring space is available.

Note: Crouse-Hinds Myers Hubs, Scru-Tite® Series conduit hubs are recommended for use with D2D/D2L A or S Series Panelboards.

Use wire type and size as required by National Electrical Code and any other applicable standards.

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.



Cooper Industries Inc.  
Crouse-Hinds Division  
PO Box 4999, Syracuse, New York 13221 • U.S.A.  
Copyright© 1998, Cooper Industries, Inc.

IF 1399  
Revision 2  
Revised 4/98  
Supersedes 8/97



# Conduit Hub Installation

## Installation & Maintenance Information

**IF 1399**

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

### CONDUIT HUB INSTALLATION

D2D/D2L A or S Panelboards are furnished without conduit openings. Drilling of openings for conduit hub installation is subject to the limitations of maximum size and number of openings as well as spacings. Refer to the installation instructions furnished with conduit hubs for proper installation procedure. Main feed conduit entries must comply to requirements of NEC Section 501-4(b).

The preferred conduit entrance locations are at the top and/or sides of the terminal housing where more adequate field wiring space is available.

Note: Crouse-Hinds Myers Hubs, Scru-Tite® Series conduit hubs are recommended for use with D2D/D2L A or S Series Panelboards.

Use wire type and size as required by National Electrical Code and any other applicable standards.

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.



Cooper Industries Inc.  
Crouse-Hinds Division  
PO Box 4999, Syracuse, New York 13221 • U.S.A.  
Copyright© 1998, Cooper Industries, Inc.

IF 1399  
Revision 2  
Revised 4/98  
Supersedes 8/97