


**DSK14 GLASS FOR N2S
BREAK GLASS FIRE ALARM STATION
(N2S CONTROL STATION WITH SUFFIX "S757")
INSTRUCTIONS FOR INSTALLATION**



WARNING: Be sure electrical power to switch is OFF before starting installation of the glass.

NOTE: Original installation should be made before cover assembly is mounted or field wired.

1. Fully depress operating shaft using a 3" standard blade screwdriver or other similar instrument.
2. Slide glass into place, making sure that Mylar mask is on the outside surface and that the narrow margin is inserted first. (See illustration)
3. Slowly release pressure on the shaft.

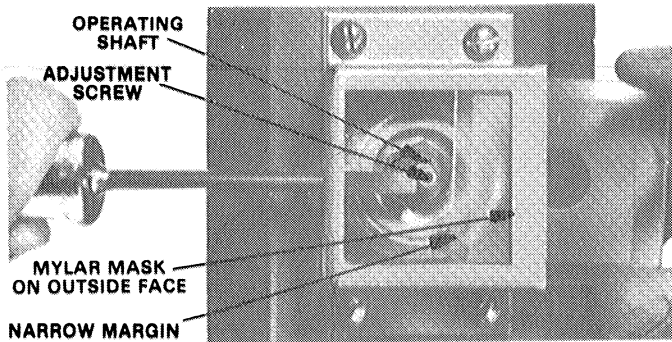

4. With the cover assembly off, check contacts marked "0" to see that contact is made. An adjusting screw is provided at the end of the shaft for any necessary adjustments. (See illustration)
5. Installation should be complete and power to switch may be turned "ON".

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds' "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection herewith.

RETAIN THIS INSTRUCTION SHEET FOR FUTURE USE.


**DSK14 GLASS FOR N2S
BREAK GLASS FIRE ALARM STATION
(N2S CONTROL STATION WITH SUFFIX "S757")
INSTRUCTIONS FOR INSTALLATION**



WARNING: Be sure electrical power to switch is OFF before starting installation of the glass.

NOTE: Original installation should be made before cover assembly is mounted or field wired.

1. Fully depress operating shaft using a 3" standard blade screwdriver or other similar instrument.
2. Slide glass into place, making sure that Mylar mask is on the outside surface and that the narrow margin is inserted first. (See illustration)
3. Slowly release pressure on the shaft.

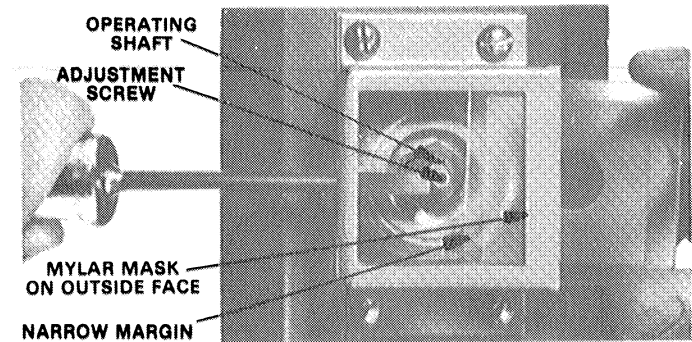

4. With the cover assembly off, check contacts marked "0" to see that contact is made. An adjusting screw is provided at the end of the shaft for any necessary adjustments. (See illustration)
5. Installation should be complete and power to switch may be turned "ON".

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds' "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection herewith.

RETAIN THIS INSTRUCTION SHEET FOR FUTURE USE.