
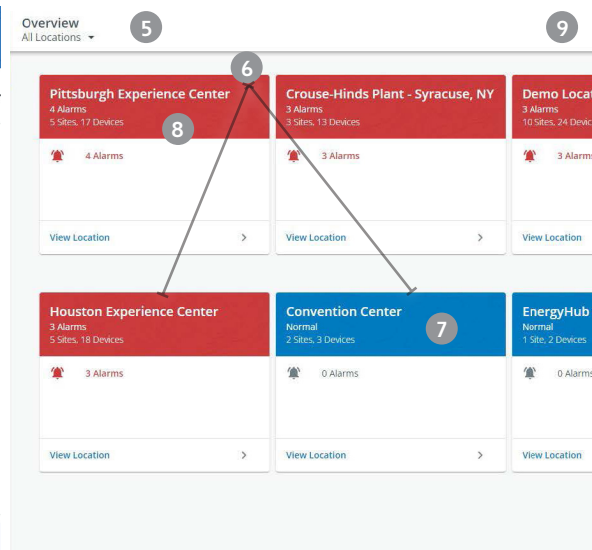
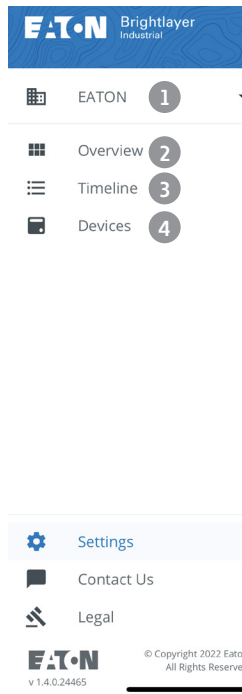


Quick Start Guide - Navigation




Access Brightlayer Industrial remote monitoring at <https://brightlayer-ind.eaton.com> or download the app from the [Apple App Store](#) or [Google Play Store](#)

Main screen view

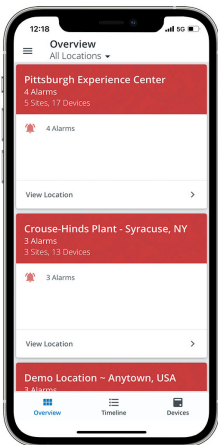



- 1 **Organization**
Select organization
- 2 **Overview**
Access locations and sites
- 3 **Timeline**
View active alarms across all sites
- 4 **Devices**
View devices for all sites
- 5 **All locations**
Select the location from the drop-down
- 6 **Location tiles**
Select the location from the tiles
- 7 **Blue tile**
Normal operation - no alarms
- 8 **Red tile**
Indicates that an alarm is currently active
- 9 **User profile**
Manage user details and notifications

Locations and sites overview screen

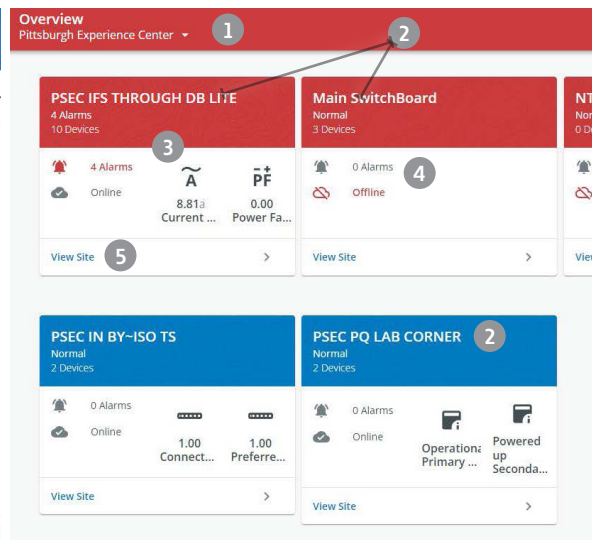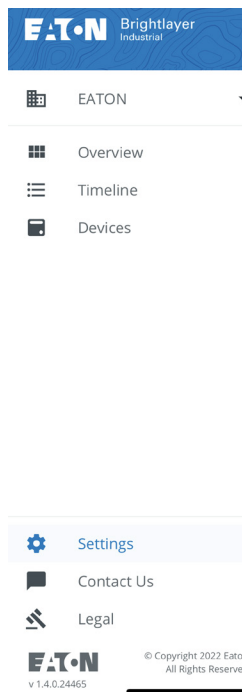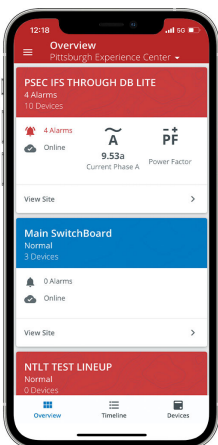

- 1 **Location**
Location selected from previous screen
- 2 **Sites**
Sites within location
- 3 **Alarm overview**
Snap shot of the triggered alarm
- 4 **Online / Offline**
System status
- 5 **View site**
Access the devices, parameters, trends, and alarms

Site detail screen

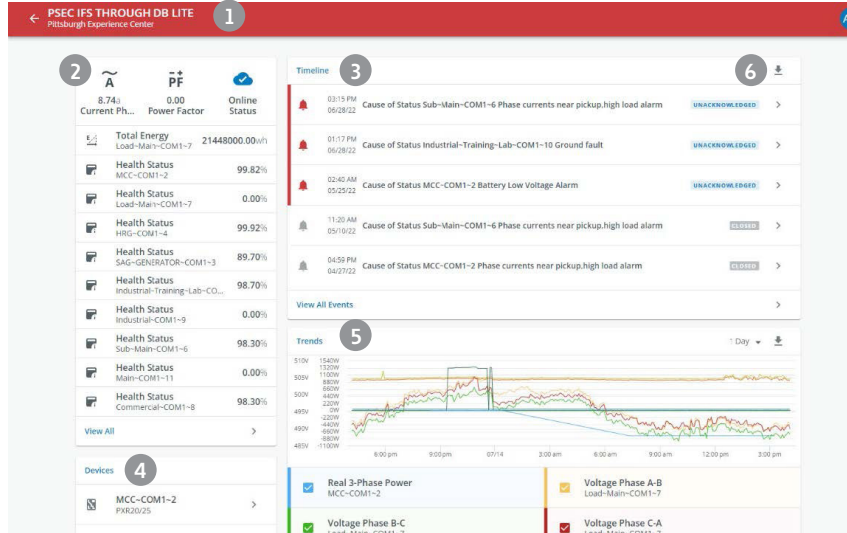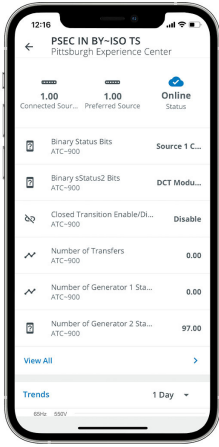


- 1 **Site**
Site selected from previous screen
- 2 **Parameters**
View performance data in predetermined time intervals
- 3 **Timeline**
View current and acknowledged alarm events
 - Unacknowledged*
 - Acknowledged*
 - Closed*
- 4 **Devices**
View and access all devices within site
- 5 **Trends**
View historical trends by device
- 6 **Download .cvs of the recorded data**

*Unacknowledged – Alarm event has occurred, and user has not yet acknowledged the notification in the timeline.


*Acknowledged - Alarm event has occurred, and user has viewed and acknowledge the notification in the timeline.

*Closed – Alarm event has been acknowledged by user, and trigger conditions no longer exist.


Parameters page view

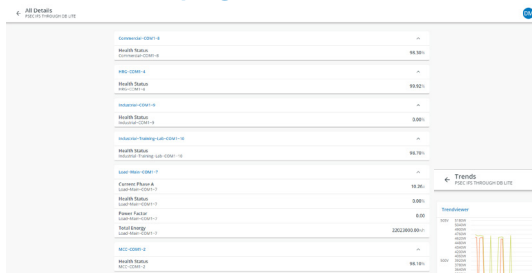



Devices page view

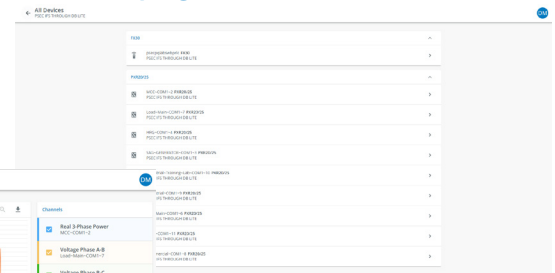

Trendviewer page view


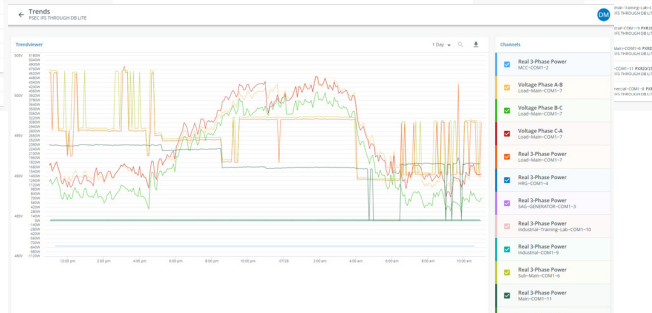


Alarm event detail screen

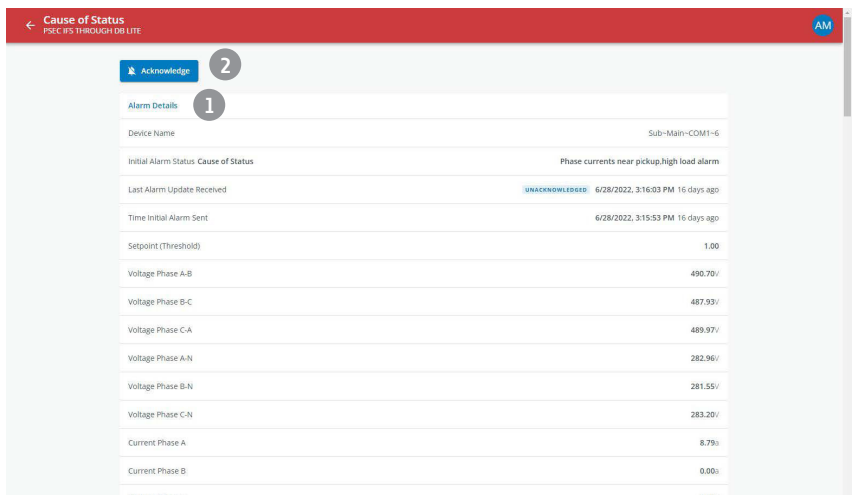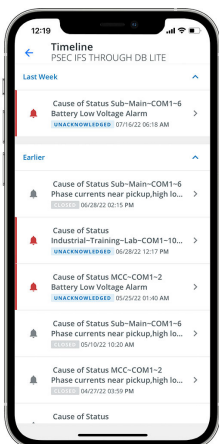



- 1 **Alarm details**
View alarm details such as device, cause, alarm time/date, and threshold
- 2 **Acknowledge**
Click to open the alarm acknowledgement page

Alarm acknowledge window

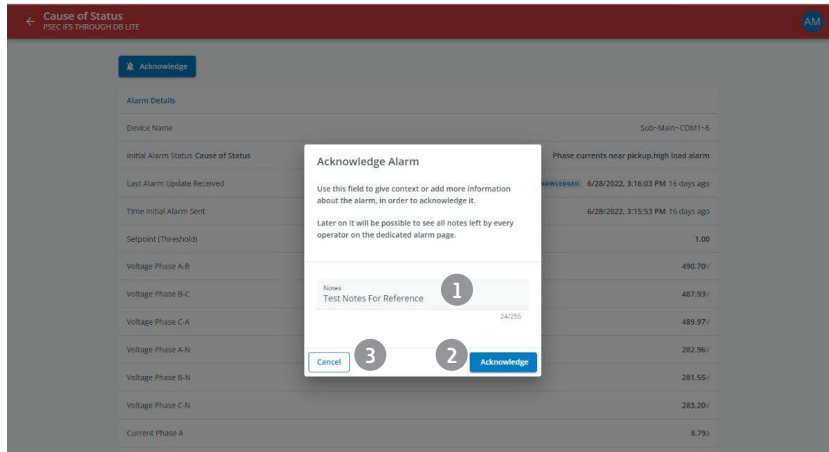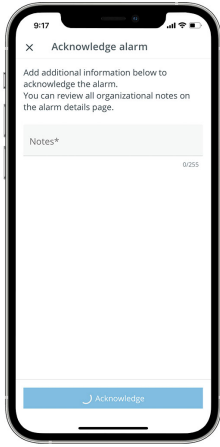

- 1 Notes**
Add notes before acknowledging the alarm
- 2 Acknowledge**
Click to clear the alarm
- 3 Cancel**
Click to go back without clearing the alarm

Alarm event detail screen after acknowledgment

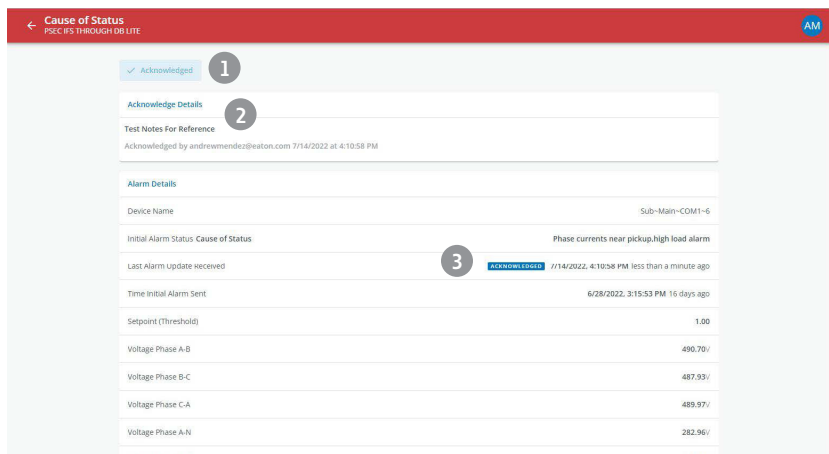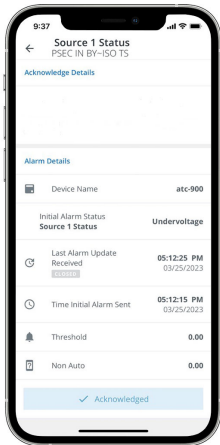

- 1 Acknowledged**
Shows that the alarm has been acknowledged and cleared until it breaches the threshold again
- 2 Acknowledge details**
Displays the notes entered when acknowledging the alarm
- 3 Last alarm update**
View the date/time that the alarm was acknowledged

For additional support, please email us at BLsupport@eaton.com
For immediate support, please call 877-ETN-CARE (386-2273) option 2, option 9, option 2

Our Brightlayer Industrial suite helps you solve your power management challenges with a collection of digital solutions, insights, and services. Its remote monitoring application collects and aggregates operational and maintenance data across electrical and manufacturing equipment using industry-standard output protocols—including multiple sources and locations— for a consolidated view of your equipment, processes, and facilities.

[Learn more at Eaton.com/BrightlayerIndustrial](https://www.eaton.com/BrightlayerIndustrial)

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

© 2023 Eaton
All Rights Reserved
Printed in USA
Publication No. BR401014EN
April 2023

Eaton is a registered trademark.

All other trademarks are property of their respective owners.

Follow us on social media to get the latest product and support information.

