


# Power Xpert® Multi-Point Meter PXMP-EPM Quick Start Guide

## Upgrade the Meter Base

1. Connect computer to Meter Base via USB or RS-485 (Modbus-RTU).
2. Run PXMP Meter Configuration Software.
3. Connect to the meter (see MN150006EN, PXMP Meter Configuration Software User Manual for more details).
4. Log in.
5. Navigate to Advanced Setup → Upgrade Firmware.
6. Locate firmware file.
7. Press Upgrade Firmware button.


## Plug in Energy Portal Module

1. Remove 24 V Power Supply Input from the Meter Base (Pins 15, 16, 17).
2. Remove cover from Slot 10.
3. Insert Energy Portal Module into Slot 10.
4. Reconnect Power Supply Input to Meter Base.

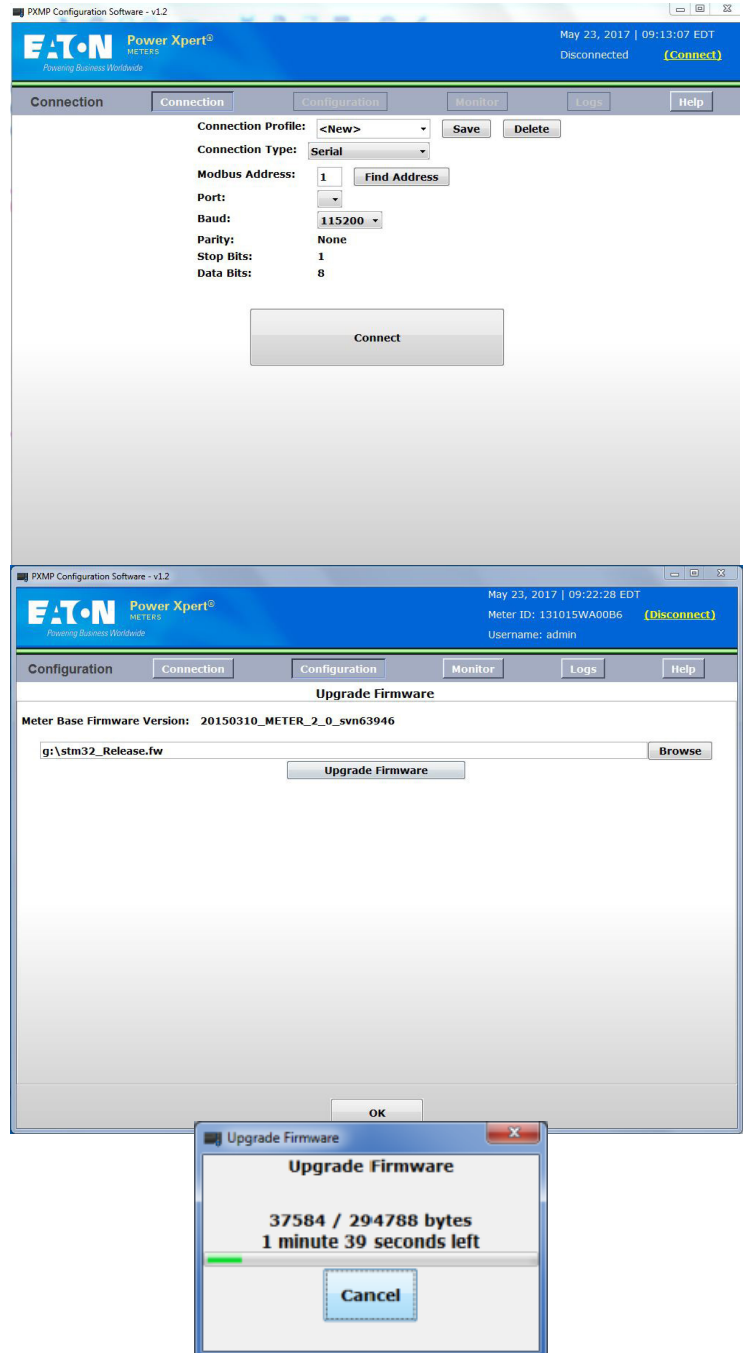


**Set the Energy Portal Module IP Address**

1. Connect computer to Local Ethernet port.  
(You may need to set the computer IP address.)
2. Open web browser to http://192.168.1.1/.
3. Click "Continue to this website".
4. Click "Sign In".  
(Click through security warnings as needed.)
5. Log in as "admin" with password "8-digit" - printed on the EPM label. (Meter initialization may take several minutes.)
6. Navigate to Settings → Comms → Ethernet / LAN Setup.
7. Click "Edit".
8. Select "IPv4 IP Address".
9. Enter static IP address information.
10. Enter SFTP Password.
11. Click "Ok".

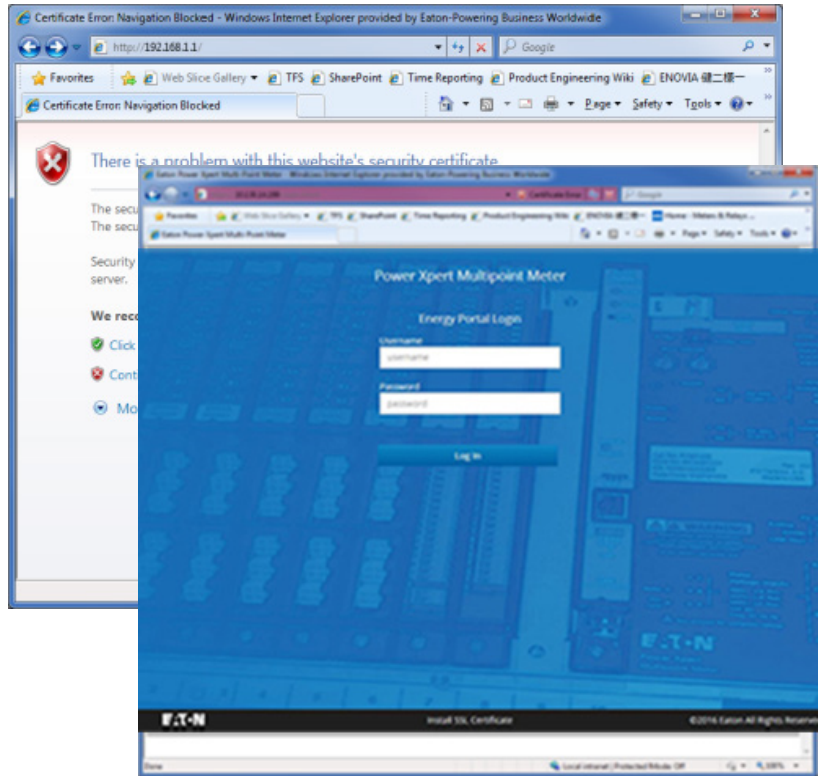

**Connect to LAN**

1. Connect LAN Ethernet port to network.
2. Link to PXMP Meter using IP address:
  - a. HTTPS for User Interface,
  - b. SFTP for data files,
  - c. Modbus/TCP for data.

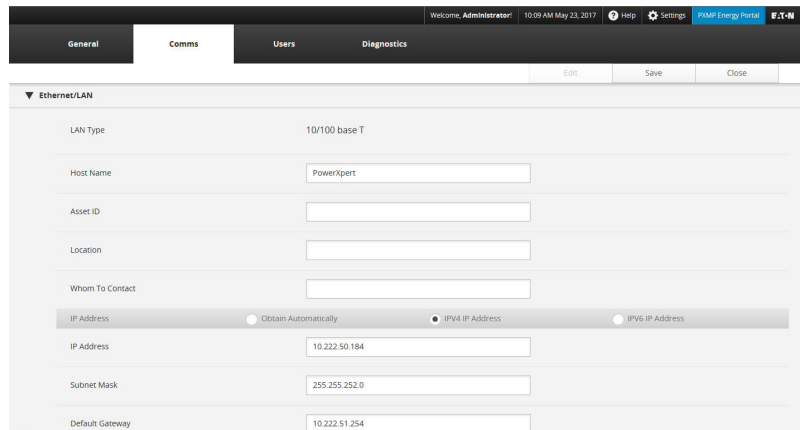

**Eaton**  
Electrical Sector  
1000 Eaton Blvd.  
Cleveland, OH 44122  
United States  
877-ETN-CARE (877-386-2273)  
Eaton.com

© 2017 Eaton  
All Rights Reserved  
Printed in USA  
Publication No. TD150008EN / TBG001157  
July 2017



Eaton is a registered trademark.

All other trademarks are property of their respective owners.