

600 A 15, 25, and 35 kV class PUSH-OP bushing adapter cap installation instructions



Powering Business Worldwide

DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY

The information, recommendations, descriptions and safety notations in this document are based on Eaton Corporation's ("Eaton") experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations and descriptions contained herein. The information contained in this manual is subject to change without notice.

Contents

SAFETY INFORMATION

Safety Information	iv
--------------------------	----

PRODUCT INFORMATION

Introduction	1
Acceptance and Initial Inspection	1
Handling and Storage	1
Standards	1

INSTALLATION INSTRUCTIONS

Bushing adapter cap kit contents	2
Equipment required	2
Installation steps	2

BUSHING ADAPTER CAP REMOVAL PROCESS	3
--------------------------------------------------	----------



Safety for life



Eaton meets or exceeds all applicable industry standards relating to product safety with its Cooper Power™ series products. We actively promote safe practices in the use and maintenance of our products through our service literature, instructional training programs, and the continuous efforts of all Eaton employees involved in product design, manufacture, marketing, and service.

We strongly urge that you always follow all locally approved safety procedures and safety instructions when working around high voltage lines and equipment, and support our “Safety For Life” mission.

Safety information

The instructions in this manual are not intended as a substitute for proper training or adequate experience in the safe operation of the equipment described. Only competent technicians who are familiar with this equipment should install, operate, and service it.

A competent technician has these qualifications:

- Is thoroughly familiar with these instructions.
- Is trained in industry-accepted high and low-voltage safe operating practices and procedures.
- Is trained and authorized to energize, de-energize, clear, and ground power distribution equipment.
- Is trained in the care and use of protective equipment such as arc flash clothing, safety glasses, face shield, hard hat, rubber gloves, clampstick, hotstick, etc.

Following is important safety information. For safe installation and operation of this equipment, be sure to read and understand all cautions and warnings.

Hazard Statement Definitions

This manual may contain four types of hazard statements:

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in equipment damage only.

Safety instructions

Following are general caution and warning statements that apply to this equipment. Additional statements, related to specific tasks and procedures, are located throughout the manual.

DANGER

Hazardous voltage. Contact with hazardous voltage will cause death or severe personal injury. Follow all locally approved safety procedures when working around high- and low-voltage lines and equipment.

G103.3

WARNING

Before installing, operating, maintaining, or testing this equipment, carefully read and understand the contents of this manual. Improper operation, handling or maintenance can result in death, severe personal injury, and equipment damage.

G101.0

WARNING

This equipment is not intended to protect human life. Follow all locally approved procedures and safety practices when installing or operating this equipment. Failure to comply can result in death, severe personal injury and equipment damage.

G102.1

WARNING

Power distribution and transmission equipment must be properly selected for the intended application. It must be installed and serviced by competent personnel who have been trained and understand proper safety procedures. These instructions are written for such personnel and are not a substitute for adequate training and experience in safety procedures. Failure to properly select, install or maintain power distribution and transmission equipment can result in death, severe personal injury, and equipment damage.

G122.3

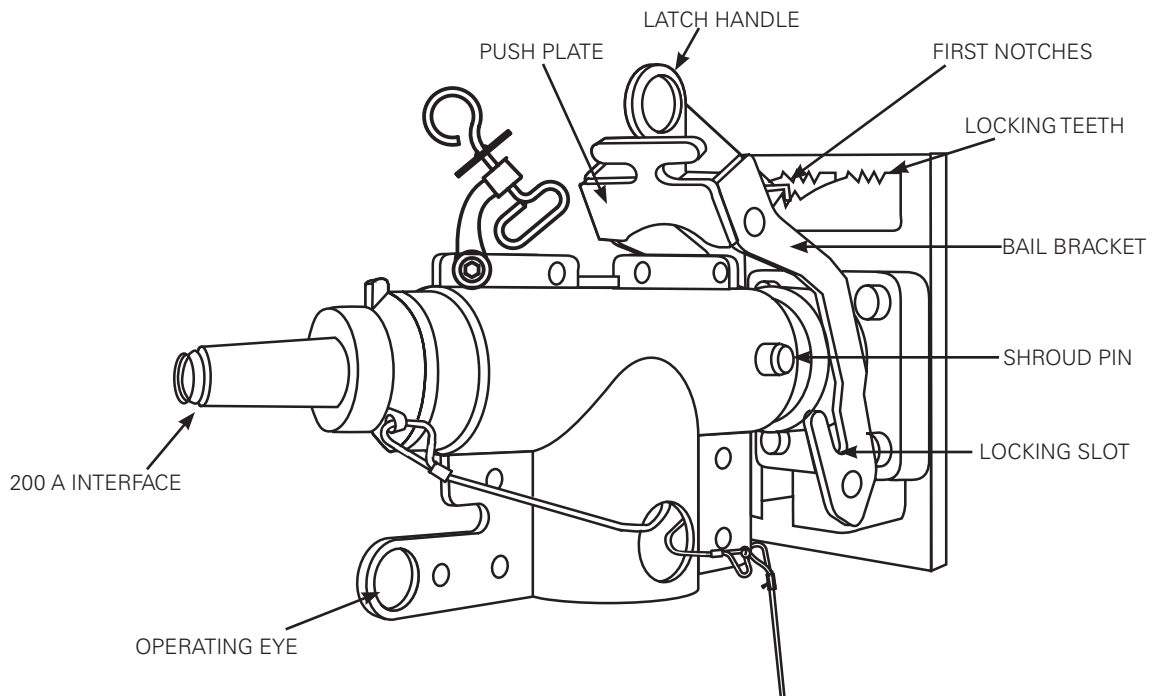


Figure 1. Line drawing showing 15 kV 600 A PUSH-OP bushing adapter cap.

⚠ WARNING

The 600 A 15, 25 and 35 kV PUSH-OP bushing adapter cap is designed to be operated in accordance with normal safe operating procedures. These instructions are not intended to supersede or replace existing safety and operating procedures. Terminators must be de-energized during operation or maintenance. Visible break and adequate grounding must be provided before cable work proceeds. (Ensure that the component is rated for the intended application before it is installed.)

The bushing adapter cap should be installed and serviced only by personnel familiar with good safety practice and the handling of high-voltage electrical equipment. Failure to comply may result in death, severe personal injury or equipment damage.

⚠ WARNING

All associated apparatus must be de-energized during installation and/or maintenance. Failure to comply may result in death, severe personal injury or equipment damage.

Product Information

Introduction

Eaton's Cooper Power™ series 600 A, 15, 25, and 35 kV PUSH-OP™ bushing adapter cap is a factory assembled load reducing tap plug (LRTP) and bushing extender unit. It is used to convert a 600 A deadbreak interface to a 200 A loadbreak interface* allowing for safe testing and grounding. It has electrical characteristics identical to those of the LRTP. Used with Eaton's Cooper Power series 200 A insulated protective cap, M.O.V.E. arrester, grounding elbow or loadbreak elbow connector, a bushing adapter provides a fully shielded, submersible unit that meets the requirements of IEEE Std 386™-2006 standard.

* Switching rating limited to single-phase 21.1 kV.

Read This Manual First

Read and understand the contents of this manual and follow all locally approved procedures and safety practices before installing or operating this equipment.

Additional Information

These instructions cannot cover all details or variations in the equipment, procedures, or process described nor provide directions for meeting every possible contingency during installation, operation, or maintenance. For additional information, contact your Eaton representative.

Acceptance and Initial Inspection

Each PUSH-OP bushing adapter cap is in good condition when accepted by the carrier for shipment. Upon receipt, inspect the shipping container for signs of damage. Unpack the PUSH-OP bushing adapter cap and inspect it thoroughly for damage incurred during shipment. If damage is discovered, file a claim with the carrier immediately.

Handling and Storage

Be careful during handling and storage of the PUSH-OP bushing adapter cap to minimize the possibility of damage. If the PUSH-OP bushing adapter cap is to be stored for any length of time prior to installation, provide a clean, dry storage area.

Standards

ISO 9001 Certified Quality Management System

Installation instructions

PUSH-OP bushing adapter cap kit

- Each kit contains:
 - Bushing Adapter
 - Silicone Lubricant
 - Installation Instructions
 - 200 A Loadbreak Protective Cap (Optional)

Equipment required

- Tools:
 - Torque Wrench (Catalog Number 15/25 kV - TQHD625, 35 kV - TQHD635)
 - T-Wrench (Catalog Number T-WRENCH)
 - O & T Tool (Catalog Number 15 kV - OT615, 25 kV - OT625, 35 kV - OT635)
 - Combined O & T/Torque Tool (Catalog Number 15 kV - OTTQ615, 25 kV - OTTQ625, 35 kV - OTTQ635)

Note: If Combined O & T Tool is used, a separate O & T tool and torque wrench is not required.

Step 1.

Clean and lubricate

- Clean and lubricate 600 A and 200 A interfaces of PUSH-OP bushing adapter cap with lubricant supplied or approved equivalent.
- Clean and lubricate mating surface of PUSH-OP bushing.

Step 2.

Ground

- Attach drain wire to system ground bus.

Step 3.

Assemble to apparatus bushing

- Grasp operating eye on bushing adapter with hotstick and pull eye completely into hotstick.
- Place bushing adapter cap on PUSH-OP apparatus bushing, engaging shroud pins in bail bracket locking slots, and push until latch plate engages first notches.
- Release operating eye from hotstick.
- Push forward on push plate until a bump is felt and latch plate engages locking teeth.
- Pull on push plate with hotstick to ensure latch plate is engaged.
- Use hotstick to hook catch strap on push plate slots.

Step 4

Install mating apparatus

- Clean and lubricate 200 A interface of mating apparatus (e.g. insulated protective cap, grounding elbow, M.O.V.E. arrester).

Bushing adapter cap removal process

- Remove mating apparatus from bushing adapter using a hotstick.



WARNING

Test for voltage by fuzzing or by using voltage detector. Do not proceed until bushing is de-energized. Failure to comply may result in death, severe personal injury or equipment damage.

- Ensure that catch strap is hooked on push plate.
- Grasp latch handle of PUSH-OP bushing using hotstick and pull backward until bushing adapter is completely unsealed.
- Remove bushing adapter cap by unhooking catch strap ring with hotstick. Place bushing adapter in clean protected area.



Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

Eaton's Power Systems Division
2300 Badger Drive
Waukesha, WI 53188
United States
Eaton.com/cooperpowerseries

© 2017 Eaton
All Rights Reserved
Printed in USA
Publication No. MN650050EN
May 2017

Eaton is a registered trademark.

All trademarks are property
of their respective owners.

For Eaton's Cooper Power series product
information call 1-877-277-4636 or visit:
www.eaton.com/cooperpowerseries.