
Fusing Equipment Catalog Data CA132029EN

Effective December 2015 Supersedes July 2015

ELSP fuse holder

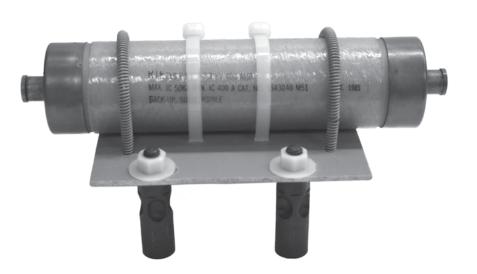

General

Eaton's Cooper Power™ series ELSP fuse holder is used to support the ELSP oil immersible current-limiting fuses, where the fuses are rated 23 kV and below.

COOPER POWER SERIES

The support assembly consists of a polyglass board and four nylon spacers attached with nylon nuts. The fuse is fastened to the board by means of two stainless steel tie-downs and two nylon ty-raps. Experience has shown that this combination of fuse ties provides the best insurance that the fuse will remain stationary and secure during shipment of the apparatus.

The ELSP fuse and holder are easily mounted inside the transformer. The fuse holder may be mounted anywhere there is space and in any position. Good design practice dictates that the fuse be located as near as practical to the incoming primary bushing.

Installation

The fuse is mounted on the board using springs and ties. The nylon spacers are then mounted on welded-in studs or with bolts on a bracket or crossbar. The board assembly with fuse is positioned over the four spacers and tightened with the nylon nuts. The leads are connected to each end of the fuse using a ¼ inch crimped terminal lug. Refer to *Service Information MN132001EN ELSP Current-Limiting Backup Fuse Installation Instructions* for details.



Features and detailed description

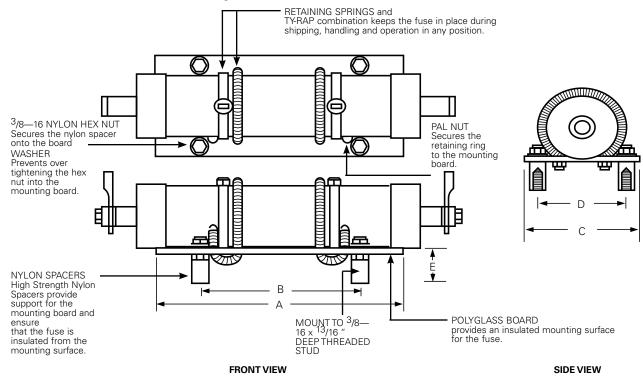


Figure 1. Front and side views of fuse holder showing dimension.

Note: Dimensions given are for reference only.

Powerina Business Worldwide

Table 1. ELSP Fuse Holder Dimensional Information

	Dimensions					
Holder Type	Α	В	С	D	Е	
2" dia Single	6.0	3.00	5.0	4.13	2.1	
	(152)	(76)	(127)	(105)	(53)	
2″ dia. Parallel and	9.0	5.98	7.0	5.92	2.1	
3″ dia. Single	(229)	(152)	(178)	(150)	(53)	

Ordering information

To order the ELSP fuse holder, specify the fuse holder required from Table 2.

Table 2. ELSP Fuse Holder

Description	Catalog Number
Single Fuse Holder (2" dia. fuse)	3409661C05M
Parallel Fuse Holder (2" dia. fuse)	3409661C07M
Single Fuse Holder (3" dia. fuse)	3409661C08M*

* Cannot be used with 38 kV fuses.

Eaton 1000 Eaton Boulevard Cleveland, OH 44122 United States Eaton.com

Eaton's Cooper Power Systems Division 2300 Badger Drive

Waukesha, WI 53188 United States Eaton.com/cooperpowerseries

© 2015 Eaton All Rights Reserved Printed in USA Publication No. CA132029EN Eaton is a registered trademark.

All other trademarks are property of their respective owners.

For Eaton's Cooper Power series product information call 1-877-277-4636 or visit: www.eaton.com/cooperpowerseries.