### Pole line hardware

#### Cross-arm insulator pin (DP)

For supporting line wires, leads, and jumpers on poles and cross-arms.

#### Pole-top insulator bracket (DC)

#### **Ovaleye bolt (DF)**

For pole-top mounting of distribution post-type insulators.

#### NEMA<sup>®</sup> D bracket (DM)

Used to mount electrical equipment to the pole.

Cutouts mounted with

NEMA "B" brackets.

#### Square washer and bolt (DF)

Used with bolts on poles and cross-arms.

#### Oval eyenut (DG)

For attaching guy strands and deadends to the pole.

#### Single-strand eyenut (DG)

For attaching guy strands and deadends to the pole.

> Utility pole with poletop insulator pins and pole eye plates.

#### Pole eye plate (DG)

Used for guying or dead-ending.



#### Insulator clevis (DC)

For secondary takeoffs or dead-ending at pole or cross-arm.

Utility pole showing insulator clevises.

#### Adjustable band clamp (DG)

Provides attachment points for guys and suspension insulators.

#### Guy hook (DG)

Provides attachment points for guys and suspension insulators.

### Suspension/guy clamp (DJ)

Used for attaching suspension or guy wires to the pole.



For pole-top mounting of distribution post-type insulators.

#### NEMA<sup>®</sup> B bracket with backstrap (DM)

Used to mount electrical equipment to the pole, such as arresters and cutouts. Backstrap aids in attaching brackets to the pole.

Utility pole with numerous insulator pins and cutouts with NEMA "B" brackets.

#### Machine bolt with nut (DF)

For attaching hardware to the pole and cross-arm.

# COOPER POWER SERIES



0

## FAT•N

Powering Business Worldwide

## **Electrical distribution**

Eaton's Cooper Power<sup>™</sup> series overhead electrical distribution equipment has a long history of quality and reliability. Through advanced engineering and support these products have provided utilities with decades of service.

© 2015 Eaton, All Rights Reserved, Printed in USA, Publication No. PT325001EN, August 2015