 
 


Installation Instructions for: Battery Heater Kit


This kit contains:



1 x Heater PCB Assy



1 x Heat Transfer Pad

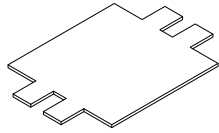

1 x Insulation Pad



1 x Replacement Battery Label

1

Remove battery from luminaire.
Remove protective film from both sides of the heat transfer pad and fit to the top of the battery

NOTE: Battery orientation

2

Position Heater PCB on top of the heat transfer pad

NOTE: PCB orientation

3

Fit the insulation pad around the PCB and battery, ensure all the surface is firmly stuck down

4

Fit the battery pack back into the luminaire and connect the leads on to the PCB


Affix new battery label to battery pack

Installation Instructions for: Battery Heater Kit


This kit contains:



1 x Heater PCB Assy

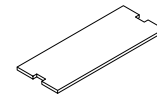

1 x Heat Transfer Pad

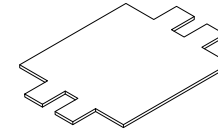

1 x Insulation Pad



1 x Replacement Battery Label

1

Remove battery from luminaire.
Remove protective film from both sides of the heat transfer pad and fit to the top of the battery

NOTE: Battery orientation

2

Position Heater PCB on top of the heat transfer pad

NOTE: PCB orientation

3

Fit the insulation pad around the PCB and battery, ensure all the surface is firmly stuck down

4

Fit the battery pack back into the luminaire and connect the leads on to the PCB

Affix new battery label to battery pack