



- 1 - START PUSHBUTOTN
- 2 - STOP PUSHBUTTON
- 3 - EPCT FIRE TOUCH SCREEN CONTROLLER
- 4 - USB PORT
- 5 - MAIN POWER SWITCH
- 6 - MSH EMERGENCY START HANDLE
- 7 - RECOMMENDED CABLE ACCESS BOTTOM ONLY

**NOTES:**

- 1 - DIMENSIONS: in[mm]
- 2 - ALL ENCLOSURE FINISHED IN RED