


QUICK SETUP


The Quick Setup menu allows programming of the Time, Date, Start Pressure, Stop Pressure and Minimum Run Timer.

NOTE: Before applying power to the controller, ensure the Motor Circuit Protector or Motor Overload Trip Setting are set to match the motor nameplate full load amps.

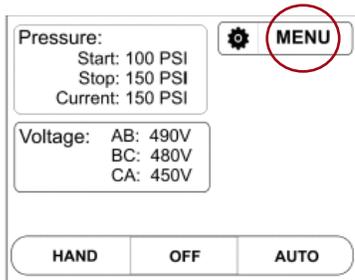

START

Press the **MENU** button on the top right of the Main Display Screen.
This will advance the screen to the MENU 1/3 screen.

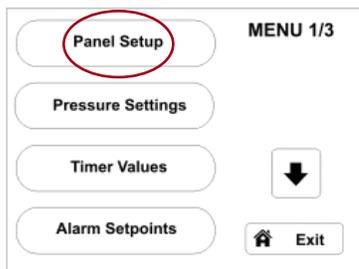

PANEL SETUP

Press the **Panel Setup** button.
This will advance the screen to the PANEL SETUP screen 1/2.



QUICK SETUP

Press the **Quick Setup** button.
This will advance the screen to the **Quick Setup** screen for setting the Time of Day.



SET TIME

The time of day is set in 24 Hour format.
Using the number buttons, enter the current time of day.
Pressing the **Arrow** button will delete values one character at a time.
Once the time of day is programmed, press the Next button.
This will advance the screen to the Quick Setup screen for setting the date.

*NOTE: If programming is interrupted for longer than one minute, or the Cancel button is pressed during programming, all values entered in the Quick Setup program will return to the previously entered values. If the controller has no values entered (first time setup), the values will return to the factory default settings.

(For details, download the JOCKEY Touch™ Operation Manual from our website: www.chfire.com)

Quick Setup programming instructions are continued on the back of this page.





SET DATE

The date is set in MM/DD/YY format.

Using the number buttons, enter the current date.

Pressing the **Arrow** button will delete values one character at a time.

Once the date is programmed, press the **Next** button.

This will advance the screen to the Quick Setup screen for setting the Start Pressure.

Pressing the **Cancel** button will return the display to the Panel Setup 1/2 screen.

All Quick Setup values must be re-entered.



START PRESSURE

The pressure is set in PSI format.

(To set in BAR format, refer to the JOCKEY Touch™ Operation Manual.)

Using the number buttons, enter the start pressure.

Pressing the **Arrow** button will delete the pressure values one character at a time.

Once the pressure is programmed, press the **Next** button.

Pressing the **Cancel** button will return the display to the Panel Setup 1/2 screen.

All Quick Setup values must be re-entered.



STOP PRESSURE

The pressure is set in PSI format.

(To set in BAR format, refer to the JOCKEY Touch™ Operation Manual.)

Using the number buttons, enter the stop pressure.

Pressing the **Arrow** button will delete the pressure values one character at a time.

Once the pressure is programmed, press the **Next** button.

Pressing the **Cancel** button will return the display to the Panel Setup 1/2 screen.

All Quick Setup values must be re-entered.



MINIMUM RUN TIMER

The minimum run time can be set up to 999 seconds.

The timer can be disabled by pressing the  button.

To re-enable the timer, press the **Arrow** button.

(The timer values are erased and must be re-entered).


Using the number buttons, enter the minimum run time.

Pressing the **Arrow** button will delete the timer values one character at a time.

Once the minimum run time is programmed, press the **Next** button.

Pressing the **Cancel** button will return the display to the Panel Setup 1/2 screen.

All Quick Setup values must be re-entered.

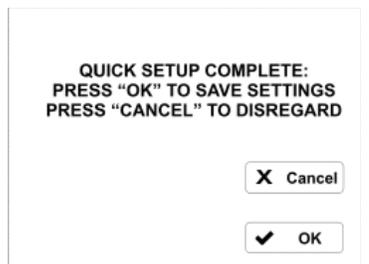

SETUP COMPLETE

Once all the functions have been set, press the OK button.

The display will return to the Main Display Screen.

Pressing the **Cancel** button will return the display to the Panel Setup 1/2 screen.

All Quick Setup values must be re-entered.

