



LMR Plus Electric Fire Pump Controllers System Configuration Programming Menu

Instructions for programming the LMR Plus electric fire pump controllers system configuration menu.

Press the MENU button.

If a Password has been enabled – enter password.

Press the Down arrow key until the words SYSTEM CONFIGURATION appear on the second line of the controller. (This line will have the symbol > in front of the text).

Press the Ack. button.

You will be prompted to enter a password to access the system configuration section of the menu.

Press the buttons: Down, Up, Reset, Lamp Test in sequence.

Refer to the System Configuration Programming Menu for programming.

