

## **VoCALL 16 Master Panel**

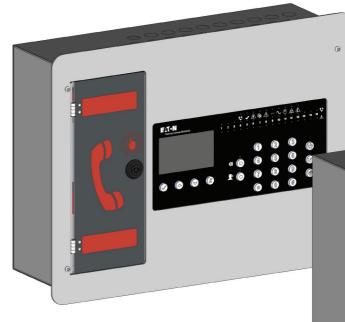


Step 6

Connect battery. Recommended battery: 2 x Yuasa NP12-12

Step 8 Assemble the unit

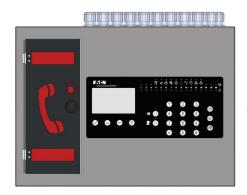


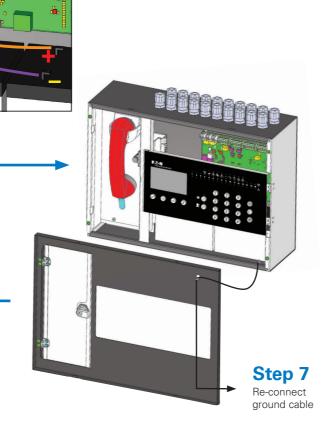

Flush mount process

Step 1

Re-connect ground cable

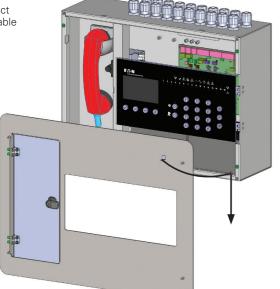

Flush Mount Bezel

AT•N E Powering Business Worldwide

EATON Installation Instructions

Step 2 Assemble Screws

www.cooperfire.com www.eaton.com Made in Romania



Changes to the products, to the information contained in this document, and to prices are reserved; so are errors and omissions. Only order confirmations and technical documentation by Eaton is binding. Photos and pictures also do not warrant a specific layout or functionality. Their use in whatever form is subject to prior approval by Eaton. The same applies to Trademarks (sepscially Eaton, Moeller, and Cutler-Hammer). The Terms and Conditions of Eaton apply, as referenced on Eaton Internet pages and Eaton order confirmations.

Eaton Industries Manufacturing GmbH EMEA Headquarters Route de la Longeraie 7 1110 Morges, Switzerland Eaton.eu

Manufactured by Eaton Electrical Systems Limited. Wheatley Hall Rd Doncaster South Yorkshire, DN2 4NB Eaton.uk.com Tel. +44 (0) 1302 303 350 © 2018 Eaton All Rights Reserved Publication No. 25-13905-B CSSC-1710-4860 May 2018


Eaton is a registered trademark. All other trademarks are property of their respective owners.






Product Number	Description
MX16	VoCALL 16 Master Panel
MX16-SSC	VoCALL 16 Master Panel Stainless Front Pack
Finish & Mounting	Gray; Surface, Flush (Stainless Steel)
Cabling	Enhanced FP200 2X2 / 4X1 Core; 1.5 sg mm
Configuration & Distance	Loop Configuration; Maximum distance between two panels- 300 m Maximum distance between two OS - 200 m Maximum distance between panel and OS - 200 m
Dimension	W 488 X H 355 X D 155 mm (Wall – mount) W 522 X H 390 mm (Bezel)
Weight	6.7 Kg – excluding battery
Knockouts	20 x 20 mm dia at top W 114 X H 37 mm at rear

Step 1 Open screws to remove top cover. Lift up the cover. Push back to open. Disconnect ground cable. Step 5 Wiring Instructions.

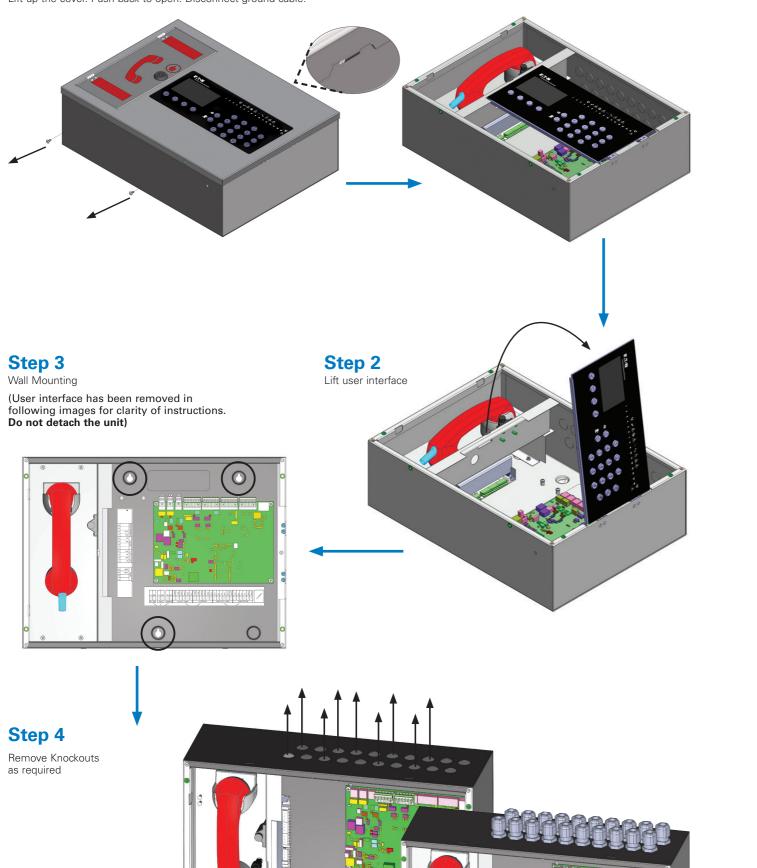

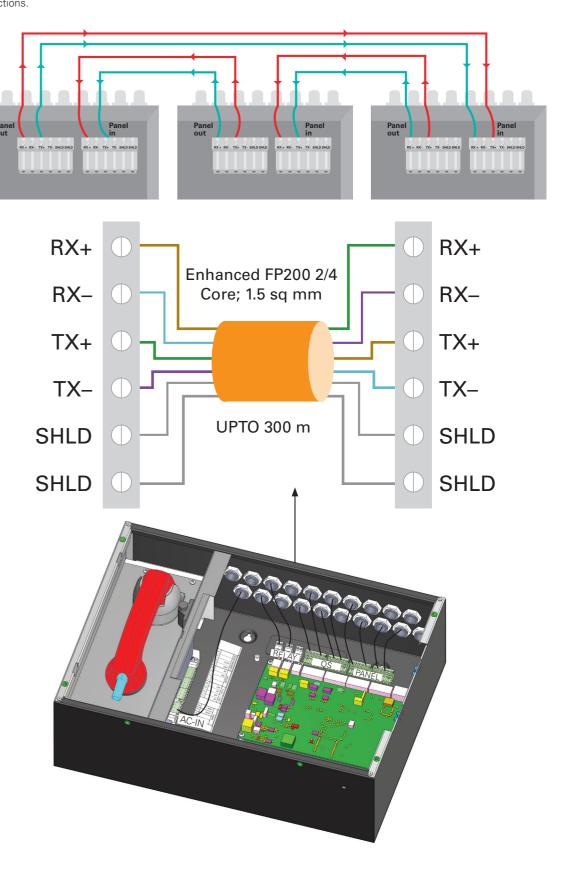

2