 


RS Enclosure airflow management

For applications where the hot/cold aisle seal is required, Eaton offers flexible air dam kits for 600 mm wide enclosures. For 800 mm wide enclosures, Eaton offers vertical blanking panels and brush strips, featuring tool-less installation.

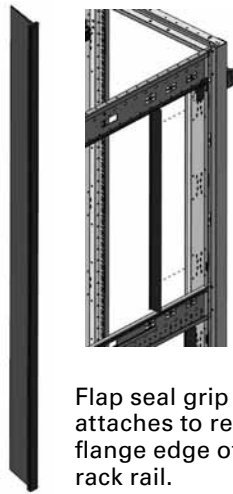

Flap seal grip edge attaches to rear flange edge of the rack rail.

Grip Seal

600 mm Enclosure Air Dam kit includes:


- Four grip seals
- Kits available in 42U, 45U, 48U, 52U sizes

800mm Enclosure Air Dam kit includes:


- Two vertical blanking panels, four grip seals and cable management grommets
- Kits available in 42U, 45U, 48U, 52U sizes

800mm Enclosure Vertical Brush kit includes:


- Two vertical blanking panels of 100 mm brush
- Kits available in 42U, 45U, 48U, 52U sizes

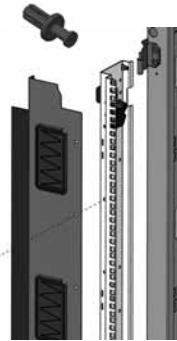


800 mm Enclosure Air Dam kit

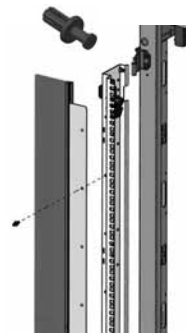

800 mm Enclosure Vertical Brush

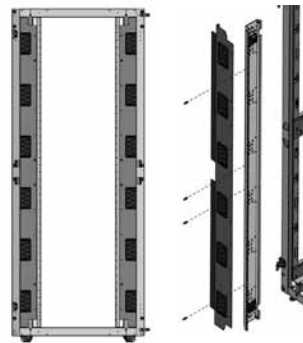

Attach to rack rail using plastic rivets.

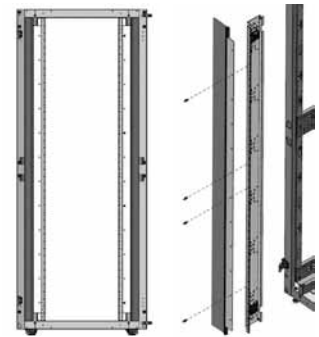

Attach to rack rail using plastic rivets.

DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY

The information, recommendations, descriptions and safety notations in this document are based on Eaton Corporation's ("Eaton") experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations and descriptions contained herein. The information contained in this manual is subject to change without notice.