


RS Anchor bracket installation

This sheet covers the installation of anchor brackets to enclosure for the use of anchoring to the data center floor.

WARNING


Anchor brackets must be attached to the site floor with appropriate hardware in order to meet the proper seismic design categories as described in the International Building Code (IBC). Please refer to Eaton support for more information. **Failure to follow this warning could result in the possibility of the enclosure tipping, causing serious injury or property damage.**

Anchor brackets may be attached to the enclosure in several ways.

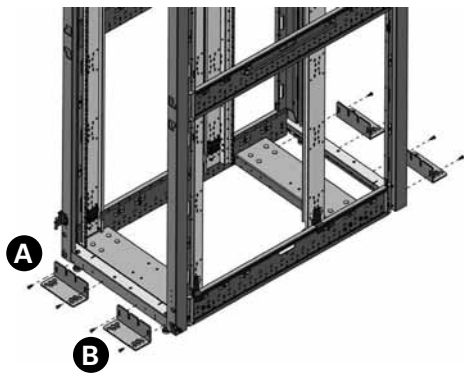

1 Exterior mounting

Attach to enclosure frame, using M6 screws, with floor flange oriented outward.

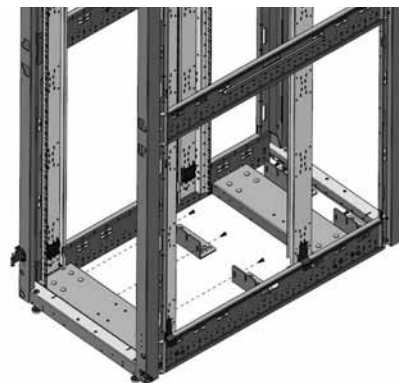

2 Interior mounting

Attach to enclosure caster brackets, using M6 screws, within the enclosure.

Anchor kit # RSANCX consists of:

- A** Four anchor brackets
- B** Eight M6 Philips head screws

Tools needed to install:

Screw gun driver with Phillips head bit.

DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY

The information, recommendations, descriptions and safety notations in this document are based on Eaton Corporation's ("Eaton") experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations and descriptions contained herein. The information contained in this manual is subject to change without notice.



Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

© 2016 Eaton
All Rights Reserved
Printed in USA
Publication No. IL159017EN
June 2016

Eaton is a registered trademark.

All trademarks are property of their respective owners.

Follow us on social media to get the latest product and support information.

