



RS Flextray™ system with mounting hardware for cable management

This document is intended to provide instructions on how to install the Flextray system to the RS Enclosure for cable management.


Vertical Flextray system installation

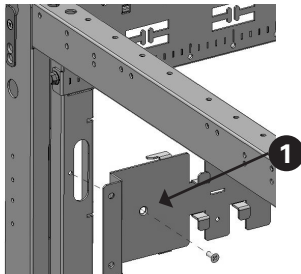

- 1 Install mounting bracket in top location on frame. Screw with #6 screw.

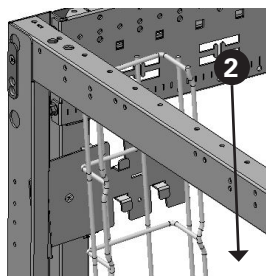


- 2 Hang Flextray wire basket on upper bracket.

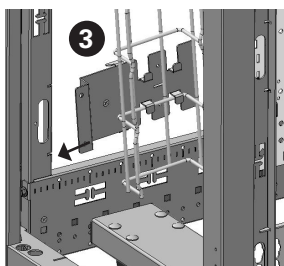


- 3 Align and hook lower bracket with bottom of Flextray system and install lower bracket into frame.

Horizontal Flextray system installation

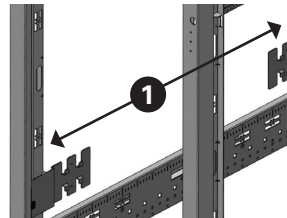


- 1 Install mounting brackets in middle locations on the frame.

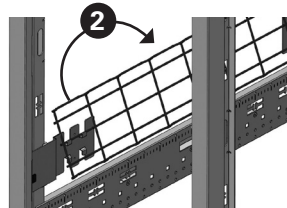

- 2 Hang Flextray wire basket on brackets, align, rotate and hook Flextray system onto bracket as shown.

Split cable retention gate kit installation

Retention gates are designed to snap onto Flextray wire basket for cable management.

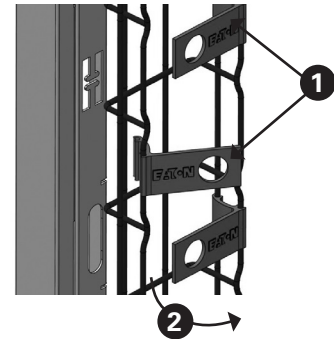

- 1 Gates come in kit of left hand and right hand and simply snap on Flextray wire.
- 2 Gates can be rotated to provide ease of access for the cables.

Flextray system kits and contents

RSCMBFTXXUXX - Vertical Flextray, 2"x 4", two mounting brackets
 RSCMFFTXXU6 - Vertical Flextray, 6" flat, two mounting brackets
 RSFFTXXXX - Horizontal Flextray, 2"x 4", two mounting brackets
 RSBFT6XXXX - Horizontal Flextray, 6" Flat, two mounting brackets
 RSCRGS10 - Kit, Split cable retention gates, 10 pieces (5LH, 5RH)

DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY

The information, recommendations, descriptions and safety notations in this document are based on Eaton Corporation's ("Eaton") experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations and descriptions contained herein. The information contained in this manual is subject to change without notice.



Eaton
 1000 Eaton Boulevard
 Cleveland, OH 44122
 United States
 Eaton.com

© 2016 Eaton
 All Rights Reserved
 Printed in USA
 Publication No. IL159007EN
 October 2018

Eaton is a registered trademark.

All trademarks are property of their respective owners.

Follow us on social media to get the latest product and support information.

