



Directional Valves Electrical Accessories

Single Solenoid Model: DF or DG*S*B - Circuit Breaker

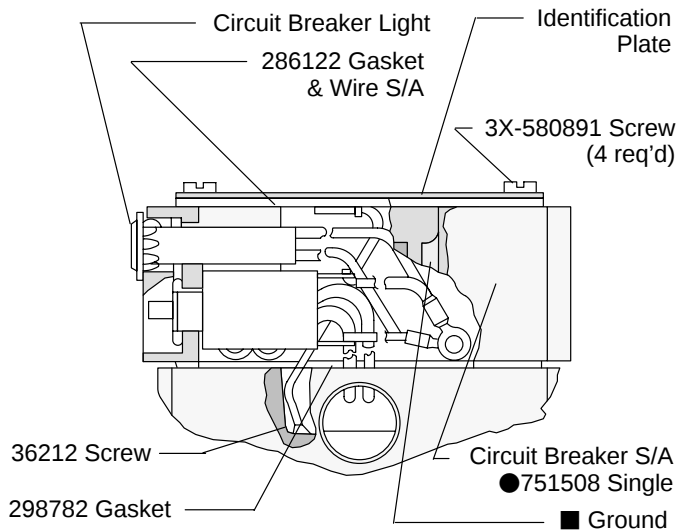


Available on Spring Offset Models only

Single Solenoid Double Solenoid requires "LWB" Model: DF or DG*S*LB Circuit Breaker & Solenoid Lights

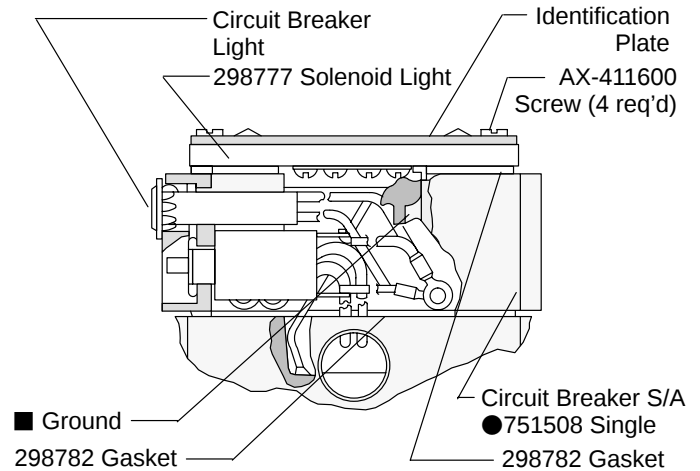


Available on Spring Offset only

▲942332 - Single/Double Solenoid Model: DF or DG*S*W-Wiring Housing

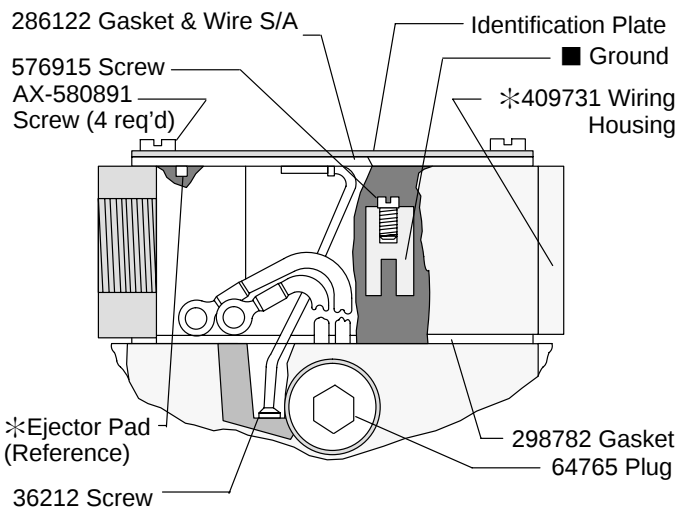

▲942335 - Single/Double Solenoid Model: DF or DG*S*LW- Solenoid Lights & Wiring Housing

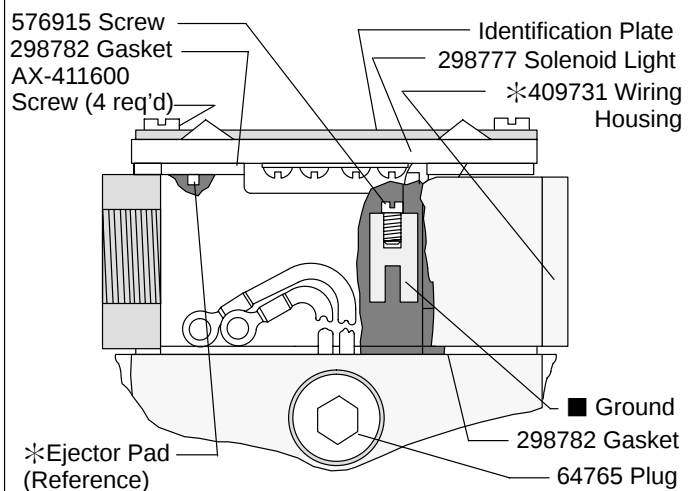

● Assemble with circuit breaker and light over solenoid.

Electrical circuit diagram is shown on underside of identification plate.


Note

Circuit breaker option is not available with wet armature solenoid valves.


■ Ground provided for #8 self-tapping screw for customer convenience. The housings may be connected together and grounded on the DG-01 body.

▲ Service kits include all parts as shown.


**Single Solenoid/Double Solenoid
Model: DF or DG*S*B -
Wiring Housing & Circuit Breaker**

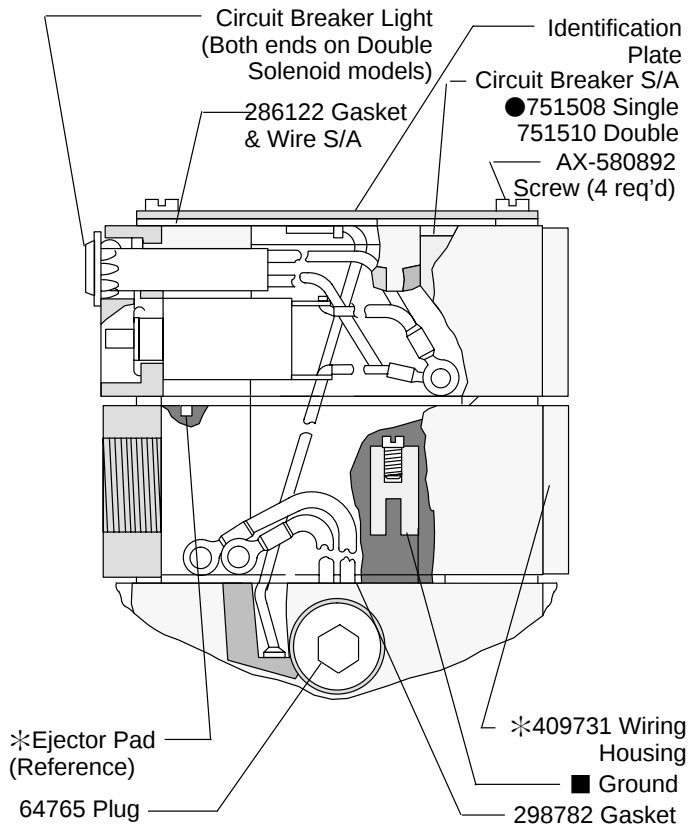

**Single Solenoid/Double Solenoid
Model: DF or DG*S*LWB - Solenoid Light
Wiring Housing & Circuit Breaker**

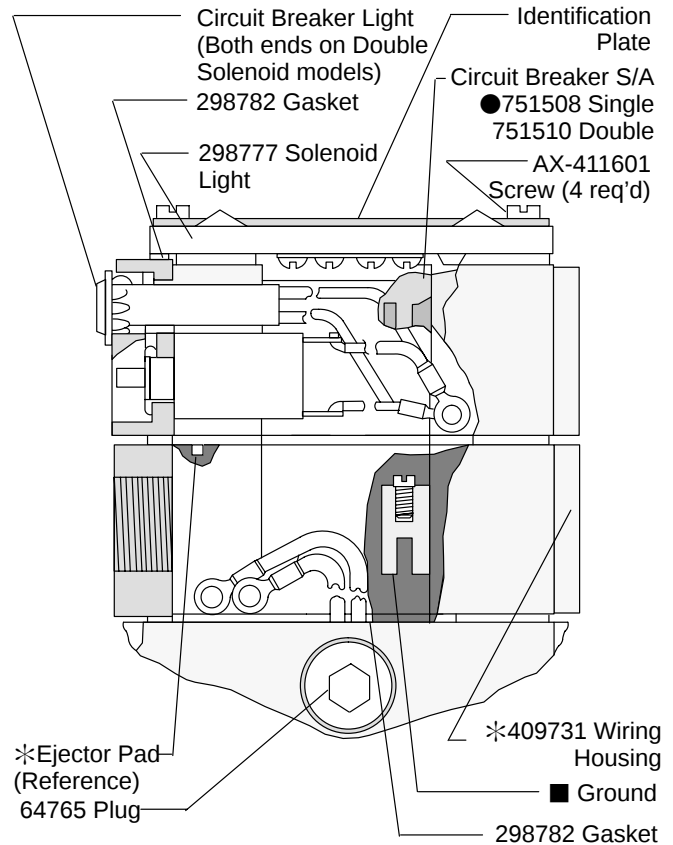

**Single/Double Solenoid
Model: DF or DG*S*WT-
Wiring Housing & Terminal Strip**

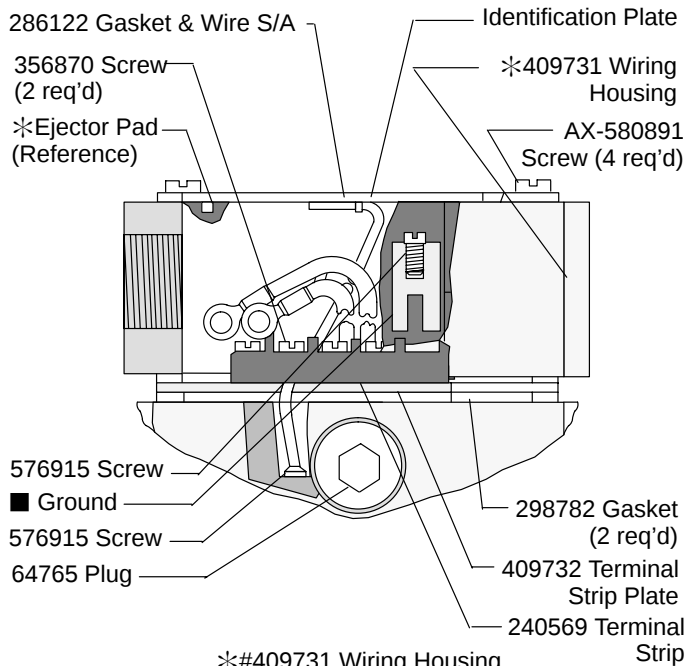

*#409731 Wiring Housing

Assemble housing with ejector pads up and with electrical conduit connection over solenoid "B". (Solenoids "A" and "B" are identified on units by diagram plate on side of pilot valve. For type "4" and "8" spools conduit connection location on end of "W" wiring housing is reversed).

**Single/Double Solenoid
Model: DF or DG*S*WTB- Terminal Strip
Wiring Housing & Circuit Breaker**

