

ARKTITE® Heavy Duty Receptacle, AR Series Model 80, Styles 1 & 2, 200/400 Ampere Addendum for 200 Amp with Mechanical Lugs Installation & Maintenance Information

COOPER Crouse-Hinds

IF 853-A

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

1. Follow "RECEPTACLE DISASSEMBLY" steps 1 through 3.
2. Follow "CABLE CONNECTION" steps 1 through 2.
3. Strip conductor insulation to the dimensions shown in Figure 4L.
4. Connect the conductors to each contact. Tighten the two set screws to 50-100 in.-lb.
5. Follow "RECEPTACLE ASSEMBLY" Steps 1 through 7.

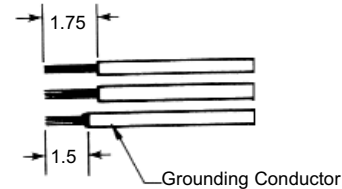


Figure 4L



WARNING

To avoid electrical shock or electrocution, plugs (with exposed contacts) must not be used as the power source, as the user may come in contact with energized contacts or other components while attaching locks or hasps in the lockout/tagout hole provision.

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Cooper Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for the intended use and assumes all risk and liability whatsoever in connection therewith.

COOPER Crouse-Hinds

Cooper Industries Inc.
Crouse-Hinds Division
PO Box 4999, Syracuse, New York 13221 • U.S.A.
Copyright© 2012, Cooper Industries, Inc.

IF 853-A
Revision 3
Revised 04/12
Supersedes 08/11

ARKTITE® Heavy Duty Receptacle, AR Series Model 80, Styles 1 & 2, 200/400 Ampere Addendum for 200 Amp with Mechanical Lugs Installation & Maintenance Information

COOPER Crouse-Hinds

IF 853-A

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

1. Follow "RECEPTACLE DISASSEMBLY" steps 1 through 3.
2. Follow "CABLE CONNECTION" steps 1 through 2.
3. Strip conductor insulation to the dimensions shown in Figure 4L.
4. Connect the conductors to each contact. Tighten the two set screws to 50-100 in.-lb.
5. Follow "RECEPTACLE ASSEMBLY" Steps 1 through 7.

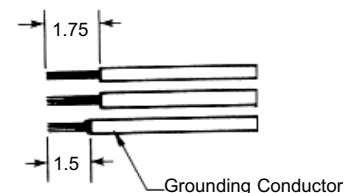


Figure 4L



WARNING

To avoid electrical shock or electrocution, plugs (with exposed contacts) must not be used as the power source, as the user may come in contact with energized contacts or other components while attaching locks or hasps in the lockout/tagout hole provision.

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Cooper Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for the intended use and assumes all risk and liability whatsoever in connection therewith.

COOPER Crouse-Hinds

Cooper Industries Inc.
Crouse-Hinds Division
PO Box 4999, Syracuse, New York 13221 • U.S.A.
Copyright© 2012, Cooper Industries, Inc.

IF 853-A
Revision 3
Revised 04/12
Supersedes 08/11