

ENGLISH
WFD30-WI-FI SMART UNIVERSAL DIMMER FOR DIMMABLE LED/CFL/INC/MLV/ELV/HAL/FLR

- WARNINGS AND CAUTIONS:**
- Turn OFF circuit breaker or remove fuse(s) and test that power is OFF before installation process.
 - Never wire any electrical device with power turned ON. Wiring dimmer HOT may cause permanent damage to dimmer and void warranty.
 - If you are not sure about any part of these instructions, please contact a licensed electrician.

 
 
IMPORTANT: Wi-Fi Smart Universal Dimmer will not work or will be damaged if wired incorrectly and warranty will be voided. Refer to wiring instructions provided.

- CAUTION**
- Use only with 120V/AC 60 Hz.
 - Do not exceed maximum rating of dimmer as indicated on the device.
 - Must be installed and used in accordance with all national and local electrical codes.
 - If a bare copper or green ground connection is not available in the wallbox, contact a licensed electrician for installation.
 - Use only #14 or #12 copper wire rated for at least 75° C with these devices. **DO NOT USE WITH ALUMINUM WIRE.**

NOTE: The Wi-Fi Smart Universal Dimmer is wired directly to the light fixture. For Multi-location applications (3-Way or 4-Way), the Accessory Dimmer (WACD) or a regular 3-Way switch with one Wi-Fi Smart Universal Dimmer can be used.


WI-FI SMART UNIVERSAL DIMMER INSTALLATION INSTRUCTIONS: GETTING STARTED

Download the Amazon Alexa App and use the quick start guide provided to start the installation process. The LED indicator will stop blinking once the device is added to the Amazon Alexa App.

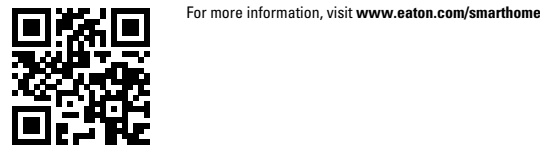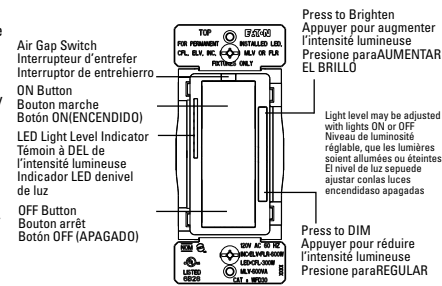


- OPERATION INSTRUCTIONS**
- Press ON button to turn lights ON at previously selected level.
 - Press OFF button to turn lights OFF.
 - The bottom LED indicates the dimmer is turned ON.
 - When lights are OFF, press and hold the ON button for 2 seconds for full brightness.
 - When the lights are ON, press and hold the OFF button for 2 seconds until the LED indicator blinks. After a 10 second delay, the lights will fade off.

 - FACTORY RESET:** The dimmer can be reset which will exclude the device from its network and restore all factory defaults.
- Turn ON the dimmer
 - Press and hold the ON button for 30 seconds until the LED indicator blinks for the fourth time.
 - Release the button
 - LED indicator will start flashing fast while it is being reset
 - The LED indicator will then start blinking at a normal rate indicating the dimmer is not part of a Wi-Fi network

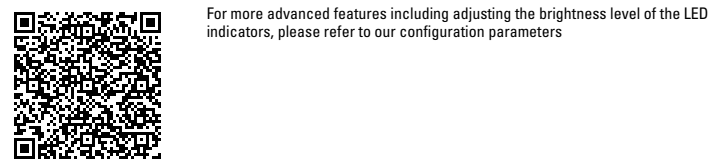


DIMMER RATING	Load Type	Single Gang	2-Gang	3-Gang
WFD30	INC/ELV/FLR/HAL/MLV	600W	500W/VA	400W/VA
	CFL/LED	450W	450W	400W/VA

 
Single Location Control Installation (requires one Wi-Fi smart universal dimmer)
Installation de la commande à un emplacement unique (un gradateur intelligent universel Wi-Fi requis)
Instalación de control de ubicación única (requiere regulador de iluminación inteligente universal Wi-Fi de luz)

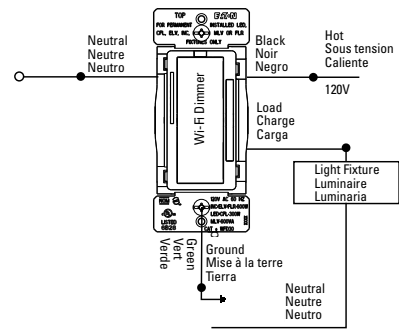

 Two Location Control Installation (requires one Wi-Fi smart universal dimmer and one Accessory)
Installation de la commande à deux emplacements (un gradateur intelligent universel Wi-Fi requis)
Instalación de control de dos ubicaciones (requiere regulador de iluminación inteligente universal Wi-Fi de luz)

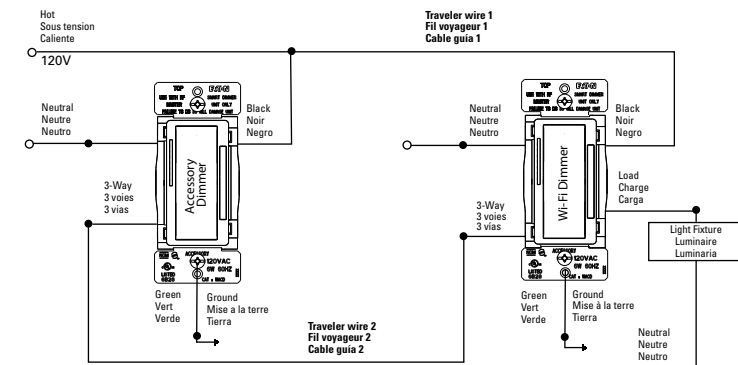


 Multiple Locations Using Several Accessory Dimmers (WACD)
Emplacements multiples liés à plusieurs gradateurs auxiliaires (WACD)
Múltiples ubicaciones con varios reguladores complementarios (WACD)

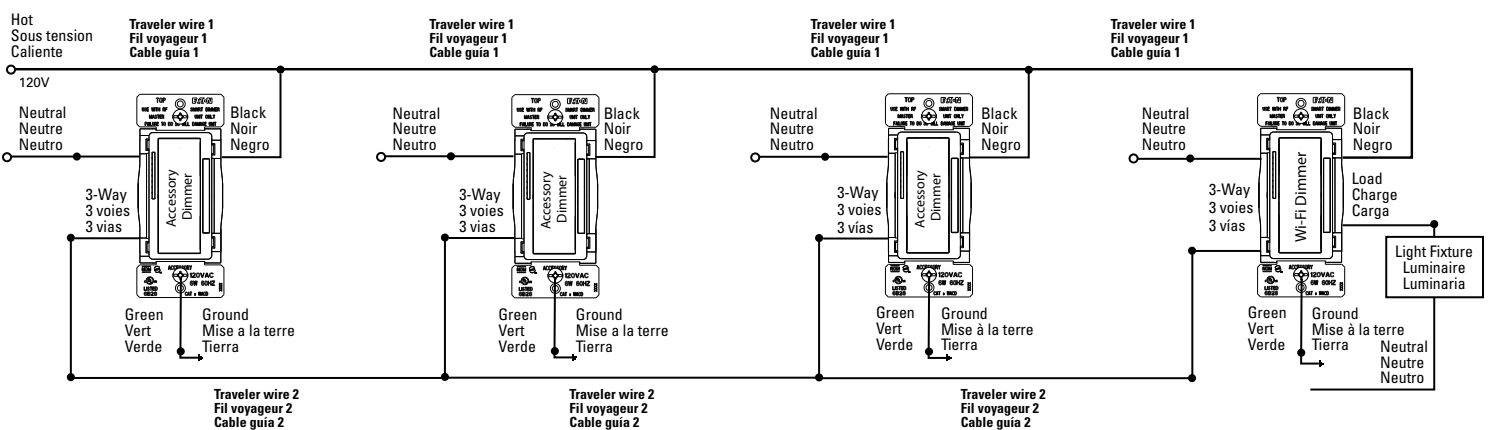

ENGLISH
WFD30-WI-FI SMART UNIVERSAL DIMMER FOR DIMMABLE LED/CFL/INC/MLV/ELV/HAL/FLR

 - Two Location Control Using a 3-Way Switch (requires one Wi-Fi smart universal dimmer and one standard 3-way switch)**
Commande à deux emplacements liée à un interrupteur à 3 voies (nécessite un gradateur universel intelligent Wi-Fi et un interrupteur à 3 voies standard)
Control de dos ubicaciones mediante un interruptor de 3 vias (requiere un atenuador universal inteligente Wi-Fi y un interruptor estándar de 3 vias)

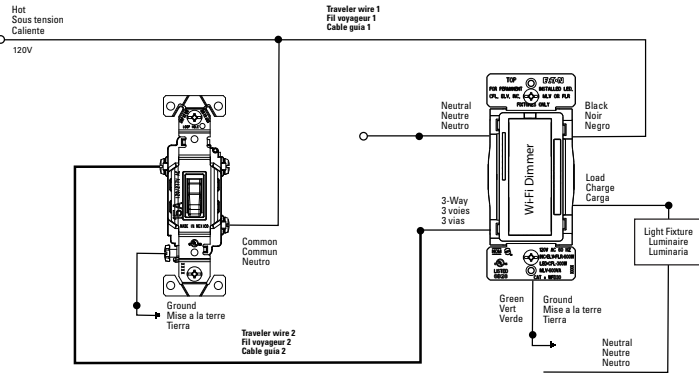

WI-FI SMART UNIVERSAL DIMMER COLOR CHANGE KIT INSTRUCTIONS
INSTRUCTIONS POUR LA TROUSSE DE CHANGEMENT DE COULEUR DU GRADATEUR INTELLIGENT UNIVERSEL WI-FI
INSTRUCCIONES DEL KIT DE CAMBIO DE COLOR DEL REGULADOR

- STEP 1:** Pull out the air gap switch at the top of the device and then squeeze the top tabs on both sides of the device.
ÉTAPE 1 : Retirer l'interrupteur d'entrefer sur le dessus de l'appareil, puis serrer les languettes supérieures des deux côtés.
PASO 1: Tire del interruptor de entreferro en la parte superior del dispositivo y, a continuación, encaja las pestañas superiores de ambos lados del dispositivo.
- STEP 2:** Pull faceplate off
ÉTAPE 2 : Retirer le plateau de montage.
PASO 2: Retire la placa frontal
- STEP 3:** Line up all tabs and snap the faceplate on and push the air gap switch in.
ÉTAPE 3 : Aligner toutes les languettes, encliquer le plateau de montage et pousser l'interrupteur d'entrefer vers l'intérieur.
PASO 3: Alinee todas las pestañas y encaja la placa frontal; luego, presione el interruptor de entreferro hacia dentro.

- NOTE:** Not all products include color change kits.
REMARQUE : Certains produits ne comprennent pas de trousse de
NOTA: No todos los productos incluyen kits de cambio de color. changement de couleur.

Symptom	Possible Cause	Solution
Device does not function. The LEDs indicators are OFF	A) Circuit breaker is OFF or tripped B) Air Gap switch on the dimmer is pulled out to the OFF position C) Improper wiring D) Defective dimmer	A) Turn ON the circuit breaker B) Push in the Air Gap switch on the dimmer C) Check and correct wiring D) Replace dimmer
Erratic operation or flickering LEDs.	A) Loose wiring connections B) Low dim setting	A) Check wiring and follow instructions provided with the device B) Set minimum brightness to a higher level
Lights turn ON after long delay	A) Rapid start feature is disabled B) Low dim setting	A) Enable rapid start feature B) Set minimum brightness to a higher level
Device functions normally using the dimmer push buttons but not from Amazon Alexa App. One of the LED indicators blinks ON and OFF about once per second	A) Dimmer is not included in the Wi-Fi network B) No Wi-Fi signal	A) Include the dimmer in the Wi-Fi network using Amazon Alexa App B) Check that the router is functioning properly C) Go through the Factory Reset procedures and re-add the device to the Amazon Alexa App.
Device functions normally both locally and from the Amazon Alexa App but can't be controlled from the accessory dimmer (WACD)	A) The 3-Way wire is not connected	A) Refer to the wiring connection and check if the 3-Way wire is connected
Dimmer is warm to touch after a period of time	A) This is normal if the load is within the dimmer limits	A) No action required

FCC STATEMENT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1: This device may not cause harmful interference, and
2: This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
FCC CAUTION: Any changes or modifications not expressly approved by Eaton Wiring Devices could void the user's authority to operate the equipment.

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:
(1) This device may not cause interference; and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

BEFORE INSTALLATION!
EATON WIRING DEVICES LIMITED 2 YEAR WARRANTY
Eaton Wiring Devices warrants its Dimmer to be free of defects in materials and workmanship in normal use and service for a period of two years from date of original purchase. THIS TWO (2) YEAR LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS, OR LIABILITIES, EXPRESSED OR IMPLIED (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE THAT IS IN DURATION IN EXCESS OF TWO YEARS FROM THE DATE OF ORIGINAL CONSUMER PURCHASE). NO AGENT, REPRESENTATIVE, OR EMPLOYEE OF EATON HAS AUTHORITY TO INCREASE OR ALTER THE OBLIGATIONS OF EATON UNDER THIS WARRANTY. To obtain warranty service for any properly installed Eaton Dimmer that proves defective in normal use send the defective Dimmer prepaid and insured to Quality Control Dept., Eaton Wiring Devices, 203 Cooper Circle, Peachtree City, GA 30269; in Canada: Eaton Wiring Devices, 5925 McLaughlin Road, Mississauga, Ontario L5R 1B8. Eaton will repair or replace the defective unit, at its option. Eaton will not be responsible under this warranty if examination shows that the defective condition of the unit was caused by misuse, abuse, improper installation, alteration, improper maintenance or repair of damage in shipment to Eaton. EATON SHALL HAVE NO RESPONSIBILITY FOR INSTALLATION OF THE DIMMER, OR FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR ANY SPECIAL, INCIDENTAL, CONTINGENT, OR CONSEQUENTIAL DAMAGES OF ANY KIND, RESULTING FROM DEFECTS IN THE DIMMER OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THE EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY CONTAINED HEREIN IS THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT AT EATON'S OPTION. IMPLIED WARRANTIES (IF ANY) INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. IN NO CASE SHALL EATON'S LIABILITY UNDER ANY OTHER REMEDY PRESCRIBED BY LAW EXCEED THE PURCHASE PRICE. Some states do not allow the exclusion or limitation of incidental or consequential damages or allow disclaimers or modifications of or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some Canadian provinces do not allow exclusion or variation of implied warranties so that some or all of the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state and province to province. Read enclosed instructions carefully. If you have any questions concerning use or care of this product, please write: Consumer Service Division, Eaton Wiring Devices, 203 Cooper Circle, Peachtree City, GA 30269.

Folding and Printing Instructions-
Document Dimensions: 8.5" W x 11" H
2-sided printing, Accordion fold in fourths
logo at top, fold in fourths again.

Final Size: 2.25" W x 2.75" H