

For videos and
other information
on How to Use your
Wi-Fi Smart device visit:
eaton.com/smarthome



How to
install your
Wi-Fi Smart
Device

***"Alexa, turn
on the lights."***

Get your Wi-Fi Smart Device running in 3 easy steps!

Step 1 Install your Wi-Fi Smart Device per the instructions in the box

Step 2 Download the Amazon Alexa App via the App Store



Step 3 Add your device to the Amazon Alexa App in a few easy steps

a) Double tap the ON button on the Wi-Fi Smart Device to begin the installation process. Open the Amazon Alexa App and follow the instructions to add your device

b) Select "Devices" option



c) Select "+" option to add device




d) Select "Add Device" option



e) Select device type:

- For Receptacle (WFTRCR15) select "Plug"
- For Dimmer (WFD30) or Switch (WFSW15) select "Switch"

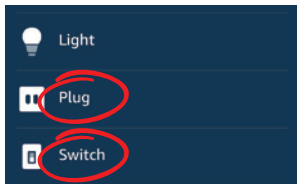

f) Select **Eaton** as the brand

g) Follow the steps in the Amazon Alexa App to finish setting up your Wi-Fi Smart Device

Your installation is finished!

Enjoy your new Wi-Fi Smart Device.

For troubleshooting contact us at:

TechSupport@eaton.com,
1-866-853-4293, option 2