

Eaton DX 系列使用手冊
15K/20K CNXL3:1 USER MANUAL

感谢您使用伊顿产品！

请严格遵守本手册和机器上的所有警告及操作说明，并妥善保管本手册。在没有阅读完所有的安全说明和操作说明以前，请不要操作本机。

安全注意事项

操作安全

1. 在使用本产品前，请仔细阅读“安全注意事项”，以确保正确和安全的使用。并请妥善保存说明书。
2. 操作时，请注意所有警示标记，并按要求进行操作。
3. 避免在阳光直接照射、雨淋或在潮湿的环境使用本设备。
4. 本设备不能安装在靠近热源区域，或有电暖炉、热炉等类似的设备附近。
5. 放置UPS时，在其四周要留有安全距离，保证通风。安装时，请参照说明书。
6. 清洁时，请使用干燥的物品进行擦拭。
7. 若遇火警，请正确使用干粉灭火器进行灭火。若使用液体灭火器会有触电危险。

电气安全

非专业人员请勿打开机壳，请有授权的维修人员操作。

1. 上电前，请确认已正确接地，并检查接线和电池极性的连接正确。
2. 当UPS需要移动或重新接线时，应断开UPS 所有电气连接，保证UPS完全停机，否则输出端仍可能带电，有触电的危险。
3. 请使用伊顿指定的附加装置和附件。
4. 小心电击：
维护由UPS供电设备时，请断开设备与UPS的连接；
维护和安装UPS输入输出端子时，请关闭UPS，并断开UPS 所有电气连接。

电池安全

1. 电池的寿命随环境温度的升高而缩短。定期更换电池可保证UPS工作正常，并保证足够的后备时间。
2. 蓄电池维护只能由具备蓄电池专业知识的人员来进行。
3. 蓄电池存在电击危险和短路电流危险。为避免触电伤人事故，在更换电池时，请遵守下列警告：
 - A. 不要佩带手表、戒指或类似的金属物体；
 - B. 使用绝缘的工具；
 - C. 穿戴橡胶鞋和手套；
 - D. 不能将金属工具或类似的金属零件放在电池上；
 - E. 在拆电池连接端子前，必须先断开连接在电池上的负载。
4. 请不要将蓄电池暴露于火中，以免引起爆炸，危及人身安全。
5. 非专业人士请勿打开或损毁蓄电池，因为电池中的电解液含有强酸等危险物质，会对皮肤和眼睛造成伤害。如果不小心接触到电解液，应立即用大量的清水进行清洗，并去医院检查。
6. 请不要将电池正负极短路，会导致电击或着火。

使用保养

1. 使用环境及保存方法对本产品的使用寿命及可靠性有一定影响，请不要在以下工作环境中使用：
 - A. 超出技术指标规定（温度 $0^{\circ}\text{C}\sim 40^{\circ}\text{C}$ ，相对湿度 $20\%\sim 90\%$ ）的高、低温和潮湿场所；
 - B. 有振动、易受撞的场所；
 - C. 有金属性粉尘、腐蚀性物质、盐份和可燃性气体的场所。
2. 如果长时间放置不使用，必须将UPS（不带电池）存放在干燥的环境中，存贮温度范围： $-25^{\circ}\text{C}\sim +55^{\circ}\text{C}$ 。UPS开机之前，必须先让环境温度回暖至 0°C 以上，并维持2小时以上。

目录

1、简介	1
1.1 符号说明	1
1.2 前视图	2
1.3 后视图	2
1.4 产品规格	3
2、安装	5
2.1 拆包检查	5
2.2 配线表	5
2.3 UPS连接	6
2.4 外接电池的安装	8
2.5 连接到计算机接口	9
2.6 并机套件（选件）	9
2.7 智能卡（选件）	12
2.8 EPO（选件）	13
2.9 维护开关（选件）	14
2.10 USB接口（选件）	14
3、控制面板	15
4、操作	18
4.1 开机	18
4.2 关机	20
5、电池维护与保养	21
6、常见故障处理	22
7、维修保证	23

1、简介

本系列UPS 是一种先进的在线式正弦波不间断供电系统，可以为您的精密设备提供可靠、优质的交流电源。其适用范围很广，可以用在电脑设备、通信系统以及工业自动控制设备上，同时还可提供丰富的选配件功能，满足不同需求。它的双转换在线式设计，不同于后备式UPS。当市电正常时，它会对市电进行调整、滤波，为您的设备提供更加优质的电源；当市电异常或中断时，它会无时间中断地从备用电池为您的设备提供优质的后备电源；在过载或逆变失败情况下，UPS 会转换到旁路状态，由市电供电；若过载情况消除，UPS 会自动转回到逆变器供电状态。


本手册适用于EATON DX系列产品，包括：

- DX 15K CNXL3:1：三相输入单相输出，可外接电池的长延时机型。
- DX 20K CNXL3:1：三相输入单相输出，可外接电池的长延时机型。

1.1 符号说明


符号及含义	
符号	含义
	注意
	危险
	交流电
	直流电
	保护接地导体
	保护连接导体
	循环
	勿与杂物一同放置
	过载
	电池
	开关机

1.2 前视图

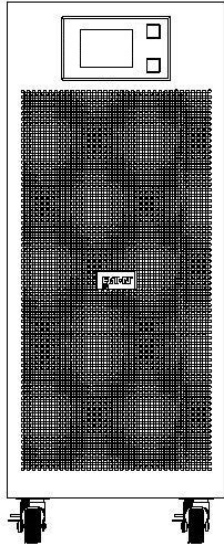

DX 15K/20K CNXL3:1

1.3 后视图

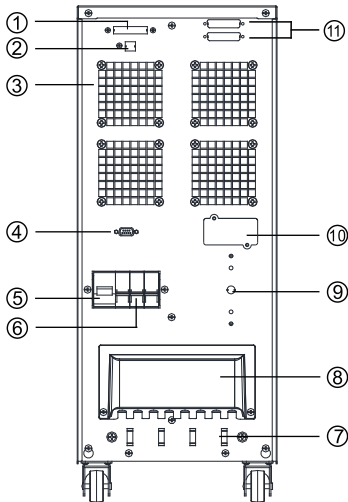

DX 15K/20K CNXL3:1


- ① EPO (选配件)
- ② USB接口 (选配件)
- ③ 风扇
- ④ 计算机接口
- ⑤ 旁路保护开关
- ⑥ 输入保护开关
- ⑦ 束线架
- ⑧ 端子排盖板
- ⑨ 维护开关 (选配件)
- ⑩ 智能插槽
- ⑪ 并机卡 (选配件)

1.4 产品规格

机器型号	DX 15K CNXL3:1	DX 20K CNXL3:1
尺寸（宽×深×高）	248×496×616	248×496×616
净重（Kg）	31	31
功率		
视在功率（KVA）/ 有功功率（KW）	15KVA/13.5KW	20KVA/18KW
市电		
电压范围	208VAC~476VAC（线电压） 120VAC~275VAC（相电压）	
电流*	30A.max	39A.max
频率范围	40Hz~70Hz	
功率因数	0.99	
旁路		
电压范围	187VAC~264VAC	
电流	86A	114A
频率范围	46Hz~54Hz	
输出		
电压	220VAC（±1%）	
电流	68A	91A
频率	46Hz~54Hz	
功率因数	0.9	
过载能力	105%~125%，常温（环境温度0~30度）10分钟后转旁路， 高温（环境温度30~40度）1分钟后转旁路；125%~150%， 30秒后转旁路；>150%，0.5秒后转旁路	
峰值因数	3: 1（max）	
失真度	THD < 2%（线性满载）	
蓄电池（电池在高温下使用，寿命会急剧下降）		
后备时间	取决于外接电池容量	
充电时间	取决于外接电池容量	

* 最大电流是在UPS输入176V，输出带额定满载，充电器满负荷工作的条件下获得。


机器型号	DX 15K CNXL3:1	DX 20K CNXL3:1
EMC标准	IEC 62040-2 2005 / GB 7260-2-2009	
行业标准	YD/T 1095-2008	
工作环境温度	0℃~40℃	
存储温度	-25℃~55℃	
环境湿度	20%~90%（无冷凝）	
海拔高度	<1000m	

 警告：本产品用于第2类环境中的商业和工业用途，可能需要采取安装限制或附加措施以抑制骚扰。


注：建议UPS输出线不大于10m，外接通信线、并机线及温度侦测线等不大于3m，否则，可能需要采取安装限制或附加措施以抑制骚扰。

高海拔地区负载量=额定功率×降额系数（和海拔对应的）

海拔（m）	1000	1500	2000
降额系数	100%	95%	91%

 注意：若UPS被使用在海拔1000m以上，必须采用递减额定值输出，降额系数参见上表。

2、安装


 危险：为了保证安全，请注意在安装前切断市电配电开关，如果是长延时机型，还应断开电池输入。

 注意：

1. 以下接线必须由专业人员，依当地法规执行。
2. 建议以落地安装的方式使用。
3. 安装时应保持前面板和后盖板通风孔不被阻塞，确保箱体与四周其它物体之间的距离大于0.5米。
4. 连接启动功率较大负载时，应以启动功率计算UPS的容量。

2.1 拆包检查

1. 拆开UPS 包装，目测机器外观，检查其是否在运输中有碰撞损坏。
2. 如发现运输损坏现象或随机附件缺少，请立即联系经销商或承运商。
随机附件：使用手册一本。

 循环：包装材料是可重复使用的，请保留包装材料，以备将来使用。


2.2 配线表

 注意：


电缆的直径和导线的横截面积取决于UPS额定功率。最小配置参考以下配线表。

型号		DX 15K CNXL	DX 20K CNXL
输入	G	25mm ²	25mm ²
	N	25mm ²	25mm ²
	L1/L2/L3	25mm ²	25mm ²
电池	+	25mm ²	25mm ²
	-	25mm ²	25mm ²
	G	25mm ²	25mm ²
输出	L	25mm ²	25mm ²
	N	25mm ²	25mm ²
	G	25mm ²	25mm ²


2.3 UPS连接


 危险：市电配电开关所允许的额定输入电流必须大于UPS旁路电流，否则可能使市电开关烧毁。（UPS旁路最大电流参见1.4产品规格）

1. 请参照配线表选择各连接线。
2. 打开UPS后面板上的端子排盖板。

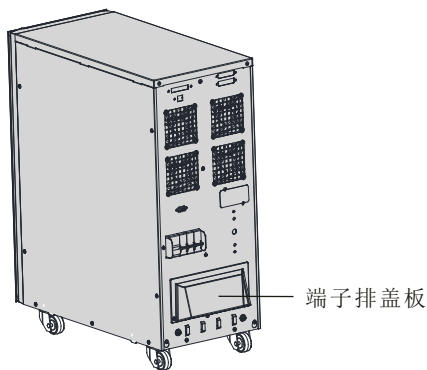


3. 将输入地线连接到端子排左侧后面板上的接地端。
4. 将输出地线连接到端子排右侧后面板上的接地端。
5. 将输出电缆的导线连接到端子排输出端。
6. 将输入电缆的导线连接到端子排输入端，需要外接电池的请将电池电缆的导线接到端子排电池输入端。

 危险：接线时，一定要确保输入输出线与端子排之间接触牢靠，切不可接触不良。

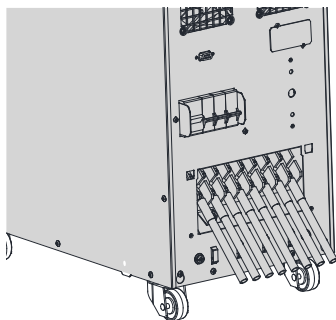


端子排:

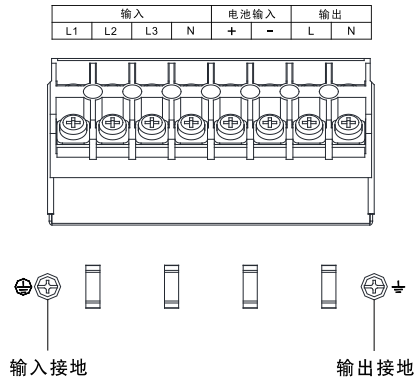

DX 15K/20K CNXL3:1

7. 将绑线穿过束线架。
8. 用绑线将输入、输出、电池线捆好，将绑线调节到合适位置，固定好电缆。
9. 重新装上盖板并用螺丝锁紧盖板。

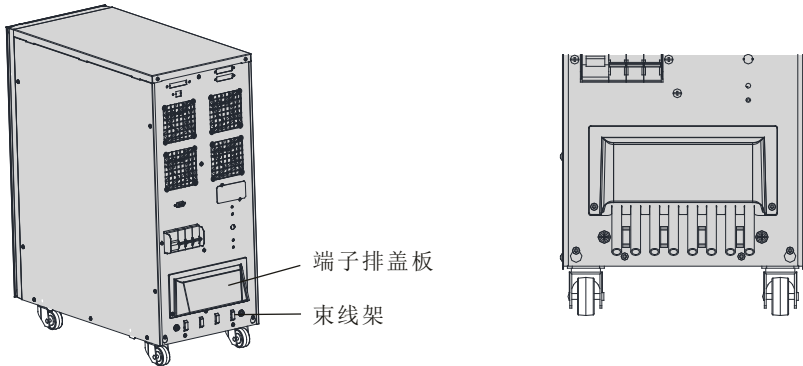

2.4 外接电池的安装

EATON DX 15K/20K CNXL3:1外接电池数量可选16、18和20节12V免维护铅酸蓄电池，分别串联成192Vdc、216Vdc和240Vdc为1组，可多组电池并联。

电池连接程序非常重要，若未按照程序进行，可能会有电击危险，所以请严格按照下列步骤进行：

1. 串联合适的电池组，建议电池组中串接保险丝进行保护。
2. 选择合适的电池电缆连接电池和UPS（参照2.2配线表）。UPS和电池之间必须接一个塑壳直流断路器（如EATON LZMN1-A160），开关的电压电流规格不得小于下表所示对应型号UPS的电池电压和电流规格：

电池节数		16节电池	18节电池	20节电池
电池电压		192Vdc	216Vdc	240Vdc
电池电流	15K 3:1	85A	75A	68A
	20K 3:1	113A	100A	90A



危险：

1. 切不可先接UPS端，否则会有电击危险。
2. 电池节数默认出厂设置为16节，错误连接蓄电池数量会造成极其严重事故，请正确配置电池数量。电池节数设置可在LCD屏幕上将UPS模拟量信息切换至电池类别条目查看，电池数量配置在首次开机时由授权工程师配置。
3. 如需调整电池节数，请在安装开机工程师上门前咨询售后服务。



注意：请确保电池组开关断开再进行连线。

3. 将电池连接线对应接UPS，完成UPS与电池连接，UPS先不接任何负载，然后将电池组开关置于“ON”，接通市电，UPS开始对电池组充电。



注意：请确认电池与UPS正、负极正确连接。


2.5 连接到计算机接口

计算机接口：标准的RS232接口，用RS232通讯电缆连接UPS与监控设备。

1. 将RS232通讯电缆一端连接到计算机的串行口。
2. 将RS232通讯电缆另一端连接到UPS的计算机接口。

RS-232 端口的通讯方式默认为：

2400，8，1，0（波特率为2400，8位数据位，1位停止位，无奇偶校验位）。

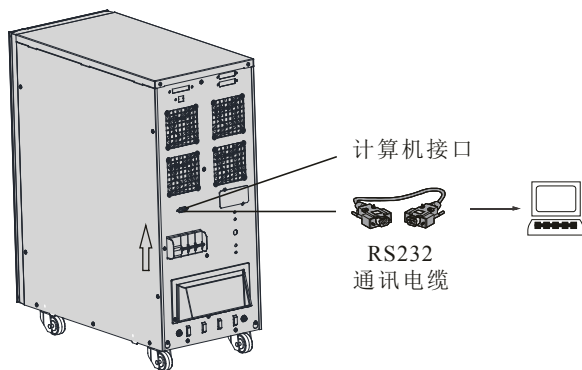

2.6 并机套件（选件）

1. 冗余简介


$N+X$ 是目前最可靠的供电结构， N 代表总负载所需的最少UPS数， X 代表的是冗余的UPS数，也就是系统可以同时承受的故障UPS数。当 X 越大，系统的可靠度就会越高。对于讲究极高可靠度的使用场合， $N+X$ 是最佳方式。

只需加装并机选配件，即可进行最多3台UPS并联，来实现功率冗余（ $N+X$ ）。


2. 并机安装

并机功能是UPS的选装功能，用户自行购买并机功能部件后由客服人员为用户安装至机器上，并机数量最多是三台，并机UPS必须独立配置电池。

- 1) 客服工程师安装并机卡，连接并机线：并机卡是并机UPS间的通讯接口，通过并机卡，用并机线将UPS依次相连。

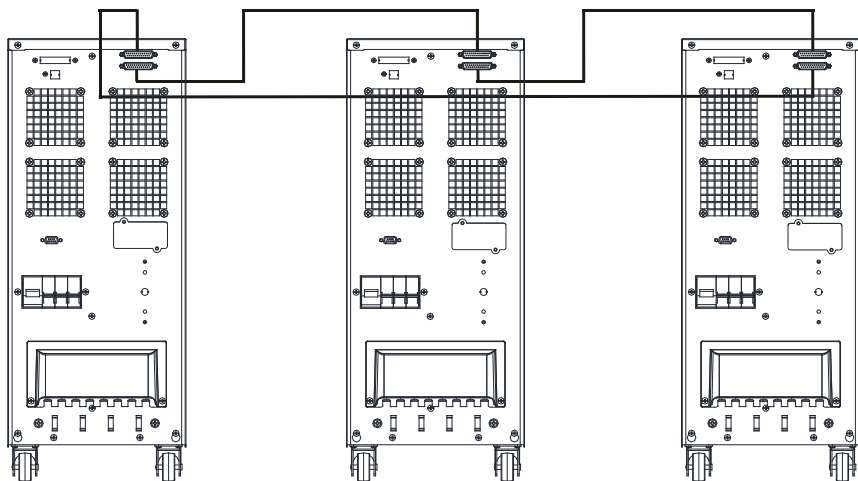

2) 所有并机UPS 输出线接至一输出接线盘，然后由输出接线盘配线去负载。

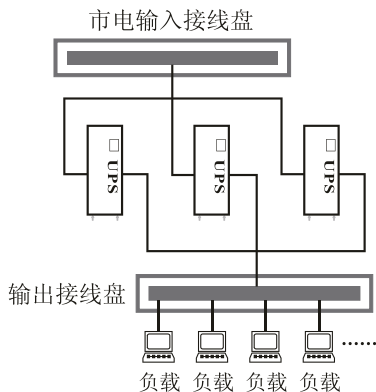

注意：

输出配线长度要求：


当负载至并机使用的每台UPS间的距离小于20米时，要求各线长差距小于20%；

当负载至并机使用的每台UPS间的距离大于20米时，要求各线长差距小于10%。

3) 并机UPS端子排输入输出部分的并机示意图如下，每台UPS 输入输出之配线请遵循单机之配线要求。

4) 并机的每台UPS 需单独配备电池。

* 建议采用并机方案的UPS同时安装维护开关选件，便于维修。

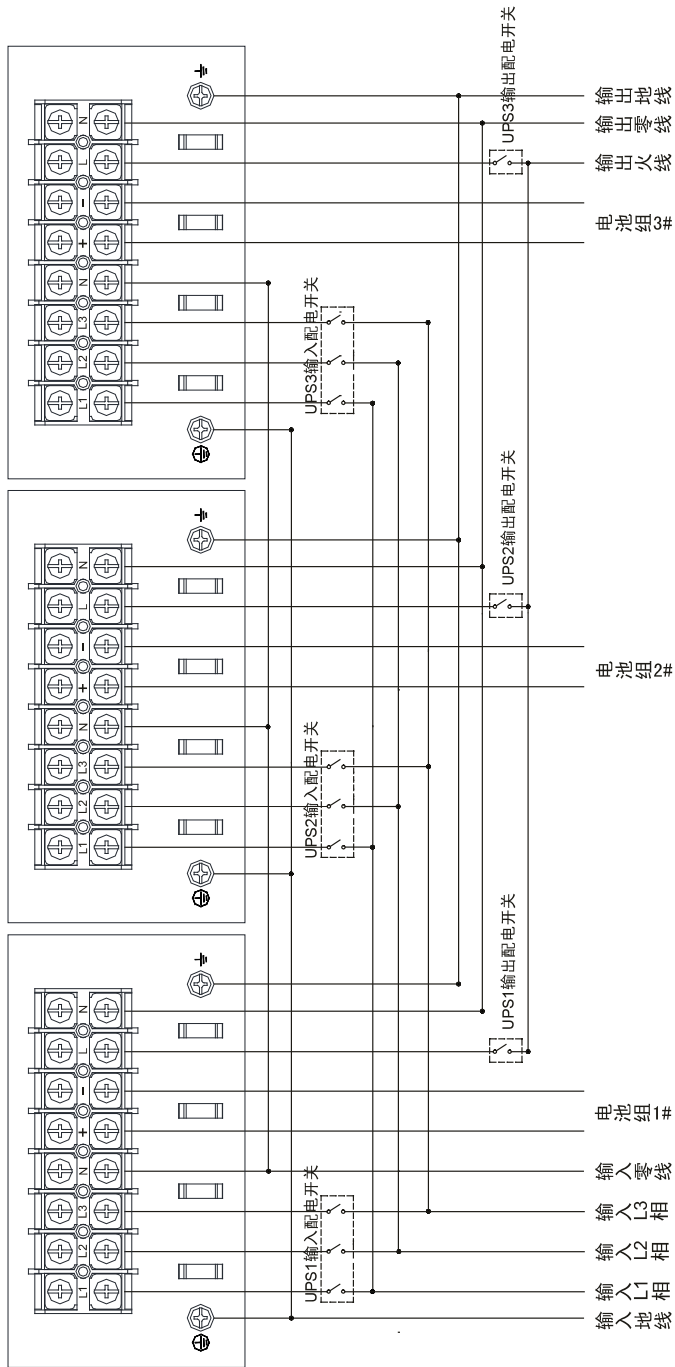

DX 15K/20K CNXL3.1 并机接线图

3. 操作说明

1) 一般操作必须遵循单机之操作要求。

2) 并机开机

市电开机：市电接通后，只需长按其中任意一台UPS开机，其他机器将同时开机，然后同时跳到逆变状态；

电池开机：先短按每台UPS开机键，机器建立工作电源，然后只需长按其中任意一台机器开机，其他机器将同时开机，所有机器将工作在电池模式下。


3) 并机关机

持续按下其中任意一台机器关机键4秒以上（两声有效声音提示），实现并机关机；按下其中任意一台机器关机键1秒以上，4秒以下（有效声音提示），实现单机关机。

 注意：长按是1秒以上，短按小于0.5秒。

2.7 智能卡（选件）

智能卡是UPS的选装配件，用户自行购买智能卡部件（智能卡）后由客服人员为用户安装至机内，安装智能卡的过程中UPS须断电关机。

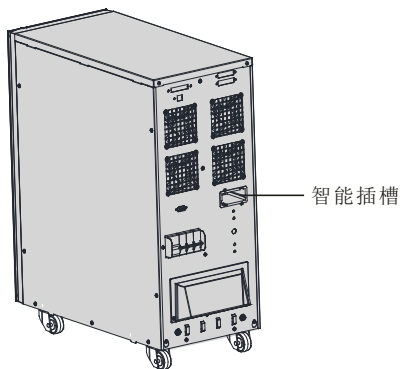

智能插槽：可选装AS400卡、NMC卡、CMC卡或USB+RS232卡任意一种。


- AS400卡：可直接利用有AS400接口系统的监控功能，对电源进行监控管理。
- NMC卡：通过Internet实现对UPS的远程监控和管理功能。
- CMC卡：集中监控卡。
- USB+RS232卡：提供标准的USB和RS232通讯接口，任选一种接口监控UPS的运行状态。

⚠ 注意：


- 智能插槽及监控卡需通过代理商购买，安装方法请参照智能插槽包装内的安装说明。
- WinPower 软件及AS400、NMC、CMC、USB+RS232卡的使用请参考其他相关资料，如果对上述接口的使用有疑问，请联络伊顿客服中心。

2.8 EPO（选件）

EPO（Emergent Power Off）即紧急关机功能，EPO位于UPS单元后面板，呈绿色端子，通过EPO可以在紧急情况下关断UPS电源，关闭UPS。具体使用接线方法有两种：

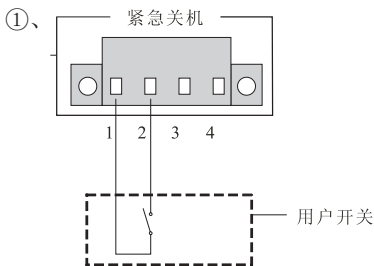

1-2闭合时，UPS执行紧急关机。
3-4闲置。

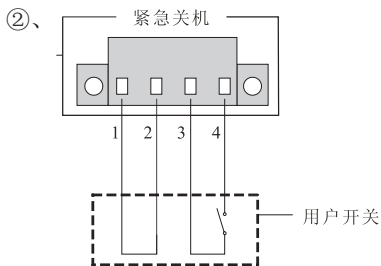


1-2用短线连接，使其一直处于连接状态。
3-4打开时，UPS执行紧急关机。

* 详细安装方法请参照EPO包装内的安装说明。

2.9 维护开关（选项）

维护开关实现UPS的在线维护。如下图所示，不论是市电、电池、旁路模式，UPS内部主要部分都带电。通过维护开关可以将UPS和市电隔离开来，UPS的在线维护安全性得到了保障。

在把UPS切换到维护开关供电前，首先需要确认旁路供电是否正常，然后使UPS转入旁路供电转态，再把维护开关旋到维护状态，之后断开UPS机身的旁路保护开关、输入保护开关及电池输入开关，在确保安全的情况下进行负载不断电维护。

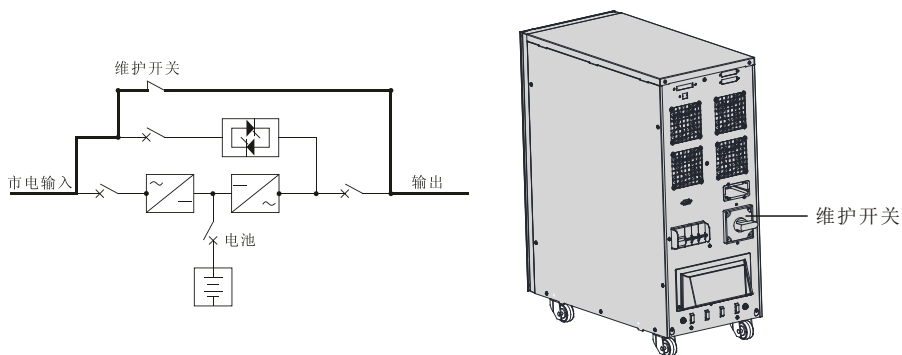


* 详细安装方法请参照维护开关包装内的安装说明。

2.10 USB接口（选项）


USB接口是选配件，用户购买后由客服人员为用户安装，安装过程中需关断UPS电源，并断开输入、旁路、电池及输出开关。安装时将USB电缆的一端连接到计算机USB接口，另一端连接到UPS的USB接口，实现计算机对UPS的远程监控。

* USB驱动程序请查看随机附送的光盘或到伊顿网站免费下载。

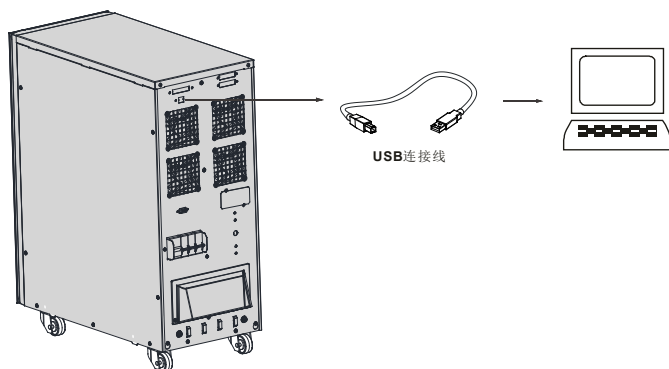

3、控制面板

操作显示面板位于UPS的前面板，包括2个控制键、4个LED指示灯和LCD屏。

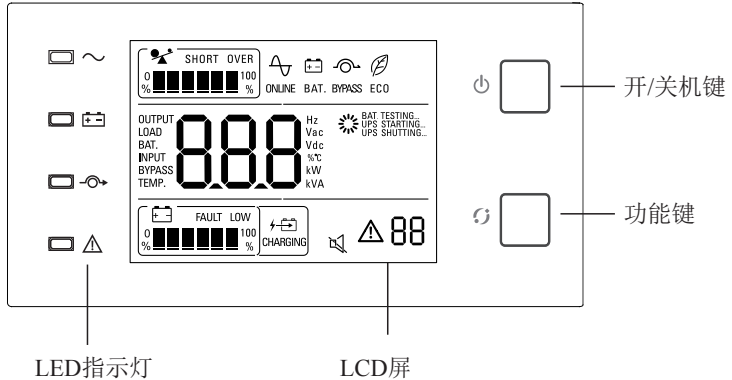


1、开/关机键：控制UPS的开启与关断

2、功能键：静音（旁路和电池模式下长按2秒以上，10秒以下，消除旁路和电池模式告警声；长按10秒以上，消除所有告警声。重复操作可取消静音）；电池自检（市电模式下长按2秒以上，10秒以下）；短按切换LCD显示信息。

3、LED指示灯：包括正常指示灯、电池指示灯、旁路指示灯、故障指示灯。

指示灯	状态	描述
正常	亮	UPS 正常运行，功率模块向关键负载供电。
	灭	负载由旁路供电（非ECO模式）或无输出电压
电池	亮	UPS处于电池供电状态，同时正常LED灯也点亮
	1秒1闪	充电器异常或电池异常
旁路LED	亮	UPS处于ECO模式（同时正常LED灯也点亮）或旁路供电状态
	1秒1闪	旁路异常
故障LED	亮	UPS处于故障状态，有旁路输出（非EPO及短路故障）

4、LCD屏

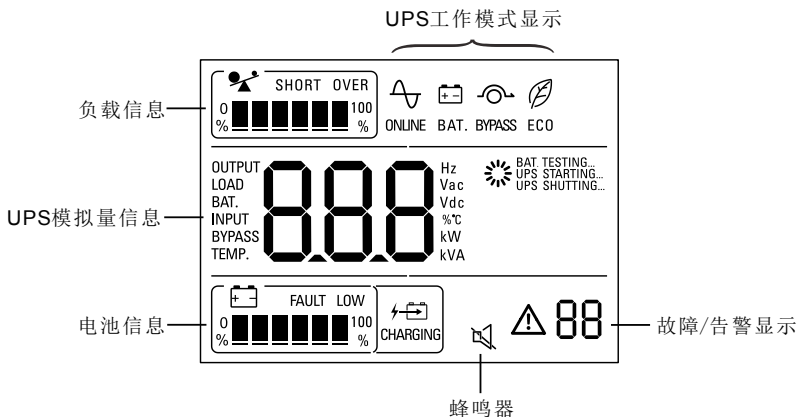


(1) 负载信息：负载量显示，用%表示，档位显示规格如下：

显示档位（从左至右）	负载量
第一档	0%~15%
第二档	16%~35%
第三档	36%~55%
第四档	56%~75%
第五档	76%~95%
第六档	≥96%

- 当UPS输出短路时，“短路”图标会出现在负载信息栏。



- 当UPS处于过载运行状态时，“过载”图标会出现在负载信息栏。

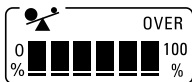

(2) UPS模拟量信息：输入电压、频率、输出电压、频率、电池电压、负载量信息；短按功能键切换显示类别，同一类别内的显示项目自动切换。

类别	项目		
输出	电压	频率	
负载	功率	伏安	百分比
电池	电压	容量	节数
输入	频率	三相电压	
旁路	电压	频率	


(3) 电池信息：电池容量显示，用%表示，档位显示规格如下；


显示档位（从左至右）	负载量
第一档	0%~15%
第二档	16%~35%
第三档	36%~55%
第四档	56%~75%
第五档	76%~95%
第六档	≥96%

- 当电池信息栏出现“低压”图标时，说明电池电压较低。



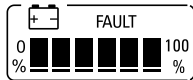

- 当电池信息栏出现“故障”图标时，说明电池电压异常。



若充电器在给电池正常充电，“ ”图标会点亮。
CHARGING

- (4) 蜂鸣器：当蜂鸣器鸣叫时，出现“ ”图标，说明有运行异常或报警。
长按功能键可静音，出现“ ”图标。

(5) 故障/告警显示：当UPS工作异常，有故障或告警信息需要注意或处理时，该图标点亮，告警标识后的两位数字标识告警或故障参考代码。

- 当有告警信息产生时，“ ”标识闪烁。
- 当有严重故障产生时，“ ”标识常亮。

(6) UPS工作模式显示：

图标	表示信息
	UPS正常运行，负载处于保护中
	UPS处于电池供电状态
	负载处于旁路供电状态
	ECO模式


4、操作

4.1 开机


⚠ 注意：虽然电池在出厂时已充满电，但经过运输、存储，电量会有所损失，建议在第一次使用UPS前应先对电池充电12小时以上，以保证有足够的备用时间。

开机准备

1.接通市电，先闭合电池输入开关，然后将UPS旁路保护开关置于“ON”，请根据控制面板显示查看电池的节数（按功能键切换），如显示值与实际电池节数不一致，请拨打伊顿服务热线或与经销商联系。

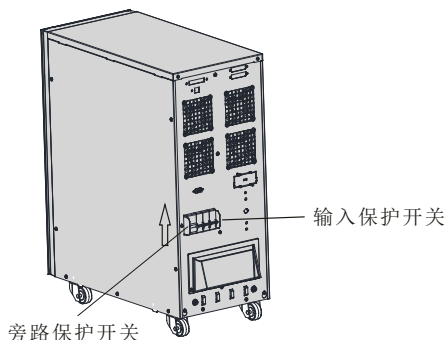

2.将UPS输入保护开关置于“ON”，检查控制面板显示是否如下图所示，若如下虚线框区域出现告警码或故障码，请拨打伊顿服务热线或与经销商联系。

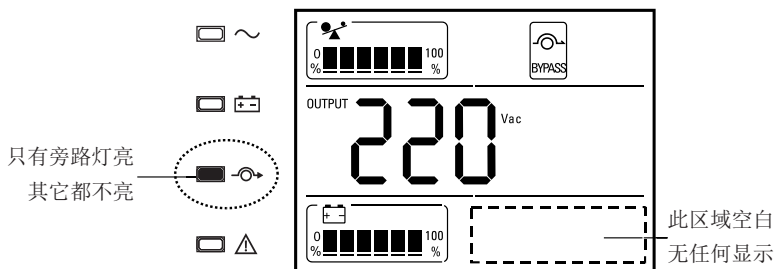


- 23 -

⚠ 注意：断电维护前请断开所有开关。


UPS开机操作分为：市电开机和无市电直流开机。

市电开机

- 长按开机键1秒以上，UPS 执行开机，开机时UPS会进行自检。

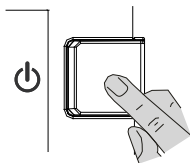


- UPS自检结束后进入正常工作，指示灯及显示屏处于如下状态：
正常指示灯亮，无任何故障告警显示。

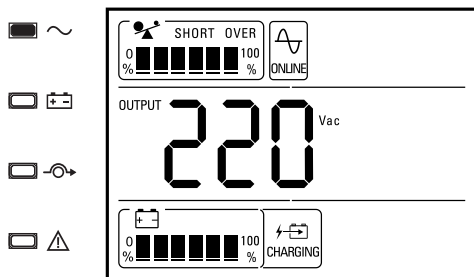

(市电逆变工作模式)


指示灯状态说明：■亮，□不亮。

⚠ 注意：如果市电异常UPS将工作在电池模式下。


- 负载由UPS供电，“”图标显示UPS内置充电器正在给电池充电。

无市电直流开机（冷启动）

- 长按开机键1秒以上，UPS执行开机，开机时UPS会进行自检。

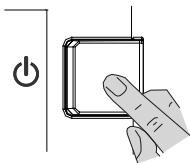

- 开机后电池指示灯亮，UPS所接负载电力由电池提供。

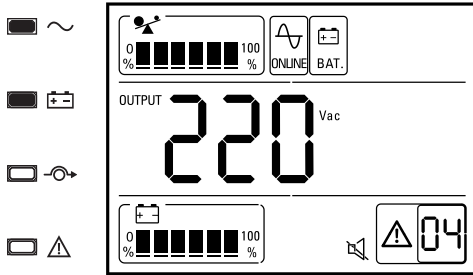


（电池工作模式）


- 电池工作模式下，蜂鸣器4秒1叫，提示用户UPS工作在电池模式下，静音请按功能键2秒以上。
- 由于无市电输入，LCD屏右下角会交替出现04、08告警码。

4.2 关机

- 长按关机键1秒以上，UPS 执行关机。

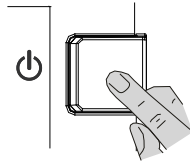

- 关机后，UPS仍有旁路输出, 指示灯及显示屏处于如下状态：

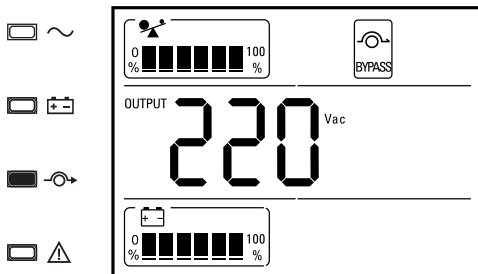

（旁路工作模式）



- UPS工作在旁路模式下，旁路指示灯亮，蜂鸣器2分钟叫1次，静音请按功能键2秒以上。
- 要使UPS无输出，请将市电断开，并断开旁路保护开关及电池开关。

5、电池维护与保养

- 本系列UPS 只需很少维护。标准机的电池为密封式、低维护型、只需经常保持充电以获得期望寿命。UPS 在同市电连接时，不管开机与否，始终向电池充电，并且提供过充、过放电保护功能。
- 如果长期不使用UPS，应每隔四到六个月对UPS 充电一次；在高温地区，电池每隔两个月充、放电一次，每次充电时间不得少于12 小时。
- 正常情况下，电池使用寿命为三到五年，如果发现状况不佳，则必须提早更换。更换电池时，必须由专业人员执行。
- 更换电池时，遵循数量一致，型号一致的原则。
- 电池不宜个别更换，整体更换时应遵守电池供应商的指示。
- 正常时（UPS 很少后备供电的前提下），电池每四到六个月充、放电一次，放电至关机后连续充电，且标准机充电时间不得少于12 小时。
- UPS长期在无人职守地点工作时，需定期检查电池是否处于正常状态，避免电池过放电损坏。

6、常见故障处理

如果 LCD 显示屏出现异常代码，故障指示灯亮，蜂鸣器鸣叫，说明 UPS 运行异常，请按下表排除解决问题。

故障现象	告警图标 	告警代码 	原因	解决方法
开机键按下后，UPS无法启动			按开机键时间过短	按开机键持续1s以上
		0A/0b	UPS没有接电池或电池电压过低	可靠连接电池线到UPS并闭合电池开关；若电池电压过低，需先用外置充电器给电池充电
UPS无输出	常亮	22	过载或负载异常导致UPS过载	检查负载是否超出UPS允许的负载量；检查负载是否存在异常导致过载
		23	UPS内部过热	1.查看UPS是否过载；2.通风口是否有堵塞；3.环境温度是否超过40摄氏度。如无以上情况，请切断负载断电关机10分钟后再尝试重新启动UPS，若问题依然存在，请联系供应商。
		10	输出短路	切断所有负载，观察故障是否依然存在，若故障依然存在，联系供应商，否则可能是负载存在短路现象，请检查负载
无法转入交流供电模式	闪烁	31	相序错误	任意交换两相输入电源
		04/06/07	交流输入市电电压或频率异常；输入零地电压异常	检查交流输入市电是否存在电压或频率异常；检查地线是否正确连接。
电池LED闪烁		0b	电池电压低	检查UPS电池是否损坏，若已损坏，尽快更换电池；检查电池开关是否处于“ON”状态
电池放电时间短			电池未充满	保持充电器持续给电池充电足够的时间
			输出过载	检查负载水平并移除非关键性设备
			电池老化，容量下降	更换电池
旁路LED闪烁	闪烁	08	旁路异常	检查UPS后盖板上旁路breaker是否处于“ON”状态；

Thank you for selecting a EATON product to protect your electrical equipment.

This manual contains important instructions that you should follow during installation and maintenance of the UPS and batteries. Please read all instructions before operating the equipment and save this manual for future reference.

Safety Instructions

Please read carefully the following user manual and the safety instructions before installing or operating the unit!

Operation Safety

1. Please read all instructions before operating the equipment and connecting to mains power, save this manual for future reference.
2. Please pay attention to all the warning indication, understand and follow all the instruction.
3. Do not install the UPS where it would be exposed to direct sunlight , Rain or damp environment.
4. Do not install the UPS near to heating equipment or heating source and heating environment.
5. Do not block ventilation openings on the UPS's housing. Ensure the air vents on the front, side and rear of the UPS are not blocked. Recommended at least 50cm of space on each side.
6. Use dry cloth for cleaning.
7. Use dry-chemical fire extinguisher when UPS present fire danger, do not use fluid-fire extinguisher, fluid- fire extinguisher will cause hazards shock.

Electricity Safety

Do not remove the enclosure. This system is to be serviced by qualified service person only. There are NO USER SERVICEABLE PARTS inside the UPS.

1. Assure UPS is reliably connected to earth properly, verify connecting wire and battery polarity is correct before turn on UPS with mains power.
2. If UPS requests moving to another place or reconnecting power wire, it is imperative to disconnect all the power connections of UPS, and turn off UPS.

3. Please use the UPS accessories specified by EATON.
4. Shock Risk.

If equipment powered by UPS requires any type of maintenance, it is imperative to disconnect it from UPS before maintenance.

If input or output terminals need any maintenance or installation, it is imperative to disconnect all the power connections of UPS and turn UPS off.

BATTERY SAFETY

1. The service lifetime of UPS battery depends on ambient temperature, high ambient temperature will impact the service lifetime of UPS battery. Replacing a battery regularly can help to keep UPS running efficiently and provide backup time as expected.
2. Batteries must be maintained and replaced only by a qualified person.
3. Batteries have a high short-circuited current and pose a risk of shock. Take all precautionary measures specified below and any other measures necessary when working with batteries:
 - A. Remove all jewellery, wristwatches, rings and other metal objects.
 - B. Use only tools with insulated grips and handles.
 - C. Wear rubber gloves and boots.
 - D. Do not lay tools or metal parts on top of batteries.
 - E. Disconnect the charging source prior to connecting or disconnecting battery terminals.
4. Do not attempt to dispose of batteries by burning them. It could cause explosion.
5. Do not open or destroy batteries. Effluent electrolyte can cause injury to the skin and eyes. It may be toxic. If cause injury by Effluent electrolyte, use cool water for washing and go to hospital ask for help immediately.
6. Do not short the battery with metal objects, It could cause an electric shock, fire or explosion.

Maintenance

1. The operation environment and store environment will impact on the service lifetime and reliability of UPS.
 - Do not install or store the UPS in the places where are listed below.
 - A. Do not install UPS in place where the ambient temperature lower than 0°C or higher than 40°C.
 - B. Do not install/store UPS in place where the relative humidity lower than 20% or higher than 90%.
 - C. Do not install/store UPS in place where there is flammable or corrosive gas, place with large amounts of conductive dust, place exposed to shock or vibration, or outdoor.
2. If you would store the UPS for a long period, the storing area temperature should be the range of -25°C to 55°C , and before turning on UPS, it is highly suggested to put UPS in the ambient temperature above 0°C and last at least 2 hours.

CONTENT

1. INTRODUCTION	- 1 -
1.1 SYMBOL AND EXPLANATION	- 2 -
1.2 FRONT VIEW	- 2 -
1.3 REAR VIEW	- 3 -
1.4 PRODUCT SPECIFICATION	- 3 -
2. INSTALLATION	- 5 -
2.1 INSPECTION THE PACK AND EQUIPMENT	- 5 -
2.2 POWER CABLE	- 6 -
2.3 UPS POWER CONNECTION	- 6 -
2.4 EBM CONNECTING AND INSTALLATION	- 8 -
2.5 UPS CONNECT TO COMPUTER PORT	- 9 -
2.6 UPS PARALLEL FUNCTION (OPTIONAL)	- 10 -
2.7 EPO(OPTIONAL)	- 14 -
2.8 MAINTENANCE SWITCH (OPTIONAL)	- 15 -
2.9 USB PORT(OPTIONAL)	- 15 -
2.10 CONNECTIVITY CARDS(OPTIONAL)	- 16 -
2.11 SOFTWARE	- 17 -
3. CONTROL PANEL	- 19 -
4. OPERATION	- 23 -
4.1 TURNING ON UPS	- 23 -
4.2 TURNING OFF UPS	- 25 -
5. MAINTENANCE	- 27 -
6. TROUBLE SHOOTING	- 28 -

1. Introduction

The EATON DX On-Line-Series is an uninterruptible power supply incorporating double-converter technology. It provides perfect protection specifically for Computer equipment, communication systems and industry control systems.

The double-converter principle eliminates all mains power disturbances. A rectifier converts the alternating current from the socket outlet to direct current. This direct current charges the batteries and powers the inverter. On the basis of this DC voltage, the inverter generates a pure sinusoidal AC voltage, which permanently supplies the loads.

Computers and periphery are thus powered entirely by the mains voltage. In the event of power failure, the maintenance-free batteries power the inverter. In the event of inverter failure/Overload, UPS transfer to bypass mode, after the failure/overload remove, UPS transfer to inverter mode continue supplies the loads.











This manual covers the UPS listed as follows. Please confirm whether it is the model you intend to purchase by performing a visual inspection of the Model No. on the rear panel of the UPS.

DX 15K CNXL 3:1: Three phase input single phase output, can used with external EBM to get longer backup time.


DX 20K CNXL 3:1: Three phase input single phase output, can used with external EBM to get longer backup time.

1.1 Symbol and Explanation

Some or all of the following symbols may be used in this manual. It is advisable to familiarize yourself with them and understand their meaning:


Symbol and Explanation			
Symbol	Explanation	Symbol	Explanation
	Alert you to pay special attention		Alternating current source (AC)
	Caution of high voltage		Direct current source (DC)
	Turn on the UPS		Protective ground
	Turn off the UPS		Recycle
	Idle or shut down the UPS		Do not dispose with ordinary trash

1.2 Front view

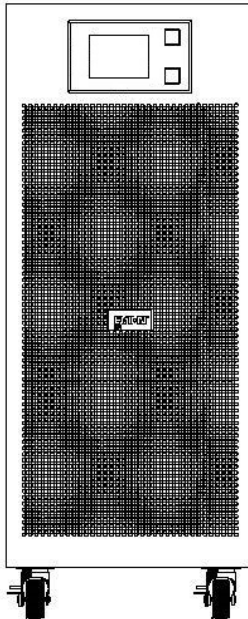

DX 15K/20K CNXL 3:1

1.3 Rear View

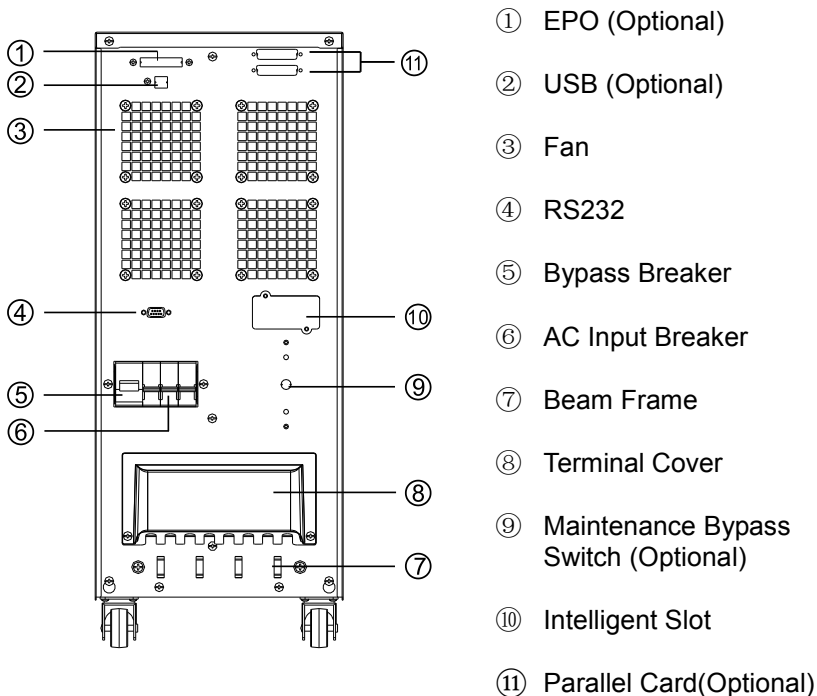


DX 15K/20K CNXL 3:1


1.4 product specification

Model	DX 15K CNXL 3:1	DX 20K CNXL 3:1
Dimensions W*D*H(mm)	248*496*616	248*496*616
Weight(kg)	31	31
Power Rating(VA/W)	15KVA/13.5KW	20KVA/18KW
Input Voltage		
Voltage range	208Vac-476Vac(Line to Line) 120Vac-275Vac(phase to phase)	
Current*	30A max	39A max
Frequency range	40Hz-70Hz	
Power factor	0.99	
Bypass Mode		
Voltage Range	187Vac-264Vac(Line to Line)	
Current	86A	114A
Frequency range	46Hz-54Hz	
Output		

Rating Voltage	220Vac(± 1%)	
Rating Current	68A	91A
Frequency range	46Hz-54Hz	
Power factor	0.9	
Output Overload	105%-125%, load transfer to bypass mode after 10min(0-30℃) or 1minutes(30℃-40); 125%-150%,load transfer to bypass mode after 30s; Over 150%, load transfer to bypass after 0.5s	
Load crest ratio	3:1(max)	
THD	<2%(100% Line load)	
Battery(under high temperature, battery life will decrease)		
Backup time	Depend on external battery capacity	
Recharge time	Depend on external battery capacity	
EMC Standard	EN62040-2:2005/GB7260-2:2009	
Safety Standard	EN62040-1:2008+A1:2013	
YD Standard	YD/T1095-2008	
Operation temperature	0-40℃	
Store temperature	-25℃ to 55℃	
Relative humidity	20% to 90%	
Altitude	<1000m	


*The max current is under 176Vac input, full rating load and empty battery charging.

 Warning: this is a product for commercial and industrial application in the second environment installation restrictions or additional measures may be needed to prevent disturbances.


 note: It is recommended that the UPS output line is not more than 10m, the external communication line, and the machine line and the temperature detection line is not more than 3m, otherwise it may need to take installation restrictions or additional measures to suppress interference.

Altitude load=Rating load * Altitude correction factor.

Altitude (m)	1000	1500	2000
Altitude correction factor	100%	95%	91%

 note: if UPS used over 1000m altitude, the rating must be derating according to above table.

2. Installation

 Danger: For safety consideration, please make sure cut off all the mains power.

 Note:

1. Installation and power cable connection must be conducted by qualified person according to local regulations.
2. We recommend UPSs installed as floor standing equipment.
3. After installation, ensure the air vents on the front, side and rear of the UPS are not blocked. Recommended at least 50cm of space on each side.
4. If it is necessary to connect the inductance load such as a monitor or a laser printer to the UPS, the start-up power should be used for calculating the capacity of the UPS, as its start-up power consumption is too big when it is started.

2.1 Inspection the pack and equipment.

1. Open UPS pack, inspection whether UPSs have been damaged during shipment.
2. If find any equipment damaged, please contact your local EATON representative.

Accessory: 1 pcs of user manual.



Recycle

The UPS package is recycling, please save it for further use.


2.2 Power cable

 Note:


The diameter and cross-sectional area depends of power cable depend on the UPS rating power, the minim diameter and cross-sectional area of power cable see below power cable table.

Model		DX 15K CNXL 3:1	DX 20K CNXL 3:1
Input	G	25mm ²	25mm ²
	N	25mm ²	25mm ²
	L1/L2/L3	25mm ²	25mm ²
Battery	+	25mm ²	25mm ²
	-	25mm ²	25mm ²
	G	25mm ²	25mm ²
Output	L	25mm ²	25mm ²
	N	25mm ²	25mm ²
	G	25mm ²	25mm ²


2.3 UPS Power Connection

 **DANGER:** In order to avoid the Mains power switch current overload when UPS carries with rating load, the Mains power switch rating current must be more than the bypass switch rating current.(bypass mode max current refer to 1.4 product specification)


It is suggested to install an external isolating device against current backfeed between Mains input and UPS (see Fig.). After the device is installed, it must add a warning label with the following wording or the equivalent on the external AC contactor : RISK OF VOLTAGE BACKFEED. Isolate the UPS before operating on this circuit, then check for hazardous voltage between all terminals.

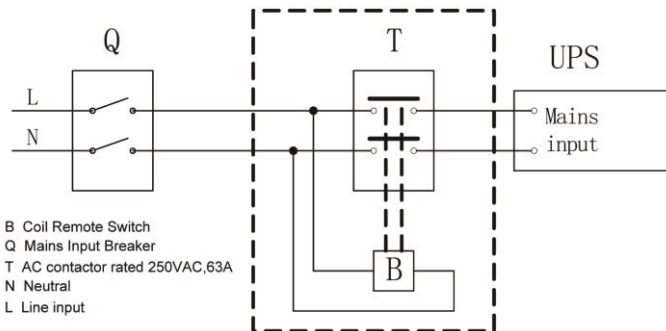


1. Select power cable referring to power cable table.
2. Open UPS terminal cover.

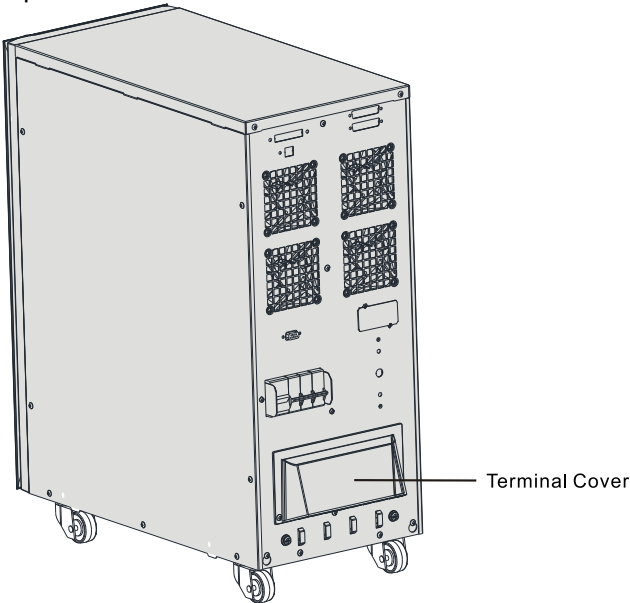


3. Connect the protective earthing conductors to the rear panel left earthing terminal.
4. Connect the protective bonding conductors to the rear panel right earthing terminal.
5. Connect the output cable to the output terminal.
6. Connect the input cable to the input terminal, if EBM is required, connect EBM cable to the EBM terminal.

 **DANGER:** In order to reduce the risk of fire and hazards shock, make sure all the connections are reliable and stightly !

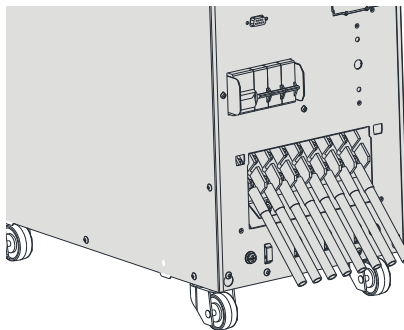


Terminals:

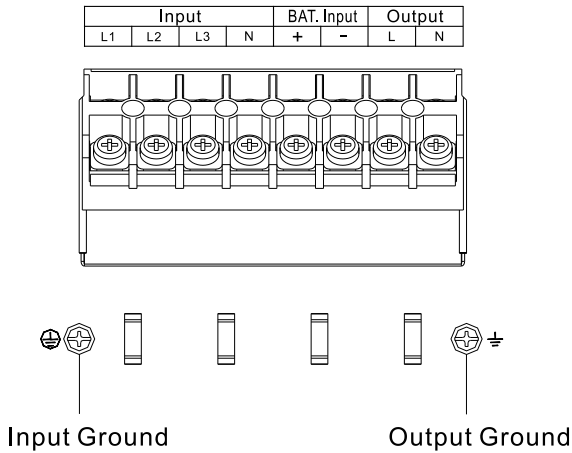

DX 15K/20K CNXL 3:1

7. Make the straps through across the Beam frame.
8. Adjust the straps to proper position, Fix the input cable, output cable, EBM cable tightly.
9. Re-screw the terminal cover.

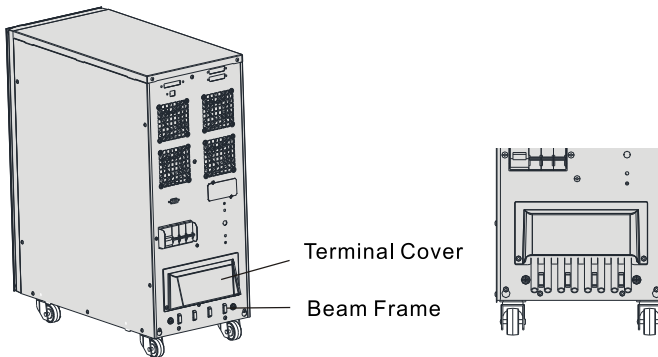

2.4 EBM Connecting and Installation

The normal DC voltage of battery pack for DX 15K/20K CNXL 3:1 is 192Vdc/216Vdc/240Vdc. The battery pack consists of


16/18/20 pieces of 12V maintenance free batteries in series. EBM consists multi-battery packs. In order to avoid hazards shock, make sure Battery/battery string connecting in compliance with below procedure.

1. Connect proper battery string, recommend use fuse for protection in battery string.
2. Select proper power cable (refer 2.2 power cable table) connect EBM and UPS. Make sure install a DC breaker (eg. EATON LZMN1-A160) between UPS and EBM connection. The minimum rating voltage and rating current of DC breaker not less than below table.


Battery number		16 pcs	18 pcs	20 pcs
Battery voltage		192Vdc	216Vdc	240Vdc
Battery current	DX 15K CNXL 3:1	85A	75A	68A
	DX 20K CNXL 3:1	113A	100A	90A

 **DANGER:**

1. In order to avoid hazards shock, do not connect EBM to UPS Before finish EBM connecting.
2. The default battery pack consists 16 pieces battery, UPS/EBM connect to the wrong quantity will cause serious hazards. Make sure UPS connect to the correct quantity battery pack. The battery quantity can be displayed on the UPS LCD panel. The battery quantity must be set by qualified person at initial installation.
3. If battery quantity requests for adjustment, please contact with our service person for support.

 **Note:** Make sure the battery string switch is turn off before connecting.

3. Connect EBM to UPS, after finish connecting between EBM and UPS, UPS output does not carry with any load, then turn on EBM switch to On position, and turn on mains power switch, UPS begins to charge EBM at the time.


 **Note:** Verify the battery connect to UPS with the correct polarity.

2.5 UPS Connect To Computer Port

RS232 interface is for the monitoring software and firmware update. UPS connect to monitor device by RS232 cable.

1. One end of RS232 cable connect to computer RS232 port.
 2. One end of RS232 cable connect to UPS RS232 port.
- RS232 communication default setting:

BAUD RATE	DATA LENGTH	STOP BIT	PARITY
2400 bps	8 bits	1 bit	None

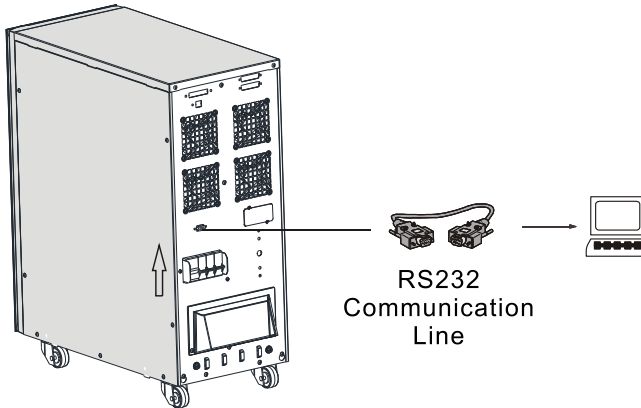

2.6 UPS PARALLEL FUNCTION (Optional)

1. Brief introduction of the redundancy


N+X is currently the most reliable power supply structure. N represents the minimum UPS number that the total load needs, X represents the redundant UPS number, i.e. the fault UPS number that the system can handle simultaneously. When the X is larger, the reliability of the power system is

higher. For occasions where reliability is highly depended on, N+X is the optimal mode. As long as the UPS is equipped with parallel cables, up to 3 UPSs can be connected in parallel to realize output power sharing and power redundancy.


2. Parallel installation and operation

Parallel UPS is an optional function for user, before installing a new parallel UPS, user need to prepare parallel accessories and ask service person to help for installation. The quantity of parallel UPS is up to 3max. Each parallel UPS need an independent battery pack.

- 1) Service person installs the parallel card on UPS, connect each UPS one by one with the parallel cable, the parallel card is the communication port between UPSs.

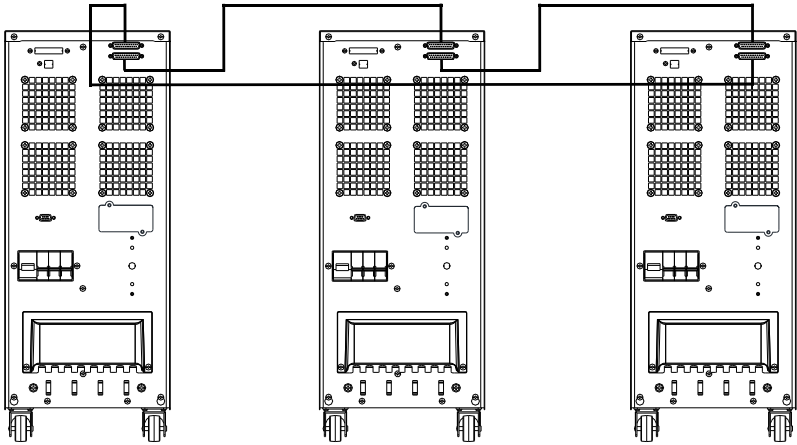

- 2) Connect the output wire of the parallel UPSs to an output terminal block, load connect to the output terminal block via load wire.

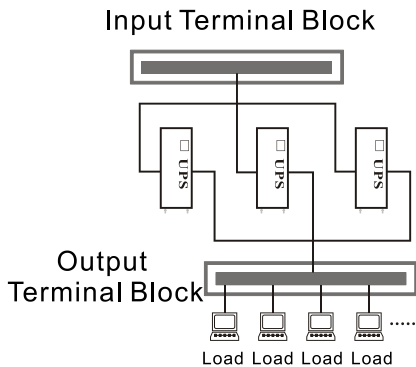


⚠️ Note: Strictly follow the wire requirement of single UPS to perform The wiring of each UPS. The distance between the UPSs in parallel is less than 20 meters. The difference between the wires of input and output of the UPSs is required to be less than 20%. The distance between the UPSs in parallel is more than 20 meters. The difference between the wires of input and output of the UPSs is required to be less than 10%.

- 3) The parallel UPS input terminal panel and output terminal panel see below, the wires of each parallel UPS must follow the wire requirement for single UPS. Wire connection diagram see next

page.

4) Each parallel UPS need an independent battery pack.

* Recommend to install maintenance switch if need . UPS parallel function, it can help to simplify parallel UPS maintenance.

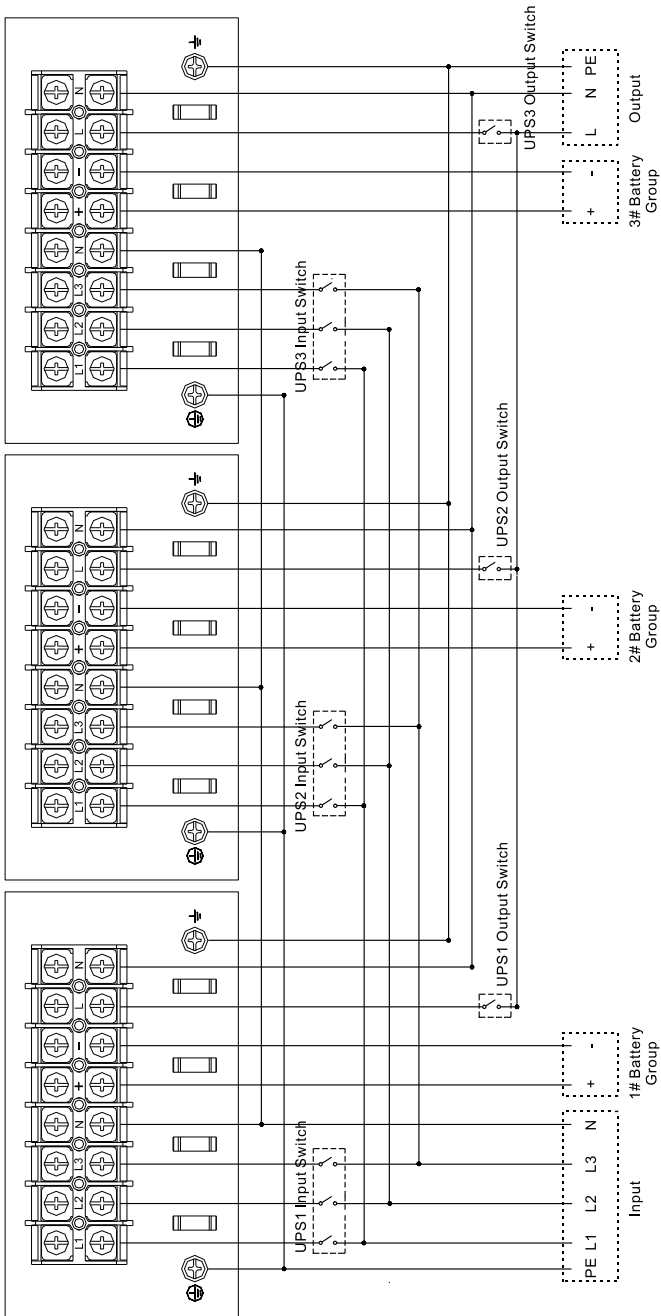




DX 15K/20K CNXL 3:1

3. Parallel UPS Operation



1) Strictly follow the operation requirement of single UPS to operate each UPS.

2) Turn on Parallel UPS

In online mode: after UPS connects to mains power, Press the  button of one UPS, each UPS would start to turn on accordingly, all the UPSs would transfer to the INV mode together.


In battery mode: Press the  button of each UPS less than 0.5s, UPS start the control power, press the  of one UPS more than 1s, each UPS would start to turn on accordingly, all the UPSs will work at battery mode together.

3) Turn off Parallel UPS

Press the  button of one UPS more than 4s(buzzer beeping two times), the parallel function has been closed; then press the  button of one UPS more than 1s less than 4s(buzzer beeping two times), all the UPS will be turn off.

2.7 EPO(Optional)

EPO(Emergent Power Off), it is a green connector lays on the UPS Rear panel, we can shutdown UPS via remove EPO connector in the event of emergency. The EPO wire connect diagram see below.

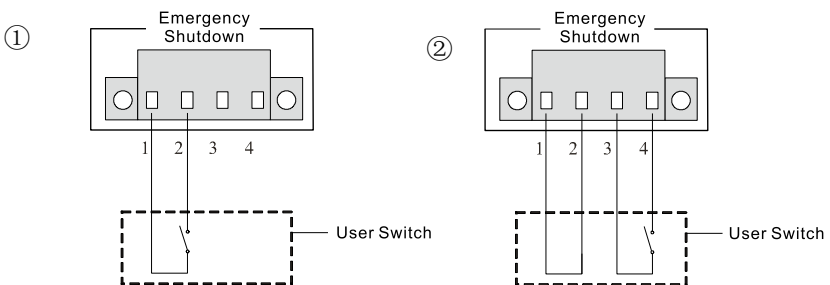

Pin 1 closed to pin 2, UPS shutdown immediately.
Pin 3 and pin 4 float.

Pin 1 and Pin2 always connect.
When pin3 and pin4 disconnect, UPS shutdown immediately.


More detail and further information for EPO, please refer to the EPO manual

2.8 Maintenance Switch (Optional)

No matter UPS work in line mode, battery mode or bypass mode, UPS internal electrical part is present hazards high voltage. Maintenance switch can help service person to maintain UPS in online mode, make sure UPS continue to provide power to your equipment in bypass mode and the safety of service person during maintenance. The procedure list as below:

- 1) Verify the bypass function can work normally.
- 2) Transfer UPS in to bypass mode.
- 3) Switch maintenance switch to maintenance position.
- 4) Switch off UPS bypass mode switch, line mode input switch and battery input switch.

After verify no hazards, service person can begin to maintain UPS without interrupting power supply to your equipment.

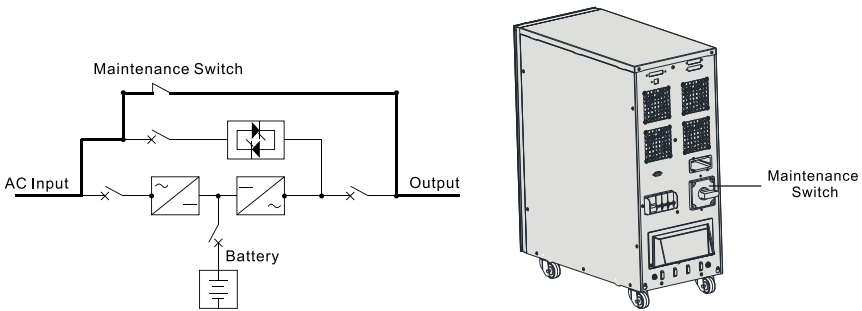


*The more detail and further information for maintenance switch Installation can refer to the maintenance switch manual.

2.9 USB Port(Optional)

USB Port function is optional, user by it from the UPS dealer, and ask Service person to provide installation. Before installation, it is imperative to cut off all the UPS power input, bypass input battery and turn off output switch. After connect UPS and computer by USB cable, you can use computer monitor UPS status by remote control.


* you can install the USB driver by CD or download it from EATON web site for free.

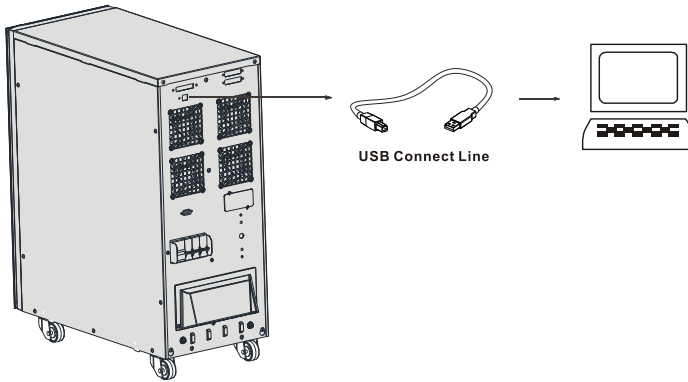

2.10 Connectivity Cards(Optional)

Connectivity cards is an optional accessory for UPS, Connectivity cards allow the UPS communicate in a variety networking environment and with different types of devices. User can select AS400 card, NMC card, CMC card, USB port +RS232, the service person will provide installation.

Before installation, UPS must be turned off.

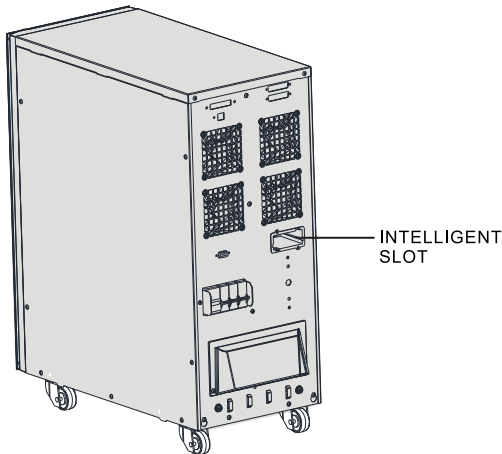

AS400 card: It owns isolated dry contact relay outputs for UPS status: such as Mains/Utility failure, Battery low, UPS alarm/OK, or on Bypass and so on. More detail about the interface definitions please read the AS400 user manual.

NMC card: NMC (Network Management Card) allows the UPS to communicate in a variety of networking environments and with different types of devices. NMC achieves a remote management for the UPS through

internet/intranet. Please contact your local dealer for further information. More detail please read the NMC user manual

CMC card: It provides connection to Modbus protocol with standard RS485 signal. More detail please read the CMC user manual.

USB+RS232 card: To establish communication between the UPS and a computer by use an appropriate communication Cable to monitor UPS .


⚠ Note:

The UPS dealer offers connectivity card box and monitor, Installation and further information please refer the card user Manual. If require WinPower sofare and AS400, NMC, CMC, USB+RS232 . Any detail and further information, please contact Eaton service center.

2.11 Software

Free Software Download – WinPower

WinPower is brand new UPS monitoring software, which provides user-friendly interface to monitor and control your UPS. This unique software provides safely auto shutdown for multi-computer systems while power failure. With this software, users can monitor and control any UPS on the same LAN no matter how far from the UPSs.

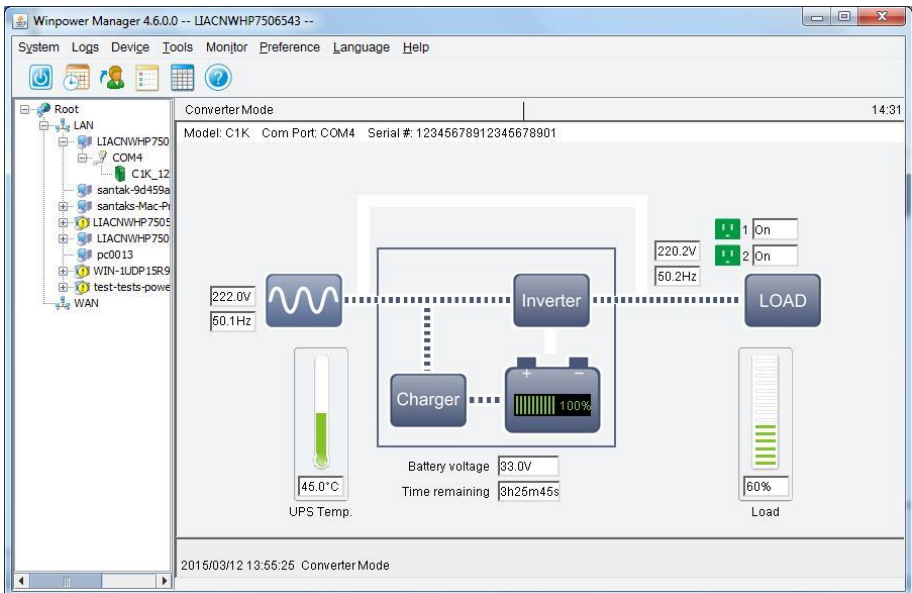


Installation procedure:

1. Go to the website:
<http://powerquality.eaton.com.cn>
2. Choose the operation system you need and follow the instruction described on the website to download the software.

When your computer restarts, the WinPower software will appear as a green plug icon located in the system tray, near the clock.

3. Control Panel

The display panel lays on the front panel of UPS, consists 2 pieces control button, 4 pieces LED indicate light and LCD panel, which is shown as below:

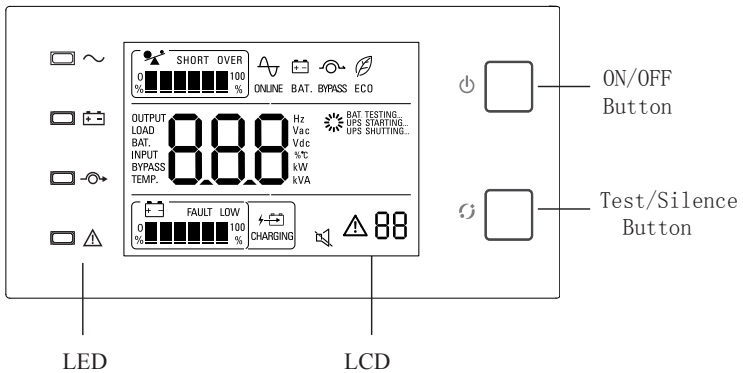

1. ON/OFF Button: Turn on/off UPS.
2. Test/Function button:

Alarm Silence mode(bypass mode and battery mode, press Test/Function button not less than 2s and not more than 10s, it will clean all the bypass mode and battery mode fault alarm; if press Test function button more than 10s, it will clean all mode fault alarm. Repeat above operation will end the silence mode.);


Battery self-test model(Line mode, press Test/Function button not less than 2s and not more than 10s, UPS will enter Battery self-test mode).

3. LED Indicator:

Consists online mode indication(ONLINE), battery statue indication(BAT), bypass indication(BYPASS), fault indication(FAULT).

Indicator	Behavior	Description
Online	Light	UPS operates normally, power module supply power for load.
	Off	Load powered by bypass (Not ECO-mode), or UPS no output.
Battery	Light	Battery supply power for load, Online LED also lighted.
	Blink per second	Charger or battery being abnormally.
Bypass	Light	UPS works in ECO-mode (Online LED also lighted), or load powered by bypass.
	Blink per second	Bypass being abnormally.
Fault	Light	UPS in fault-mode, UPS will keep powering for load when no EPO signal or short-circuit fault.


4. LCD display

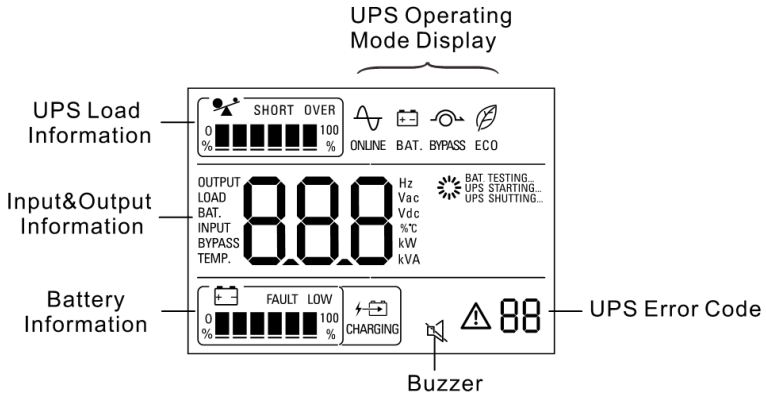

(1) Load information:
it indicates the load level.

Grid Quantity (from left to right)	Load level
1	0%-15%
2	16%-35%
3	36%-55%
4	56%-75%
5	76%-95%
6	≥96%

●When UPS output is short-circuited, SHORT indication icon will display
As below:

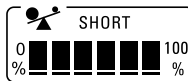

●When UPS overloaded, OVER indication icon will display as below:



(2) UPS information:
input voltage, input frequency, output voltage, Output frequency, battery voltage, load information, press the Test/Function button to select showing these information.

Type	Item		
Output	Voltage	Frequency	--
Load	Active power(W)	Apparent power(VA)	Level(%)
Battery	Voltage	Capacity	Quantity
Input	Frequency	Three phase voltage(phase –phase)	--
Bypass	Voltage	Frequency	--


(3) Battery information: display battery capacity level in present(%).

Grid Quantity (from left to right)	Capacity level
1	0%-15%
2	16%-35%
3	36%-55%
4	56%-75%
5	76%-95%
6	≥96%

●When battery voltage is low, LOW icon will display as below:



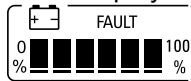

●When battery fault, FAULT icon will display as below:



If charger is normal working, CHARGING icon will light up.



(4) Buzzer: when buzzer beeps and  icon display, it indicates UPS abnormal or fault alarm. Press  can end buzzer beeping(silence mode).

(5) Fault/Alarm display: UPS abnormal, fault or alarm indication information need to deal with, below icon light up.







Lightened circularly: alarm information.




Lightened constantly: critical fault.

(6) UPS working mode display:

Icon	Information description
	UPS is working in online mode.
	UPS is charging battery.
	UPS is working in bypass mode.
	UPS is working in ECO mode.


4. Operation

4.1 Turning On UPS


 **Note:** In order to make sure UPS have enough backup Time to protect your equipment, The battery must be charging At least 12 hours before connect to your equipment at the first time.


Prepare for Turn On UPS

1. Connect UPS to mains power, turn off battery input switch, turn bypass switch to ON position, inspect battery quantity according to the LCD display information, if the quantity LCD display is different from the actual quantity, please contact with EATON service hot line or UPS dealer.

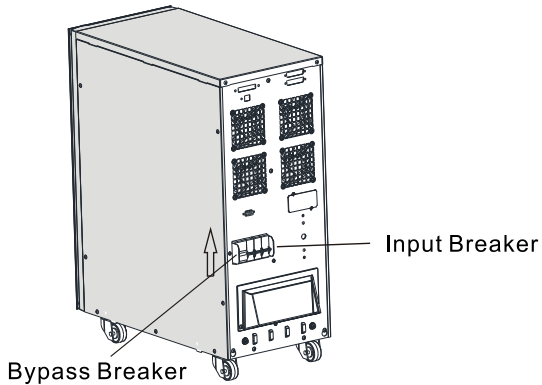


2. Turn UPS input switch to ON position, inspect whether the control LCD panel is same as below, if LCD display ERRO code on the area where "should be blank", please contact with EATON service hot line or UPS dealer.

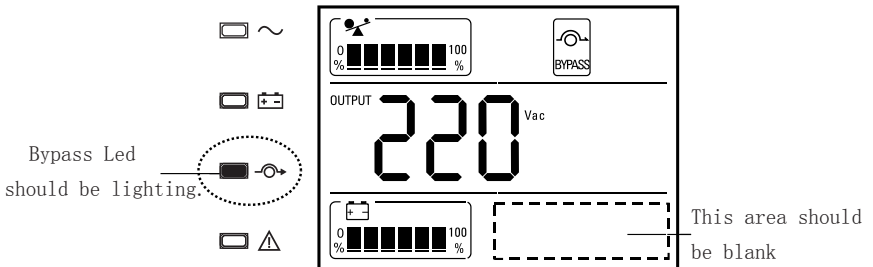


 **NOTE:** all the power connection should be cut off before any maintenance .
 UPS can be Start on with Mains or without Mains.

Turning On UPS With Mains

● Press ON/OFF button more than 1s, UPS begin to start, at the starting, UPS will go into self-test mode.

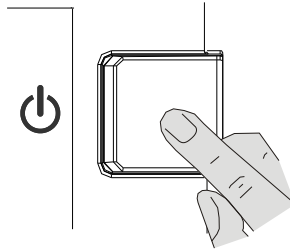

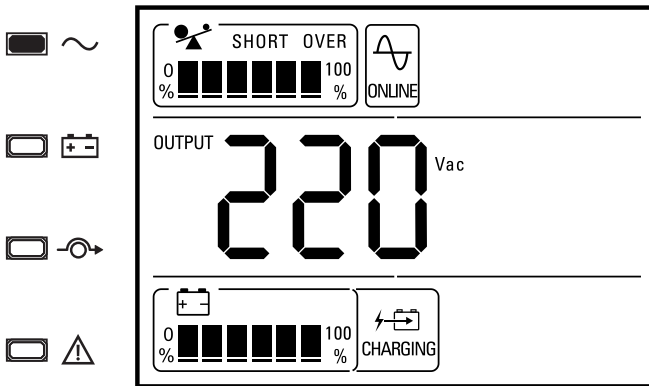


● After self-test, UPS will go into online mode, indicator and LCD as below:




(Online mode)

Indicator status:

Indicator light:  indicator unlighted: 

 **NOTE:** if UPS input Mains power abnormal, UPS will transfer to battery mode.


● UPS supply power to load, Icon  CHARGING indicate UPS is Charging.

●After UPS turning on, if battery indicator light, the output power is supplied by battery.

Turning On Without Mains (cold start)

●Press ON/OFF button more than 1s, UPS begin to start, at the starting, UPS will go into self-test mode.

●After UPS turning on, if battery indicator lights up, the output power is supplied by battery.

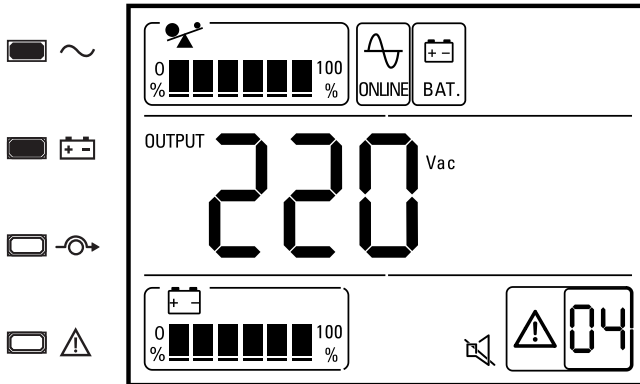


Battery mode)

●In battery mode, buzzer beeps every 4s to indicate user UPS is working in battery mode. If want to disable buzzer beeping(enter silence mode), press test/function button more than 2s.

●Under without mains power input, LCD will alternately display Warning code 04 and 08 in the bottom right corner.

4.2 Turning off UPS

● Press ON/OFF button more than 1s, UPS will turn off.

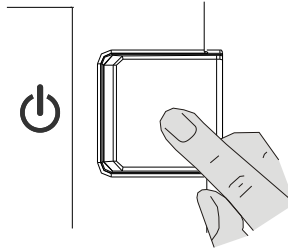

- After turning off UPS, UPS keeping output in bypass mode, indicator and LCD as below:
- When UPS is working in bypass mode, the bypass mode indicator will light up, the buzzer beeps every 2 minutes. Press test/function button more than 2s enter silence mode.
- If require UPS to stop output, disconnect the main power turn off bypass switch and battery switch.

5. Maintenance

● This series UPS only requires minimal maintenance. The battery used for standard models are value regulated sealed lead-acid maintenance free battery. These models require minimal repairs. The only requirement is to charge the UPS regularly in order to maximize the expected life of the battery. When being connected to the mains power, whether the UPS is turned on or not, the UPS keeps charging the batteries and also offers the protective function of overcharging and over-discharging.

● The UPS should be charged once every 4 to 6 months if it has not been used for a long time.

● If the battery is found not in good condition, replacement should be made. Battery replacement should be performed by qualified person.

● Replace batteries with the same quantity and same type of batteries.

● Do not replace the battery individually. All the batteries should be replaced at the same time following the instructions of the battery supplier.



● Normally, the batteries should be charged and discharged once every 4 to 6 months. Charging should begin after the UPS shuts down automatically in the course of discharging, the standard charging time for the standard UPS should be at least 12 hours.

● In the regions of hot climates, the battery should be charged and discharged every 2 months. The standard charging time should be at least 12 hours.

● If UPS is intend to be used in a no-people environment for a long time, need to inspect whether battery is normal in circularly to avoid battery damage caused by over-discharge.

6. Trouble shooting

If the UPS system does not operate correctly, check the operating status on the LCD display. And please attempt to solve the problem using the table below.

Event Name	Warning Icon 	Event Code 	Possible cause	Remedy
UPS fail to start	--	--	Press ON/OFF button Less 0.5s.	Press ON/OFF button more than 1s.
	--	0A/0b	UPS do not connect to battery or battery low voltage.	Connect UPS to battery and turn on battery switch. If battery low voltage, charge battery via external charger.
UPS No output	Light constantly	22	Overload	Check the loads and remove some non-critical loads. Check whether some loads are failed.
		23	Overheating	1)Check if the air intake and air outtake is blocked; 2) The ambient temperature is too high
		10	Output short	Remove all the loads. Turn off the UPS. Check whether the output of UPS and loads is short circuit. Make sure

				the short circuit is removed, and the UPS has no internal faults before turning on again.
Fail to transfer to online mode	Light circularly	31	Phase and neutral conductor at input of UPS system are reversed	Rotate mains power socket by 180° or connect UPS system.
		04/06/07	Input voltage/frequency/earth connection abnormal	Check whether input voltage/frequency is abnormal, or earth connect correctly.
Battery LED indicator light circularly	--	0b	Battery voltage is low	When audible alarm sounding every second, battery is almost empty.
Emergency supply period shorter than nominal value			Batteries not fully charged	Charge the batteries until the Batteries are fully charged
			Output overload	Check the loads and remove some non-critical loads. Check whether some loads are failed.
			Battery defect	Change the batteries or consult your dealer.
Bypass LED indicator light circularly	Light circularly	08	Bypass abnormal	Check whether bypass switch is turn to ON position.

