Electrical Wiring Schematic

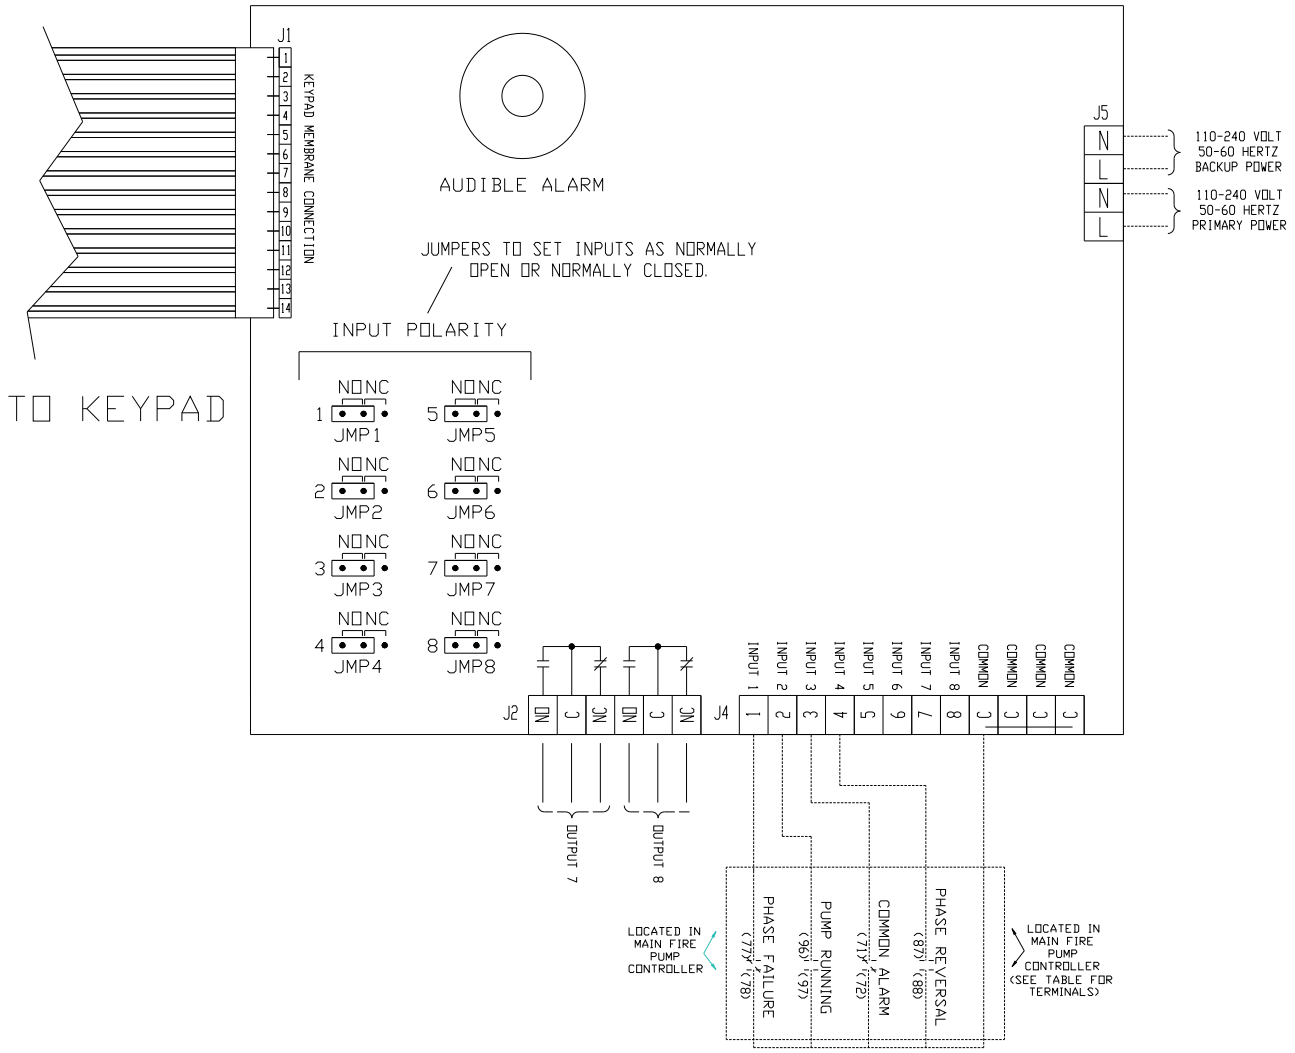

	LMR PLUS
PHASE FAILURE	77 & 78
PUMP RUNNING	96 & 97
COMMON ALARM	71 & 72
PHASE REVERSAL	87 & 88

NOTES:
1. ALL RELAY CONTACTS ARE SHOWN IN NO POWER CONDITION.
2. INPUTS 5 AND 6 ARE LINKED TO CUSTOM LIGHTS IN THE LEFT OF THE FRONT DISPLAY.
3. INPUTS 7 AND 8 ARE LINKED TO CUSTOM LIGHTS ON THE RIGHT OF THE FRONT DISPLAY AND OUTPUT RELAYS 7 AND 8

N. Y. C.
APPROVED