Electrical Wiring Schematic

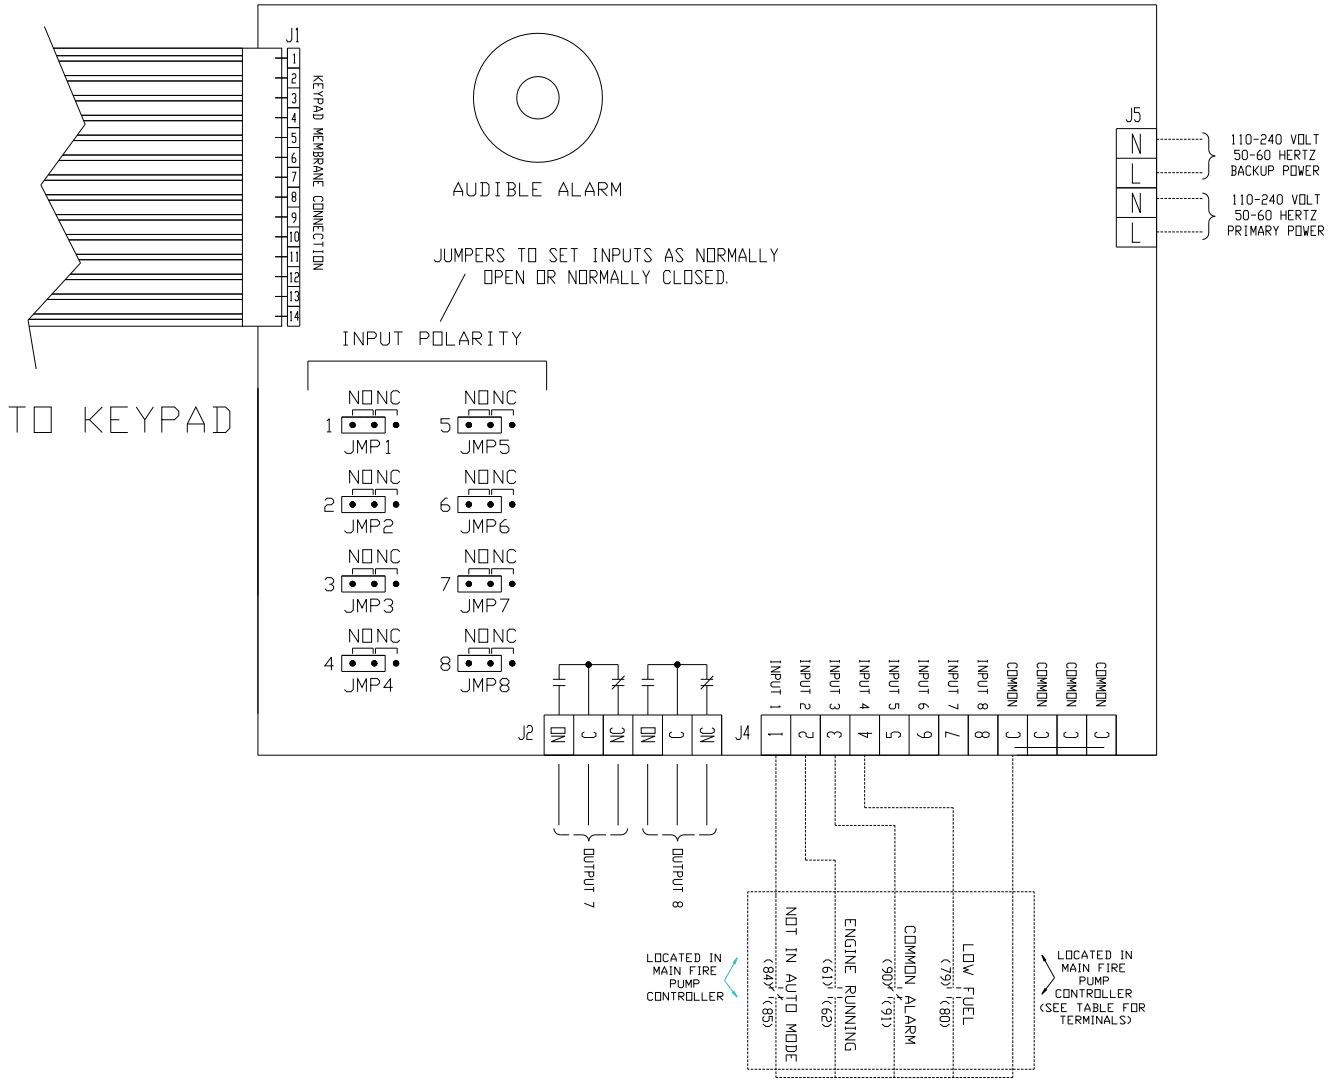

	DIESEL PLUS
NOT IN AUTO MODE	84 & 85
ENGINE RUNNING	61 & 62
COMMON ALARM	90 & 91
LOW FUEL	79 & 80

NOTES:
1. ALL RELAY CONTACTS ARE SHOWN IN NO POWER CONDITION.
2. INPUTS 5 AND 6 ARE LINKED TO CUSTOM LIGHTS IN THE LEFT OF THE FRONT DISPLAY.
3. INPUTS 7 AND 8 ARE LINKED TO CUSTOM LIGHTS ON THE RIGHT OF THE FRONT DISPLAY AND OUTPUT RELAYS 7 AND 8

N. Y. C.
APPROVED