
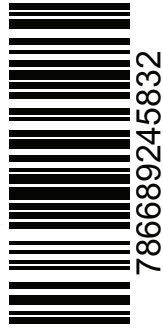



**PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 1 pole**
Cat. No. PDG2X1TA150
Style No. 624B100G77
Quantity - 1

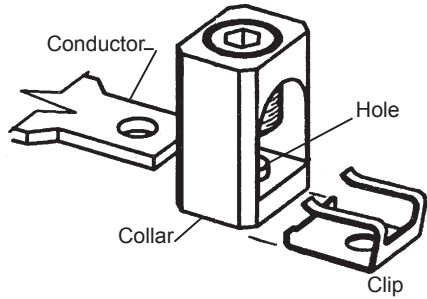

Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

**PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 1 pole**
Cat. No. PDG2X1TA150
Style No. 624B100G77
Quantity - 1


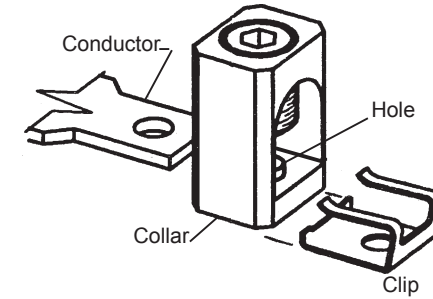


Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

+


**PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 1 pole**
Cat. No. PDG2X1TA150
Style No. 624B100G77
Quantity - 1

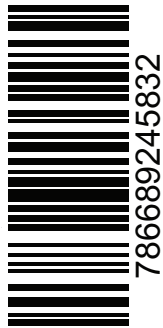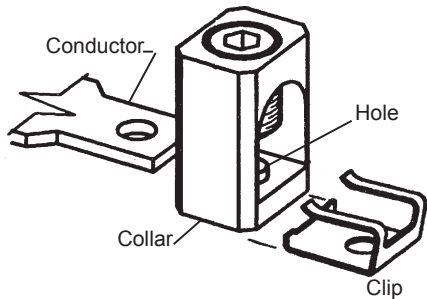

Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

**PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 1 pole**
Cat. No. PDG2X1TA150
Style No. 624B100G77
Quantity - 1

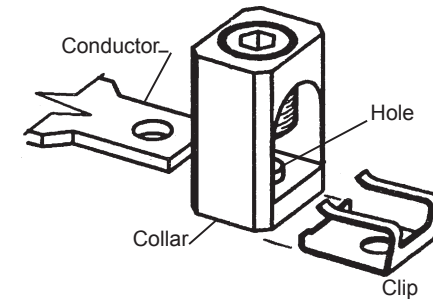

Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.