
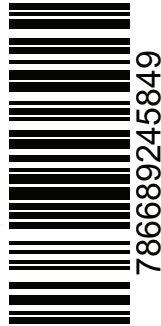




PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG  
14-4/0, 2 poles  
Cat. No. PDG2X2TA150  
Style No. 624B100G78  
Quantity - 2

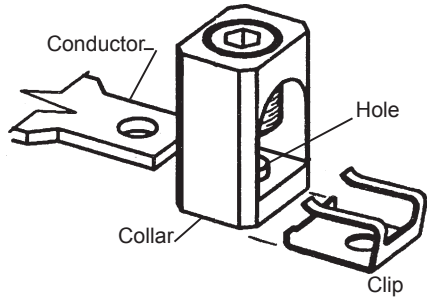

**Instructions For Assembly:**

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG  
14-4/0, 2 poles  
Cat. No. PDG2X2TA150  
Style No. 624B100G78  
Quantity - 2

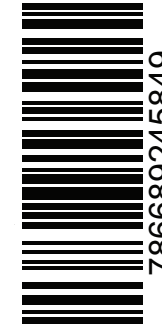
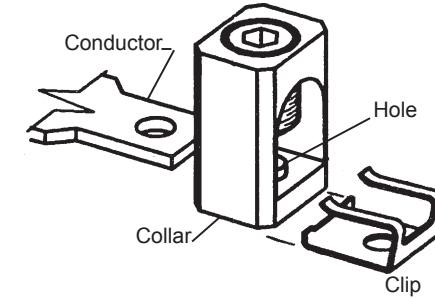


**Instructions For Assembly:**

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.




PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG  
14-4/0, 2 poles  
Cat. No. PDG2X2TA150  
Style No. 624B100G78  
Quantity - 2

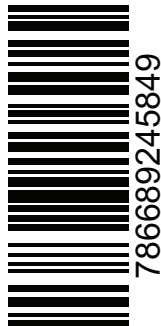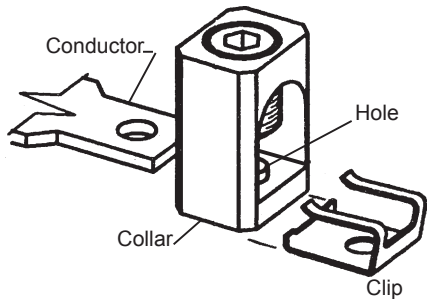

**Instructions For Assembly:**

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG  
14-4/0, 2 poles  
Cat. No. PDG2X2TA150  
Style No. 624B100G78  
Quantity - 2

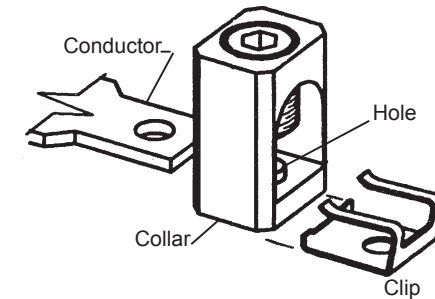

**Instructions For Assembly:**

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.