





Power
Defense™

Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps,
1 poles
Cat. No. PDG1X1TS125M
Style No. 66A1592G39
Quantity - 1

Package Content:
1 - End cap
1 - Terminal Screw
1 - Lock Washer
1 - Flat Washer
1 - Nut

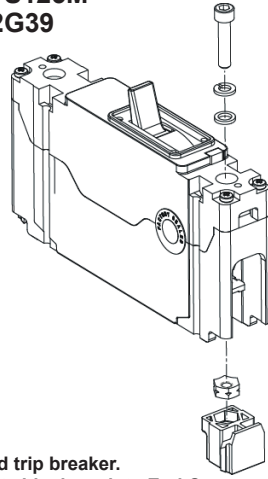

786689164911

Installation:

1. Disconnect voltage and trip breaker.
2. To install, place nut flat side down into End Cap, as shown and slide onto breaker base.
3. Mount breaker to panel.
4. Place wire terminations on top of breaker terminals.
5. Insert Terminal Screw through Washers, in order shown, and torque to 34-38 In-Lbs (4.0-4.4 N-m).

IL012169EN H01





Power
Defense™

Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps,
1 poles
Cat. No. PDG1X1TS125M
Style No. 66A1592G39
Quantity - 1

Package Content:
1 - End cap
1 - Terminal Screw
1 - Lock Washer
1 - Flat Washer
1 - Nut

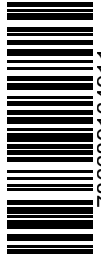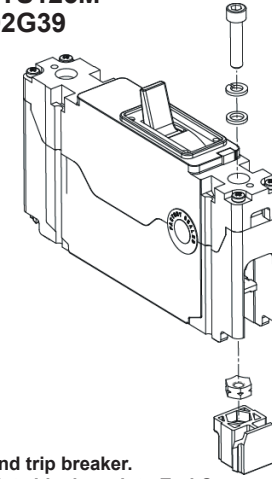

786689164911

Installation:

1. Disconnect voltage and trip breaker.
2. To install, place nut flat side down into End Cap, as shown and slide onto breaker base.
3. Mount breaker to panel.
4. Place wire terminations on top of breaker terminals.
5. Insert Terminal Screw through Washers, in order shown, and torque to 34-38 In-Lbs (4.0-4.4 N-m).

IL012169EN H01





Power
Defense™

Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps,
1 poles
Cat. No. PDG1X1TS125M
Style No. 66A1592G39
Quantity - 1

Package Content:
1 - End cap
1 - Terminal Screw
1 - Lock Washer
1 - Flat Washer
1 - Nut

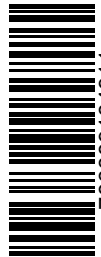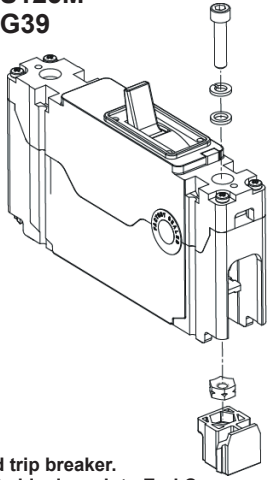

786689164911

Installation:

1. Disconnect voltage and trip breaker.
2. To install, place nut flat side down into End Cap, as shown and slide onto breaker base.
3. Mount breaker to panel.
4. Place wire terminations on top of breaker terminals.
5. Insert Terminal Screw through Washers, in order shown, and torque to 34-38 In-Lbs (4.0-4.4 N-m).

IL012169EN H01




Power
Defense™

Circuit Breaker
Accessory

For PDG1
Frame

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps,
1 poles
Cat. No. PDG1X1TS125M
Style No. 66A1592G39
Quantity - 1

Package Content:
1 - End cap
1 - Terminal Screw
1 - Lock Washer
1 - Flat Washer
1 - Nut

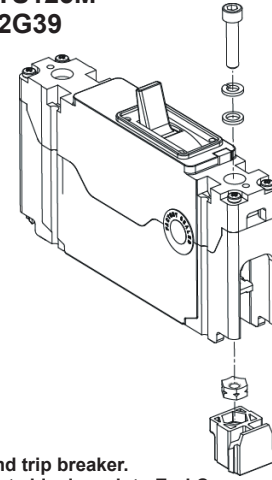

786689164911

Installation:

1. Disconnect voltage and trip breaker.
2. To install, place nut flat side down into End Cap, as shown and slide onto breaker base.
3. Mount breaker to panel.
4. Place wire terminations on top of breaker terminals.
5. Insert Terminal Screw through Washers, in order shown, and torque to 34-38 In-Lbs (4.0-4.4 N-m).

IL012169EN H01