Power Defense™

Circuit Breaker Accessory

For PDG1

Frame

IL012170EN H01

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps, 2 poles Cat. No. PDG1X2TS125M Style No. 66A1592G40 Quantity - 1 Kit

Power Defense™ Lock

> Circuit Breaker Accessory

For PDG1 Frame

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps, 2 poles Cat. No. PDG1X2TS125M


Style No. 66A1592G40 Quantity - 1 Kit

Package Content:

1 End cap

2 Torque Screws 2 Lock Washers

2 Flat Washers 2 Nuts

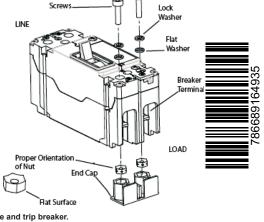

- Disconnect Voltage and trip breaker.
- . To install, place nut flat side down into End Cap,as shown and slide onto breaker base.
- . Mount breaker to panel.
- Place wire terminations on top of Breaker Terminals.
- . Insert Terminal Screw through washers, in order shown, and torque screws to 34-38 Lbs-In (4.0-4.4 N-m).

Washer LINE Package Content: 1 End cap 2 Torque Screws 2 Lock Washers 2 Flat Washers 2 Nuts Breake LOAD Proper Orientation of Nut ■ Disconnect Voltage and trip breaker. . To install, place nut flat side down into End Cap,as shown and slide onto breaker base. Mount breaker to panel.

FATON

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps, 2 poles Cat. No. PDG1X2TS125M

. Insert Terminal Screw through washers, in order shown, and torque screws to

- 34-38 Lbs-In (4.0-4.4 N-m).

FAT-N Power

IL012170EN H01

Circuit Breaker

Defense™

For PDG1 **Frame**

IL012170EN H01

Accessory

PDG1 Metric Screw Terminal / End Cap Kit, 125 amps, 2 poles Cat. No. PDG1X2TS125M

Style No. 66A1592G40 Quantity - 1 Kit


Package Content:

1 End cap 2 Torque Screws


2 Lock Washers

2 Flat Washers

2 Nuts

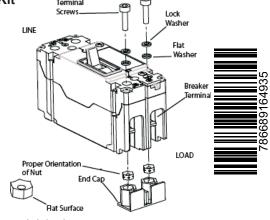

- Disconnect Voltage and trip breaker.
- . To install, place nut flat side down into End Cap, as shown and slide onto breaker base.
- . Place wire terminations on top of Breaker Terminals.
- . Insert Terminal Screw through washers, in order shown, and torque screws to 34-38 Lbs-In (4.0-4.4 N-m).

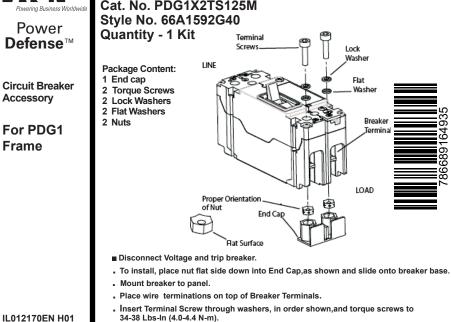

. Place wire terminations on top of Breaker Terminals.

34-38 Lbs-In (4.0-4.4 N-m).