



Instructions for Multi Wire Connector Kit, Catalog No. 3TA150F3K. For Use on Series C F-Frame Circuit Breakers, Molded Case Switches and Motor Circuit Protectors.



WARNING

DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. DEATH, SEVERE PERSONAL INJURY (INCLUDING BURN), OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.

CUTLER-HAMMER IS NOT LIABLE FOR THE MISAPPLICATION OR MISINSTALLATION OF ITS PRODUCTS.



WARNING

CONDUCTORS SIZED FOR LOAD CURRENTS LOWER THAN THE CIRCUIT BREAKER RATING WILL NOT BE PROTECTED BY THE CIRCUIT BREAKER. EACH LOAD CONDUCTOR MUST BE PROTECTED BY AN INDIVIDUAL OVERCURRENT DEVICE, AND MEET ANY ADDITIONAL REQUIREMENTS OF THE NATIONAL ELECTRICAL CODE.

KIT CONTENTS

- 3 - Molded Insulators
- 3 - Wire Connectors
- 3 - Keeper Nuts
- 3 - 10-32 Mounting Screws
- 3 - #10 Lock Washers
- 3 - #10 Flat Washers
- 1 - Torque Label
- This Instruction Leaflet

Wire Range #2 - #14 AWG (Maximum 3) Copper or Aluminum Wires.

This kit is U.L. listed for field installation on the "LOAD END" of the above listed Circuit Breakers and Molded Case Switches,



CAUTION

THE PURPOSE OF THESE CONNECTORS IS TO DISTRIBUTE POWER TO MORE THAN ONE LOAD AND ARE TO BE INSTALLED ONLY ON THE "LOAD END" OF THE CIRCUIT BREAKER.

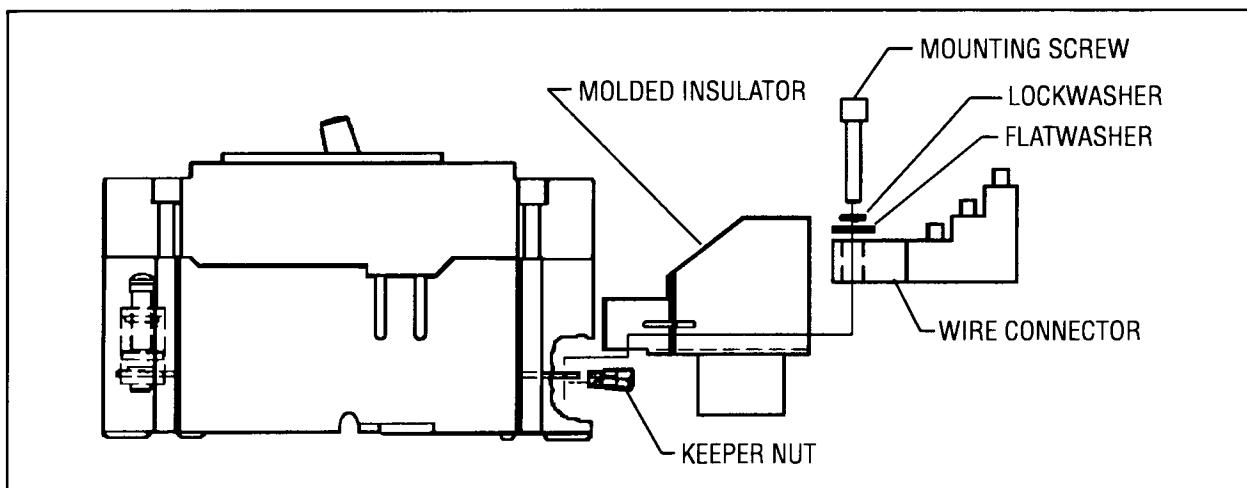


Figure 1. Typical F-Frame Circuit Breaker Installation

The installation and use of Cutler-Hammer, Inc. products should be in accordance with the provisions of the U.S. National Electrical Code and/or other government regulations, local codes or industry standards that are pertinent to the particular end use. Installation or use not in accordance with these codes and standards could be hazardous to personnel and/or equipment.

INSTALLATION INSTRUCTIONS

If circuit breaker is installed in equipment, it **MUST** be removed from equipment for installation of this kit. This kit is intended for use **ONLY** on the **LOAD END** of the circuit breaker. See Figure 1.



CAUTION

SUPPLIED MOLDED INSULATORS MUST BE INSTALLED TO MAINTAIN ELECTRICAL SPACINGS.

1. Remove and discard existing **LOAD END** wire connectors from breaker.
2. Install keeper nuts on all **LOAD END** terminals of breaker as shown in Figure 1.
3. Place kit wire connector into molded insulator as shown in Figure 1.
4. Place molded insulator and wire connector on top of breaker terminals as shown in Figure 1.



CAUTION

USE ONLY MOUNTING SCREWS PROVIDED WITH KIT. DO NOT SUBSTITUTE OR ELECTRICAL SPACINGS MAY NOT BE MET.

5. Install provided mounting screw, lockwasher and flat washer as shown in Figure 1. Torque mounting screw to 35 lb.-in.
6. Repeat steps 3 through 5 for the remaining poles.
7. Apply torque label to side of breaker.

The circuit breaker may be installed into equipment at this time.

Cutler-Hammer

Pittsburgh, Pennsylvania, USA

Style No. 6610C84H03 Effective November 1998
Printed in U.S.A. / CCI



FIELD WIRING:

Note: It may not be possible to install the largest conductors in adjacent holes due to the wire insulation thickness. Use only connections which allow insertion of wires without undue insulation interference between wires at the connector. When fully inserted into the connector the insulation should be within 1/8 inch of the connector. Strip wires to lengths shown in Table 2.

Hole Position	Wire Strip Length
UPPER	3/8 to 1/2 INCH
MIDDLE	3/4 to 7/8 INCH
LOWER	1 1/4 to 1 3/8 INCH

Cutler-Hammer



3TA150F3K Series C

**MULTI WIRE TERMINAL CONNECTORS
FOR F-FRAME CIRCUIT BREAKER**

Style No. 6610C83G01

Qty. 1
Pc.



1 07 86679 84380 9

Made in U.S.A.