




**Cutler-Hammer
Series C
Circuit Breaker
Accessory**

**For K-Frame
J-Frame**

**Cutler-Hammer
PDCD
Pittsburgh, PA
4217 887 H05**

Interphase Barrier Kit

Cat No. **IPB34
Style No. **4222B10G02**
Quantity - 1**

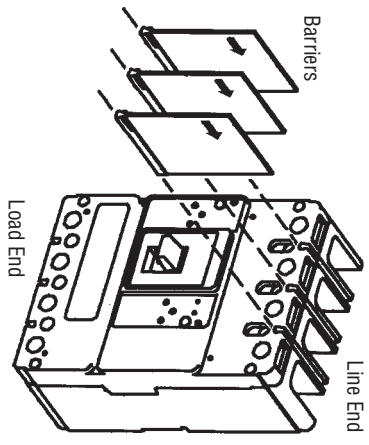

Package Of 3 Barriers
Barriers May Be Assembled To Either Line End Or Load End.
Instructions For Assembly:
• Slide Barriers Into Creepage Grooves Of Circuit Breaker.



FILE =4217B87H05/4222B10G02 BGART
DATE = 05-26-98




**Cutler-Hammer
Series C
Circuit Breaker
Accessory**

**For K-Frame
J-Frame**

**Cutler-Hammer
PDCD
Pittsburgh, PA
4217 887 H05**

Interphase Barrier Kit

Cat No. **IPB34
Style No. **4222B10G02**
Quantity - 1**

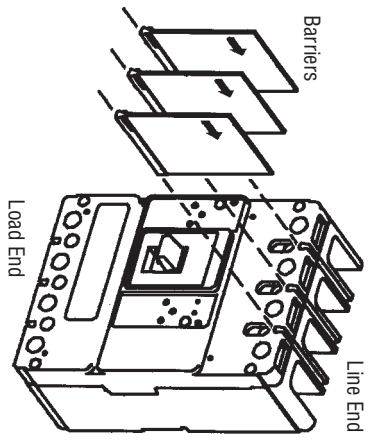

Package Of 3 Barriers
Barriers May Be Assembled To Either Line End Or Load End.
Instructions For Assembly:
• Slide Barriers Into Creepage Grooves Of Circuit Breaker.




**Cutler-Hammer
Series C
Circuit Breaker
Accessory**

**For K-Frame
J-Frame**

**Cutler-Hammer
PDCD
Pittsburgh, PA
4217 887 H05**

Interphase Barrier Kit

Cat No. **IPB34
Style No. **4222B10G02**
Quantity - 1**

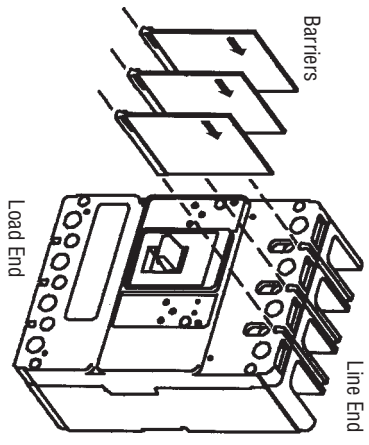

Package Of 3 Barriers
Barriers May Be Assembled To Either Line End Or Load End.
Instructions For Assembly:
• Slide Barriers Into Creepage Grooves Of Circuit Breaker.




**Cutler-Hammer
Series C
Circuit Breaker
Accessory**

**For K-Frame
J-Frame**

**Cutler-Hammer
PDCD
Pittsburgh, PA
4217 887 H05**

Interphase Barrier Kit

Cat No. **IPB34
Style No. **4222B10G02**
Quantity - 1**

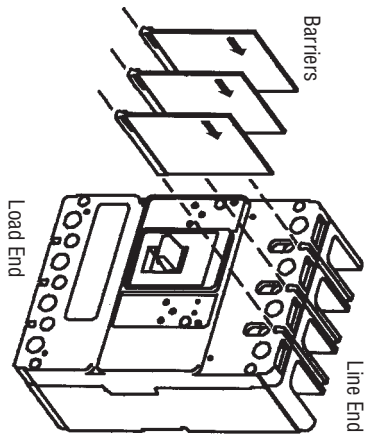

Package Of 3 Barriers
Barriers May Be Assembled To Either Line End Or Load End.
Instructions For Assembly:
• Slide Barriers Into Creepage Grooves Of Circuit Breaker.

