


FILED 4221291

Westinghouse  
 Series C  
 AB De - 107  
 Circuit Breaker  
 Accessory

Padlockable Handle Block  
 Cat. No. PHB3  
 Style No. 4221B94G01  
 Quantity - 1

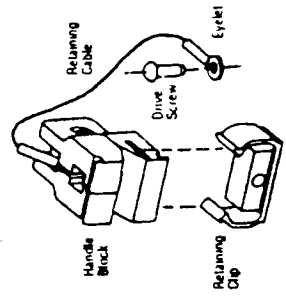

**Instructions For Assembly -**

- 1 - Peel Tape Backing From Retaining Clip & Apply To Breaker Cover Above Handle's - Figure 1.
- 2 - Insert Drive Screw Through Eyelet & Press Through Nameplate Into Hole In Breaker Cover.
- 3 - Snap Handle Block Into Retaining Clip To Hold When Not in Use.

**Instructions For Locking Handle In ON or OFF Position -**

- 1 - Remove Handle Block From Clip.
- 2 - Open Handle Block - Figure 1.
- 3 - Insert Handle Block Into Handle Opening In Breaker Cover.
- 4 - Close Handle Block To Catch Inside Of Cover - Figure 2.
- 5 - Insert Padlock Through Aligned Hole In Handle Block To Lock.

