## For applications up to 210 bar (3000 psi)





SANDWICH VALVES L-4
SANDWICH VALVES - MODEL CODE INFORMATION L-5
SPARE PARTS L-6
PRESSURE CONTROL FUNCTIONS L-8
CHECK & PILOT CHECK FUNCTIONSL-11
CHECK AND FLOW CONTROL FUNCTIONS L-12
FLOW CONTROL FUNCTIONS L-13
FLOW CONTROL & SOLENOID CONTROL FUNCTIONSL-14
SOLENOID CONTROL FUNCTIONS L-15
SOLENOID CONTROL & LOAD CONTROL FUNCTIONSL-20
LOAD CONTROL FUNCTIONS L-20

SPACER/BLANKING/LINKING PLATES	<b>L-21</b>
MODEL CODES	<b>L-22</b>
DIMENSIONS	<b>L-26</b>
PRESSURE CONTROL FUNCTIONS	<b>L</b> -50
CHECK FUNCTIONS	<b>L</b> -52
FLOW CONTROL FUNCTIONS	<b>L</b> -53
SOLENOID CONTROL FUNCTIONS	<b>L</b> -54
LOAD CONTROL FUNCTIONS	<b>L-</b> 56
BLANKING AND LINKING PLATES	<b>L</b> -57
MODEL CODES	L-58
DIMENSIONS	<b>L</b> -61


### Typical Sandwich Valve System

### 

Aluminum housing is only to be used for pressures up to 210 bar (3000 psi).

### **Warning**

Application of these products beyond published performance specifications may cause valve malfunction which may result in personal injury and/or damage to the machine.

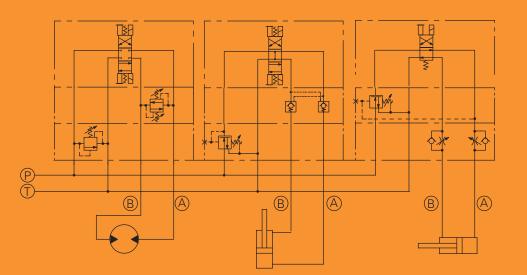

Build a compact, cost effective, reliable hydraulic system with Eaton aluminum sandwich valves and SICV valves

### Reduces system space requirements

Sandwich valves make compact hydraulic systems in which specific function valves are "sandwich" mounted between a directional valve and a standard mounting surface.

#### **Reduce cost**

Sandwich valves eliminate inter valve piping and leak-prone tube and pipe connections. Installed cost is less than when using conventional valves.

#### Versatile and easy to install

Sandwich valves have all the internal passages necessary to serve the directional valve topping them. Mounting surfaces and port patterns are to international standards: any valve conforming to ISO 4401 size 03; ANSI/B93.7M size D03; NFPA-D03; CETOP 3; and DIN 24340, NG6 mounting interface can be used with these Sandwich valves.


Linking and blanking plates are available to facilitate a variety of circuit designs and flexibility Figure 2 in applying these valves.

#### **Rugged and reliable**


Cartridges are produced from hardened steel and mounted in aluminum housings. Excellent reliability is ensured. Cartridges are accessible without removing valves from an assembled stack. The housings are assembled in a kit containing a locating pin for error free installation, all necessary plugs and standard Viton seals.

# Sandwich systems... Easy to understand, easy to design

Sandwich circuitry is best shown using slightly different symbols than those for traditional valve configurations. Each Sandwich symbol has the same basic form and size as shown in figure 1.



For ease of understanding, remember the directions of flow for each line, and that all four flow paths pass through each valve (see figure 2).



For clarity, directional valves are drawn vertically in Sandwich circuit diagrams (see figure 3).

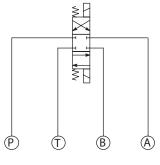


Figure 3

Each station (valve stack) is a combination of functions. When designing and assembling Sandwich valves, care must be taken to ensure that they interact as required by stacking the functions in the correct sequence (figure 4 is an example).

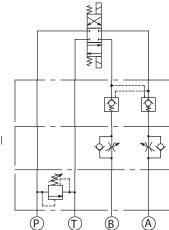


Figure 4

Relief valves should normally be positioned next to the mounting surface (i.e. at the bottom of the stack). When both a flow control and a pilot operated check valve are required, it is recommended that the flow control valve be between the check valve and the actuator to prevent check valve chatter.

A combination of directional valve, sandwich valve(s) and subplate/manifold block completes the assembly.

#### Sandwich valve assemblies

Aluminum sandwich valve assemblies consist of a housing kit, and one or more cartridges. They can be purchased complete by specifying a sandwich model code or built by mixing an appropriate housing kit with cartridges to attain a desired function.

A housing kit contains a housing, locating pin, all necessary plugs and standard Viton seals.

#### Sandwich valve locators

Sandwich valve locators group products by function and provides an easy way to identify a specific sandwich valve in the catalog.

It presents a sandwich valve functional symbol, function description and basic model code. Since every sandwich is put together by inserting cartridges into a housing kit, the locator provides concise information for easy selection of the components to build a specific function.

The following information is shown in the locator for every function: Housing kit model, part number, catalog page with the detailed information for the housing kit, model code and the catalog number for the cartridges & cartridge cavity.

#### Housing kits data page

Housing kits data pages L-25 thru L-44 provide the dimensional data, typical cartridges and functional information.

### Sandwich valves - model code information

Easy to understand, easy to design

### Sandwich valves ordering information

To order sandwich valve components, use the information in the sandwich valves locator pages L-6 thru L-19.

To order a sandwich valve complete for models with one cartridge:

- Select the model code from the sandwich valve locator. Note that the housing kit model code substitutes for the standard inline body code in the same model field.
- Go to the referenced cartridge valve literature to complete the balance of the sandwich model code.

To order a sandwich valve complete for models with two cartridges:

- Select the model code from the sandwich valves locaor.
- Go to the referenced page for the model code description.

### Sandwich valve model codes

In order to speed the release of new products to customers, the sandwich valve product line has been configured with a fixed length model code. A fixed length model code simplifies the ordering process for our customers and facilitates the automated production release of new valves and settings. In general, we have followed the standard model code for the base valve with the following three exceptions:

- Seals: When specifying Buna-N seals, an N should be used in the model code for sandwich valves. (In the standard valve model code Buna-N seals are specified by leaving this column blank.)
- 2. Pressure settings: To avoid confusion on pressure settings, the setting should always be specified and not left blank. In addition, the confusing decimal system has been eliminated for sandwich valves. In the sandwich valve model code, simply specify the entire pressure setting in PSI using four digits for relief valves and 3 digits for check valves. Include leading zeros if necessary. For example:

Relief and Counterbalance Valves

500 psi – 0500 50 psi – 0050 1525 psi – 1525

Check Valves


- 210 psi 210 20 psi - 020 3 psi - 003
- 3. Flow settings: To avoid confusion, the setting should

always be specified and not left blank. In the sandwich valve model codes, all flow settings are specified in tenths of a GPM without decimal points. (include trailing zeroes and leading zeros if where required.) For example:

1 gpm – 010 1.2 gpm – 012 15 gpm - 150 Two examples are shown below:


### Base valve model code

#### RV5-10(V)-\*-\*\*\*\*\*\*\*/\*\*




#### Sandwich valve model code (D03)

#### RV5-10\*-\*-A321P-\*\*/\*\*\*\*




#### Base valve model code



### Sandwich valve model code (relieving from P to T) (D05)

#### FAR1-12\*-\*-A524A-\*\*\*



### Spare parts

For sandwich valve assemblies


### Accessory plates & stud rods

#### **Accessory plates**

Linking and blanking plates are available to facilitate a variety of circuit designs and flexibility in applying these valves. All accessory plates come with Viton O-Rings.

#### Stud rods

To simplify the installation of the sandwich valves, stud rod & nuts kits can be ordered and cut to length in the field. Once the rods are installed, they act as a guide when assembling the sandwich valves stack. After assembling the directional control valve on top of the stack, special nuts are used to retain the stack. Eaton offers 178 mm (7 in) or 305 mm (12 in) bolt kits (one bolt kit for these Sandwich valves comprises 4 bolts). To determine your needs, use the following guide for bolt length calculation.

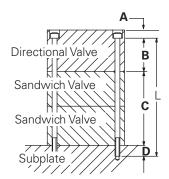

- A Amount of thread required for the stud nut 10,2 (0.40)
- **B** Bolt clamp length in directional valve, blanking plate etc.
- C Height of intermediate valve stack, comprising Vickers Sandwich valve(s) plus tapping plates etc.
- D Depth of thread engagement in sub-plate/ manifold block. Minimum amount of thread required 10,2 mm (0.40 in.)
- L Required bolt length; select from the table

#### **Filtration requirements**

For products in this catalog the recommendation fluid cleanliness levels is: Up to 210 bar (3000 psi) 18/16/13

#### Stud rod & nut kit\*

Metric: M5-0	0.8thd	Inch: 10-24	
Length (mm)	Kit number	Length (in)	Kit number
178	02-184934	7	02-184932
305	02-184935	12	02-184933

· Kit contains four stud rods and four stud nuts

#### **Spare parts**

Stud rod and nut kits are listed above. Individual nuts are also available:

	Seal kits	
Kit number	Seal material	Seal Kit number
02-184940	Buna N	02-184951
02-184941	Viton	02-185282
	number 02-184940	Kit numberSeal material02-184940Buna N

**Note:** Bolts should be torqued to 4.5-6.0 Nm (40-53 in. lbs) with threads lubricated.

**Note:** If not using Eaton bolt kits, bolts must be to Grade 12.9 (ISO 898) or better.

#### **Temperature limits**


Ambient range: -40° C to +120° C (-40° F to +248° F)

#### **Ordering procedure**

Specify requirements by housing kit, or valve model code, and by seal kit number.



CETOP05 Sandwich valve bodies and assemblies for applications up to 210 bar (3000 psi)

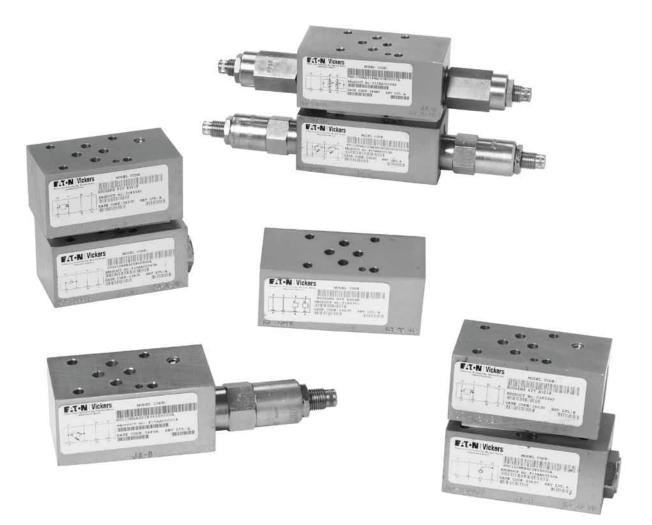

### Pressure control functions

 $\bowtie$ 

Sandwich valves locator ISO 4401-03/CETOP03 series

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	I	Functiona	l symbol	Model code	Housing kit	
	P 1	Ē	3 А			
Relief valve				RV1 10 * * A321P **/**** 00	Model Part No.	A321P 02 185342
		•			Cartridge Cartridge Data Sheet Cavity	RV1-10 Section E C-10-2
Relief valve					Model Part No.	A321A 02-185340
A-1					Cartridge Cartridge Data Sheet Cavity	RV1-10 Section E C-10-2
Relief valve				RV1 10 * * A321B **/**** 00	Model Part No.	A321B 02-185341
					Cartridge Cartridge Data Sheet Cavity	RV1-10 Section E C-10-2
Proportional				ERV1 10 * *** A321P *** * 00	Model Part No.	A321P 02-185342
Relief valve P-T		•			Cartridge Cartridge Data Sheet Cavity	ERV1-10 Section B C-10-2
Proportional					Model Part No.	A321A 02-185340
Relief valve A-T	·				Cartridge Cartridge Data Sheet Cavity	ERV1-10 Section B C-10-2
Proportional				ERV1 10 * *** A321B *** * 00	Model Part No.	A321B 02-185341
Relief valve B-T			·		Cartridge Cartridge Data Sheet Cavity	ERV1-10 Section B C-10-2
Relief valve				RV5 10 * * A321P **/**** 00	Model Part No.	A321P 02-185342
P-T					Cartridge Cartridge Data Sheet Cavity	RV5-10 Section B C-10-2
Relief valve				RV5 10 * * A321A **/**** 00	Model Part No.	A321A 02-185340
A-T					Cartridge Cartridge Data Sheet Cavity	RV5-10 Section E C-10-2
Relief valve		×		RV5 10 * * A321B **/**** 00	Model Part No.	A321B 02-185341
B-T					Cartridge Cartridge Data Sheet Cavity	RV5-10
	P T	В	A			

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

### Pressure control functions

Function	Euro	ctional syr	nhol		Model code	Housing kit	
		•		٨	Model code	Housing Kit	
Solenoid	F I	L	, 	A 	SRV 10 * 0 S A322P 35/ ** **	Model Part No.	A322P 02-185344
Controlled Relief Valve P-T Normally Opened		, 			Refer to page L-20 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	SV5-8/RV-1-10
Solenoid Controlled					SRV 10 * C S A322P 35/*** **	Model Part No.	A322P 02-185344
P-T Normally Closed					Refer to page L-20 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	SV5-8-C/ RV1-10 Section A/E C-8-2/C-10-2
Dual Relief Valve					1DR30 * A311W A** *B** *	Model Part No.	A311W 02-185364
A-T, B-T				•	Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	1DR30 qty 2 Section E C-8-2 qty. 2
Dual					RV1 10 * * A312W A**/****B**/**** 00	Model Part No.	A312W 02-185365
Relief valve A-T, B-T				•	Refer to page L-20 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	RV1-10 qty 2 Section E C-10-2 qty 2
Dual			X		RV5 10 * * A312W A**/****B**/**** 00	Model Part No.	A312W 02-185365
Relief valve A-T, B-T	·			•	Refer to page L-20 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	RV5-10 qty 2 Section E C-10-2 qty 2
Cross Port					RV3A 10 ** A321W A**/****B**/****00	Hsg kit: model Part No.	A321W 02-185343
Relief Valve A-B				•	Refer to page L-20 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	RV3A-10 qty 2 Section E C-10-2 qty 2
Cross Port				 	RV5A 10 * * A321W A**/****B**/**** 00	Model Part No.	A321W 02-185343
Relief Valve A-B	 			•	Refer to page L-20 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	RV5-10 qty 2 Section E C-10-2 qty 2
Sequence Valve					PSV7 10 * * A316P **/**** 00	Model Part No.	A316P 02-185374
In to P	 	•			Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	PSV7-10 Section E C-10-3
Sequence Valve				·	PSV7 10 * * A316A **/**** 00	Model Part No.	A316A 02-185372
In to A Reverse FF Check	· · · ·	,	·······///		Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	PSV7-10/ CV3-10 Section E/G C-10-3/C-10-2
P (*	Т	B	A				

### Pressure control functions

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Fun	ctional symbol		Model code	Housing kit	
Sequence Valve	P 7	т в а L I   т	·	PSV7 10 * * A319A **/**** 00	Model Part No.	A319A 02-185377
Reverse FF Check		······································		Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	PSV7-10/CV3-10 Section E/G C-10-3/C-10-2
Sequence Valve			1	PSV7 10 * * A316B **/**** 00	Model Part No.	A316B 02-185373
In to B Reverse FF Check				Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	PSV7-10/ CV3-10 Section E/G C-10-3/C-10-2
Sequence Valve				PSV7 10 * * A319B **/**** 00	Model Part No.	A319B 02-185378
Out of B					Cartridge	PSV7-10/
Reverse FF Check				Refer to page L-21 for model code breakdown	Cartridge Data Sheet Cavity	CV3-10 Section E /G C-10-3/C-10-2
Reducing			]	PRV2 10 * * A326P **/**** 00	Model Part No.	A326P 02-185353
Valve on (P) Drained to T				Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	PRV2-10 Section E C-10-3
Reducing on A				PRV2 10 * * A310A **/**** 00	Model Part No.	A310A 02-185362
Drained to T					Cartridge	PRV2-10/
Reverse FF Check			Refer to page L-21 for model code breakdown	Cartridge Data Shee Cavity	CV3-10 Section E/G C-10-3/C-10-2	
Reducing on B				PRV2 10 * * A310B **/**** 00	Hsg kit: model Part No.	A310B 02-185363
Drained to T Reverse FF Check				Refer to page L-21 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	PRV2-10/CV3-10 Section E/G C-10-3/C-10-2
Pressure Compensator			j	PCR 10 * A309P *** 00	Model Part No.	A309P 02-185381
Restrictive on P w/Shuttle Sense				Refer to page L-22 for model code breakdown	Cartridge	DPS2-10-F-F-0/
from A & B					Cartridge Data Sheet Cavity	DSV2-8 Section L/G C-10-3S/C-8-3
Pressure Compensator			]	PCB 10 * * A319P *** 00	Model Part No.	A319P 02-185382
Bypass to T w/Shuttle Sense		$\leftarrow \downarrow \diamond \rightarrow \bullet$		Refer to page L-22 for model code breakdown	Cartridge	DPS2-10-P-F-0/ DSV2-8
from A & B	U				Cartridge Data Sheet Cavity	
	P T	B A	1			

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

### Check & pilot check functions

Function	Function	ial symbol	Model code	Housing kit	
Pilot Operated Check Valve On A Pilot from B	P T	B A	4CK30 * A323A *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A323A 6025820-001 4CK30 Section G A6610
Pilot Operated Check Valve On B Pilot from A			4CK30 * A323B *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A323B 6025821-001 4CK30 Section G A6610
Pilot Operated Check Valve On A & B Cross Piloted			4CK30 * A323W *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A323W 6025822-001 4CK30 Section G A6610
Check Valve On P			CV3 8 * P A307P *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A307P 02-185356 CV3-8 Section G C-8-2
Check Valve On P			CV3 10 * P A324P *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324P 02-185350 CV3-10 Section G C-10-2
Check Valve on T	Çw.		CV3 8 * P A307T *** 00	Hsg kit: model Part No. Cartridge Cartridge Data Sheet Cavity	A307T 02-185357 CV3-8 Section G C-8-2
Check Valve On T			CV3 10 * P A308T *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A308T 02-185360 CV3-10 Section G C-10-2
Check Valve On A Free Flow Out			CV3 8 * P A307A *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A307A 02-185354 CV3-8 Section G C-8-2
Check Valve On A Free Flow Out		<u> </u>	CV3 10 * P A314A *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314A 02-185367 CV3-10 Section G C-10-2

### Check and flow control functions

### **▲** Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Functio	nal symbol		Model code	Housing kit	
Check Valve On B Free Flow Out	р Т	B A		CV3 8 * P A307B *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A307B 02-185355 CV3-8 Section G C-8-2
Check Valve On B Free Flow Out		¢		CV3 10 * P A314B *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314B 02-185368 CV3-10 Section G C-10-2
Check Valve On T On A & B		<		CV3 8 * P A320T *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A320T 02-185379 CV3-8 qty 2 Section G C-8-2 qty 2
Check Valve on T to A & B		~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		CV10 10 * P A317T *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A317T 02-185375 CV3-10 qty 2 Section G C-10-2 qty 2
Anti-Caviation Check P-T				CV16 10 * P A321P *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A321P 02-185342 CV16-10-P-0-5 Section G C-10-2
Shuttle Valve A & B Output External				DSV2 8* B A309W 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A309W 02-185361 DSV2-8-B-0 Section G C-8-3
Flow Control Meter in P	*			NV1 10 * * A324P 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324P 02-185350 NV1-10 Section H C-10-2
Flow Control & Check Meter in A				FCV7 10 * * A324A FF 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324A 02-185348 FCV7-10 Section H C-10-2
Flow Control & Check Meter Out A		~ ×		FCV7 10 * * A314A FF 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314A 02-185367 FCV7-10 Section H C-10-2
Flow Control & Check Meter in B		<b>↓ ∦</b>		FCV7 10 * * A324B FF 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324B 02-185349 FCV7-10 Section H C-10-2
	P T	B A	1			

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

### Flow control functions

Function	Functional symbol	Model code	Housing kit	
Flow Control & Check Meter Out B		FCV7 10 * * A314B FF 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314B 02-185368 FCV7-10 Section H C-10-2
Flow Control & Check Meter In A & B		FCV7 10 * * A324W FF 00 Refer to page L-22 for model code breakdown	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324W 02-185351 FCV7-10 qty 2 Section H C-10-2 qty 2
Flow Control & Check Meter Out A & B		FCV7 10 * * A314W FF 00 Refer to page L-22 for model code breakdown	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314W 02-185369 FCV7-10 qty 2 Section H C-10-2 qty 2
Flow Regulator Pressure Compensated and Check Meter in P		FAR1 10 * * A324P *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324P 02-185350 FAR1-10 Section H C-10-2
Flow Regulator Pressure Compensated and Check Meter in A		FAR1 10 * * A314A *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314A 02-185367 FAR1-10 Section H C-10-2
Flow Regulator Pressure Compensated and Check Meter Out A		FAR1 10 * * A324A *** 00	Hsg kit: model Part No. Cartridge Cartridge Data Sheet Cavity	A324A 02-185348 FAR1-10 Section H C-10-2
Flow Regulator Pressure Compensated and Check Meter in B		FAR1 10 * * A314B *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314B 02-185368 FAR1-10 Section H C-10-2
Flow Regulator Pressure Compensated and Check Meter Out B		FAR1 10 * * A324B *** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324B 02-185349 FAR1-10 Section H C-10-2
Flow Regulator Pressure Compensated and Check Meter In A & B		FAR1 10 * * A314W A***B*** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314W 02-185369 FAR1-10 qty 2 Section H C-10-2 qty 2
P				

### Flow control & solenoid control functions

### **▲** Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Functional syn	nbol	Model code	Housing kit	
Flow Regulator Pressure Compensated and Check Meter Out A & B		3 A	FAR1 10 * * A324W A***B*** 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324W 02-185351 FAR1-10 qty 2 Section H C-10-2 qty 2
Proportional Flow Control Pressure Compensation on P			EPV 10 * * A313P *** * * 00 Refer to page L-23 for model code breakdown	Model Part No. Cartridge Cartridge Data Sheet Cavity	A313P 02-185366 EPV-10, DPS2-10 Section I & B C-10-2/C-10-3S
Solenoid 2 Way Poppet Type (P-T), N/C			SV3 10 * C A325P *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A325P 02-185352 SV3-10-C Section A C-10-2
Solenoid 2 Way Poppet Type (P-T), N/O			SV3 10 * 0 A325P *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A325P 02-185352 SV3-10-0 Section A C-10-2
Solenoid 2 Way Spool type (P-T), N/C			SV4 10 * C A325P *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A325P 02-185352 SV4-10-C Section A C-10-2
Solenoid 2 Way Spool Type (P-T), N/O			SV4 10 * 0 A325P *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A325P 02-185352 SV4-10-0 Section A C-10-2
Solenoid 2 Way Poppet Type Blocked on A Normally Closed			SV3 10 * C A324A *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324A 02-185348 SV3-10-C Section A C-10-2
	РТВ	A			

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

		7		
Function	Functional symbol	Model code	Housing kit	
Poppet Type Blocked on A Normally Open		A SV3 10 * 0 A324A *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324A 02-185348 SV3-10-0 Section A C-10-2
Spool Type Blocked on A Normally Closed		SV4 10 * C A324A *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324A 02-185348 SV4-10-C Section A C-10-2
Spool Type Blocked on A Normally Open		SV4 10 * 0 A324A *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324A 02-185348 SV4-10-0 Section A C-10-2
Poppet Type Blocked on B Normally Closed		SV3 10 * C A324B *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324B 02-185349 SVC3-10-C Section A C-10-2
Poppet Type Blocked on B Normally Open		SV3 10 * 0 A324B *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324B 02-185349 SV3-10-C Section A C-10-2
Spool Type Blocked on B Normally Closed		SV4 10 * C A324B *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324B 02-185349 SV4-10-C Section A C-10-2
Spool Type Blocked on B Normally Open		SV4 10 * 0 A324B *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324B 02-185349 SV4-10-0 Section A C-10-2
Poppet Type Blocked on A & B Normally Closed		SV3 10 * C A324W *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324W 02-185351 SV3-10-C qty 2 Section A C-10-2 qty 2
Poppet Type Blocked on A & B Normally Open		SV3 10 * 0 A324W *** * 00	Part No. Cartridge Cartridge Data Sheet	A324W 02-185351 SV3-10-0 qty 2 Section A C-10-2 qty 2
P				

### Solenoid control functions

 $\bowtie$ 

### **▲** Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Functional symbol	Model code	Housing kit	
Spool Type Blocked On A & B Normally Closed		SV4 10 * C A324W *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324W 02-185351 SV4-10-C qty 2 Section A C-10-2 qty 2
Spool Type Blocked on A & B Normally Open		SV4 10 * 0 A324W *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A324W 02-185351 SV4-10-0 qty 2 Section A C-10-2 qty 2
Poppet Type Load Holding On A Normally Closed		SV3 10 * C A314A *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314A 02-185367 SV3-10-C Section A C-10-2
Poppet Type Load Holding on A Normally Open		SV3 10 * 0 A314A *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314A 02-185367 SV3-10-0 Section A C-10-2
Poppet Type Load Holding on B Normally Closed		SV3 10 * C A314B *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314B 02-185368 SV3-10-C Section A C-10-2
Poppet Type Load Holding on B Normally Open		SV3 10 * 0 A314B *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314B 02-185368 SV3-10-0 Section A C-10-2
Poppet Type Load Holding on A & B Normally Closed		SV3 10 * C A314W *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314W 02-185369 SV3-10-C qty 2 Section A C-10-2 qty 2
Poppet Type Load Holding on A & B Normally Open		SV3 10 * 0 A314W *** * 00	Model Part No. Cartridge Cartridge Data Sheet Cavity	A314W 02-185369 SV3-10-0 qty 2 Section A C-10-2 qty 2

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

### Solenoid control functions

Function	Functional symbol	Model code	Housing kit
F Poppet Type Bi-Directional Load Holding on A Normally Closed		SBV11 10 * C A314A *** * 00	ModelA314APart No.02-185367CartridgeSBV11-10-CCartridge Data SheetSection ACavityC-10-2
Poppet Type Bi-Directional Load Holding on A Normally Open		SBV11 10 * 0 A314A *** * 00	ModelA314APart No.02-185367CartridgeSBV11-10-0Cartridge Data SheetSection ACavityC-10-2
Poppet Type Bi-Directional Load Holding on B Normally Closed		SBV11 10 * C A314B *** * 00	ModelA314BPart No.02-185368CartridgeSBV11-10-CCartridge Data SheetSection ACavityC-10-2
Poppet Type Bi-Directional Load Holding on B Normally Open		SBV11 10 * 0 A314B *** * 00	ModelA314BPart No.02-185368CartridgeSBV11-10-0Cartridge Data SheetSection ACavityC-10-2
Poppet Type Bi-Directional Load Holding on A & B Normally Closed		SBV11 10 * C A314W *** * 00	Model A314W Part No. 02-185369 Cartridge SBV11-10-C qty 2 Cartridge Data Sheet Section A Cavity C-10-2 qty 2
Poppet Type Bi-Directional Load Holding on A & B Normally Open		SBV11 10 * 0 A314W *** * 00	Model A314W Part No. 02-185369 Cartridge SBV11-10-0 qty 2 Cartridge Data Sheet Section A Cavity C-10-2 qty 2
P			

### Solenoid control functions

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Fun	ctional sym	bol		Model code	Housing kit	
Poppet Type	P	т в		4	SV3 10 * C A315A *** * 00	Model Part No.	A315A 02-185370
Unload A - T Normally Closed		·			3V3 10 C A313A 00	Cartridge Cartridge Data Sheet Cavity	SV3-10-C Section A C-10-2
Poppet Type			<b>K</b>	]	SV3 10 * 0 A315A *** * 00	Model Part No.	A315A 02-185370
Normally Open		<b>├</b> ────┤				Cartridge Cartridge Data Sheet Cavity	SV3-10-0 Section A C-10-2
Spool Type Jnload A - T					SV4 10 * C A315A *** * 00	Model Part No.	A315A 02-185370
Normally Closed		•				Cartridge Cartridge Data Sheet Cavity	SV4-10-C Section A C-10-2
Spool Type Jnload A - T				]	SV4 10 * 0 A315A *** * 00	Model Part No.	A315A 02-185370
Normally Open						Cartridge Cartridge Data Sheet Cavity	SV4-10-0 Section A C-10-2
Poppet Type					SV3 10 * C A315B *** * 00	Model Part No.	A315B 02-185371
Jnload B - T Normally Closed						Cartridge Cartridge Data Sheet Cavity	SV3-10-C Section A C-10-2
Poppet Type				]	SV3 10 * 0 A315B *** * 00	Model Part No.	A315B 02-185371
Jnload B - T Normally Open						Cartridge Cartridge Data Sheet Cavity	SV3-10-0 Section A C-10-2
Poppet Type					SV4 10 * C A315B *** * 00	Model Part No.	A315B 02-185371
Unload B - T Normally Closed						Cartridge Cartridge Data Sheet Cavity	SV4-10-C Section A C-10-2
	РТ	В	А				
		<u> </u>		<u>+</u>			

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function		tional sym			Model code	Housing kit	
F 2 Way Spool Type	> T	E	· /	A ]	SV4 10 * 0 A315B *** * 00	Model Part No.	A315B 02-185371
Unload B - T Normally Open	•	*				Cartridge Cartridge Data Sheet Cavity	SV4-10-0 Section A C-10-2
2 Way					SV3 10 * C A317T *** * 00	Model Part No.	A317T 02-185375
Poppet Type Unload A & B - T Normally Closed						Cartridge Cartridge Data Sheet Cavity	SV3-10-C qty 2 Section A C-10-2 qty 2
2 Way					SV3 10 * 0 A317T *** * 00	Model Part No.	A317T 02-185375
Poppet Type Unload A & B - T Normally Open						Cartridge Cartridge Data Sheet Cavity	SV3-10-0 qty 2 Section A C-10-2 qty 2
2 Way					SV4 10 * C A317T *** * 00	Model Part No.	A317T 02-185375
Spool Type Unload A & B - T Normally Closed						Cartridge Cartridge Data Sheet Cavity	SV4-10-C qty 2 Section A C-10-2 qty 2
2 Way			×		SV4 10 * 0 A317T *** * 00	Model Part No.	A317T 02-185375
Spool Type Unload A & B - T Normally Open						Cartridge Cartridge Data Sheet Cavity	SV4-10-0 qty 2 Section A C-10-2 qty 2
Poppet Type					SBV11 10 * C A318W *** * 00	Model Part No.	A318W 02-185376
Bi-Directional Blocked A - B & B - Normally Closed			** **			Cartridge Cartridge Data Sheet Cavity	SBV11-10-C Section A C-10-2
Poppet Type					SBV11 10 * 0 A318W *** * 00	Model Part No.	A318W 02-185376
Bi-Directional Blocked A - B & B - Normally Open			*			Cartridge Cartridge Data Sheet Cavity	SBV11-10-0 Section A C-10-2
P	т   	B	A	<u> </u>			

### Solenoid control & load control functions

### **▲** Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function		Funct	ional symb	ol	]	Model code	Housing kit	
	F		- E		A			
Solenoid Valve					A  ]	SV4 10 * C A318W *** * 00	Model Part No.	A318W 02-185376
Spool Type Blocked A to B & B to A Normally Closed					•		Cartridge Cartridge Data Sheet Cavity	SV4-10-C Section A C-10-2
Solenoid Valve						SV4 10 * 0 A318W *** * 00	Model Part No.	A318W 02-185376
Spool Type Blocked A to B & B to A Normally Open				**			Cartridge Cartridge Data Sheet Cavity	SV4-10-0 Section A C-10-2
Solenoid 3-Way						SV1 10 * 3 A326P *** * 00	Model Part No.	A326P 02-185353
Selector on P							Cartridge Cartridge Data Sheet Cavity	SV1-10-3 Section A C-10-3
Solenoid 3-Way Selector on P						SV4 10 * 3 A326P *** * 00	Model Part No.	A326P 02-185353
			,				Cartridge Cartridge Data Sheet Cavity	SV4-10-3 Section A C-10-3
Manual Rotary Selector on P					]	MRV3 10 * K A236P 00	Model Part No.	A326P 02-185353
			·				Cartridge Cartridge Data Sheet Cavity	MRV3-10-K-O Section D C-10-3

### Load control functions

Function	Functional symbol	Model code	Housing kit	
Counterbalance		1CE30- * A323A-** * *	Model Part No.	A323A 6025820-001
Valve on A Pilot from B			Cartridge Cartridge Data Sheet Cavity	1CE30 Section F A6610
Counterbalance		1CE30- * A323B-** * *	Model Part No.	A323B 6025821-001
Valve on B Pilot from A			Cartridge Cartridge Data Sheet Cavity	1CE30 Section F A6610
Counterbalance Valve On A & B		1CE30- * A323WA-** * */** **	Model Part No.	A323W 6025822-001
Cross Piloted		Refer to page L-23 for model code breakdown	Cartridge Cartridge Data Sheet Cavity	1CE30 qty 2 Section F A6610 qty 2


Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature. **Note:** O-Rings to be ordered separately.

### Spacer/blanking/linking plates


Function	Functional sy	mbol			Part number	
Spacer Plate 10 mm (.39) Thick					0	84951 85282
	Р	Т	В	А		
Blanking Plate					0	84951 85282
	P	T	Β	A		
Linking Plate P to A with B & T Blocked						84951 85282
	Р	Т	В	А		
Linking Plate P to A & B to T	P	T	B	A		84951 85282
Linking Plate P to B & A to T	P	T		A	5	84951 85282
Linking Plate P to T with					02-185278 Buna N O-Ring Kit 02-1	84951
A & B Blocked	P	T	В	A		85282
Linking Plate A to B with						84951
P & T Blocked	L				Viton O-Ring Kit 02-1	85282
	P	Т	В	А		
Linking Plate P to B with A & T Blocked		 		Τ		84951 85282
	LP	L T	 B	A		
Linking Plate P to A & B with T Blocked						84951 85282
	Р	Т	В	А		

Viton® is a registered trademark of E.I.DuPont


For sandwich valveassemblies with two valves

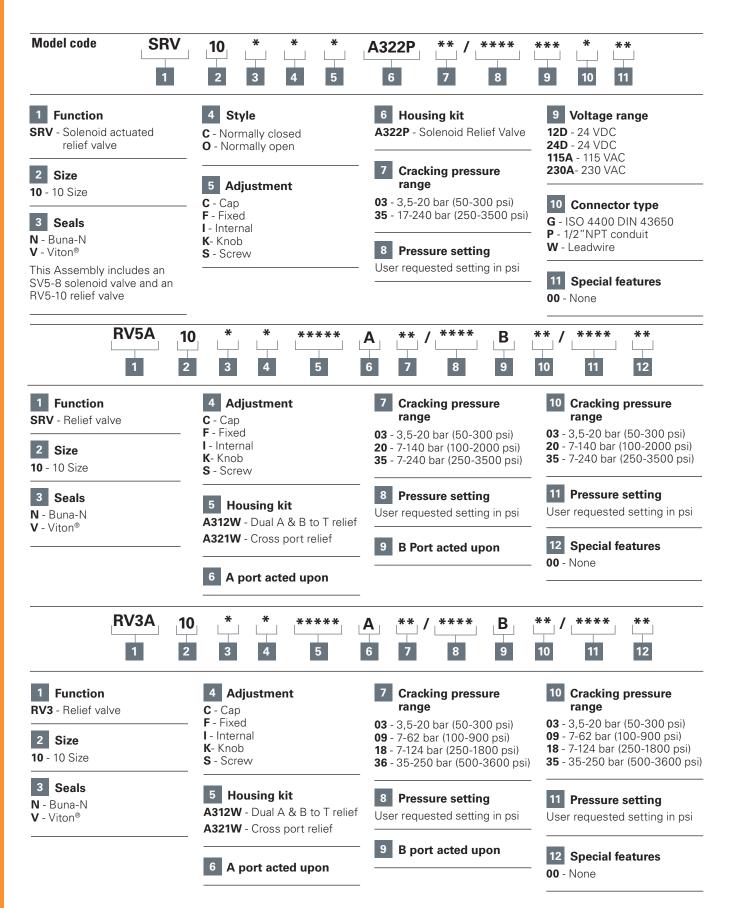


For sandwich valve assemblies with two valves

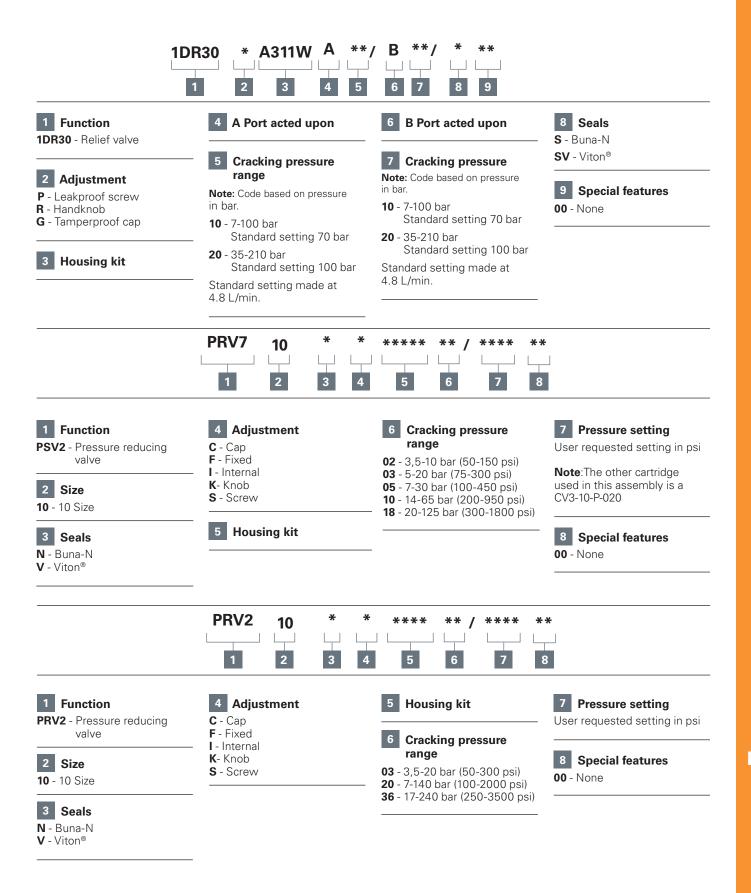


For sandwich valve assemblies with two valves

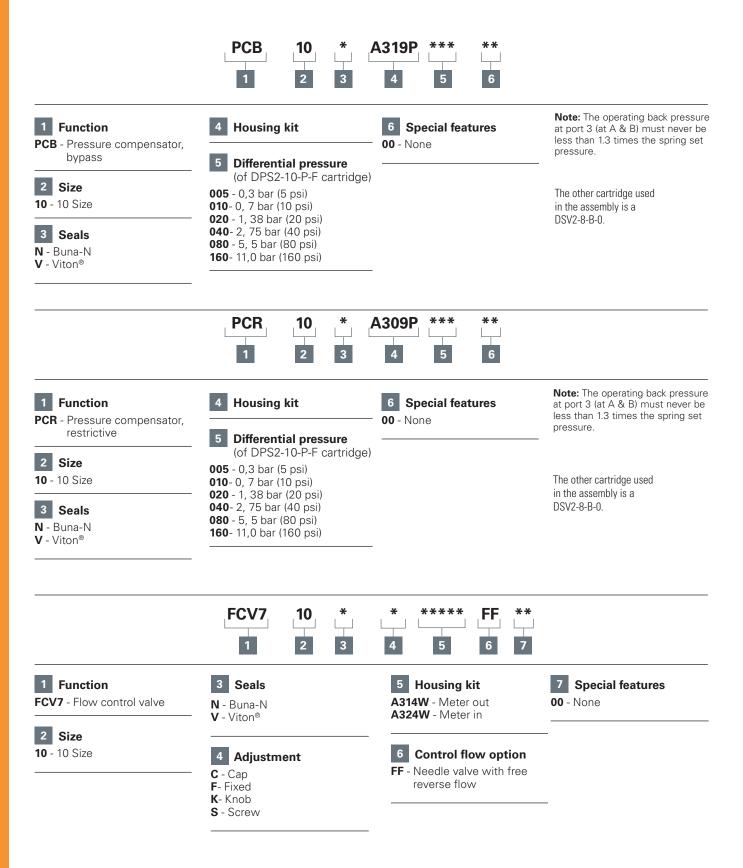

For sandwich valve assemblies with two valves

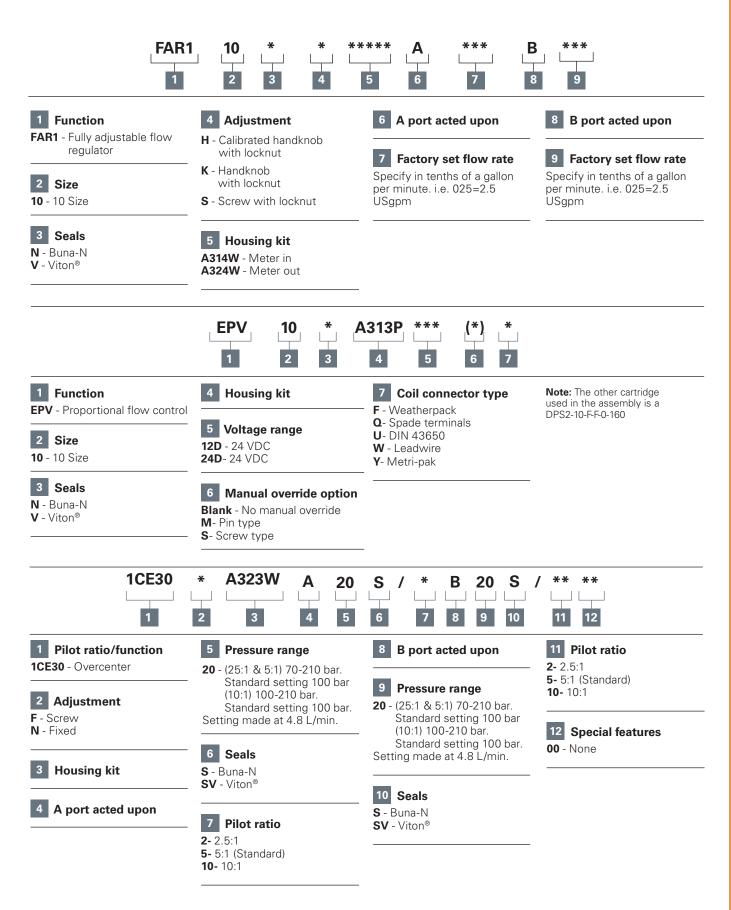

Spacer, blanking & linking plates

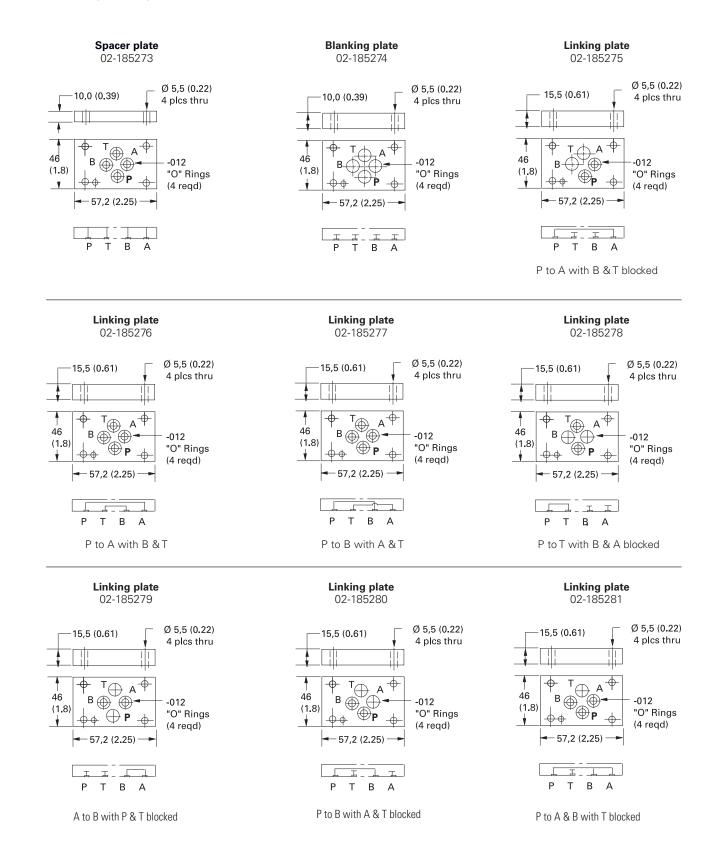


Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.


1

mm (inch)

### **Cavity porting**




Torque cartridge in housing 34-40 Nm (25-30 ft. lbs)

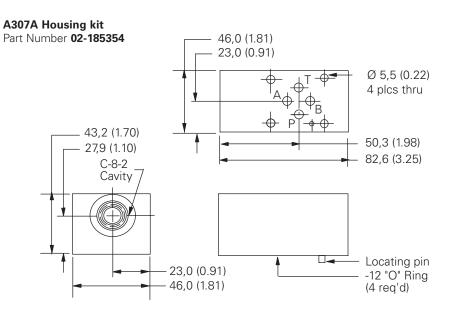


Typical cartridges	Function
CV3-8	Check valve on A, Free flow out

### **Cavity porting**



Torque cartridge in housing 34-40 Nm (25-30 ft. lbs)

#### A307B Housing kit Part Number 02-185355

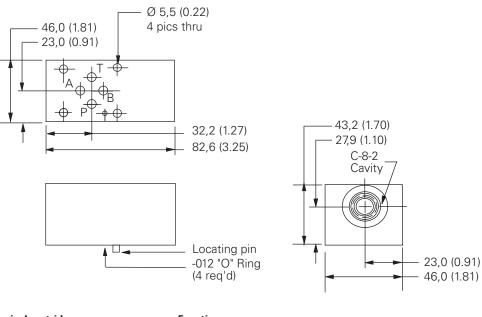

 Typical cartridges
 Function

 CV3-8
 Check valve on B, Free flow out

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.

L-27


ISO 4401-03/CETOP03 Housing kits


#### **Dimensions**

#### A307P Housing Kit Part Number 02-185356

mm (inch)





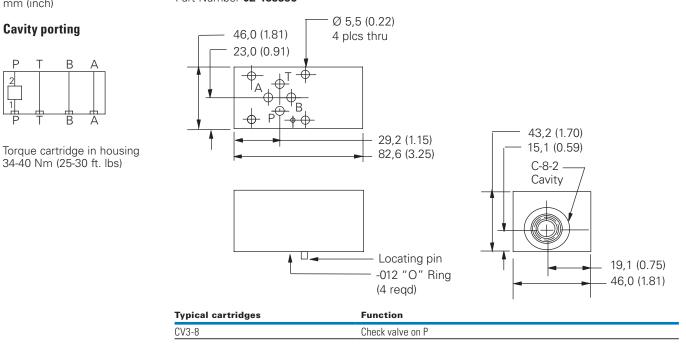


### **Dimensions**


A308T Housing kit Part Number 02-185360

mm (inch)

### **Cavity porting**




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

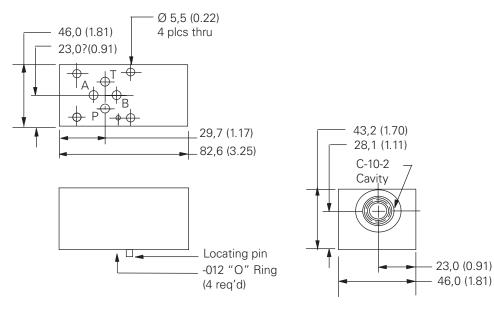

Typical cartridges	Function
CV3-10	Check valve on T


mm (inch)

### **Cavity porting**




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

Note: This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.

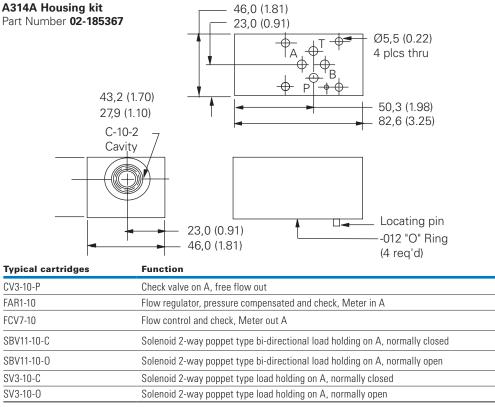


#### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

Note: This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.

#### A314A housing kit Part Number 02-185368

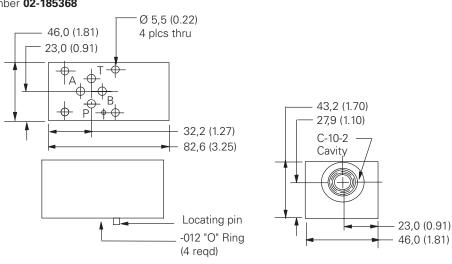


Typical cartridges	Function
CV3-10 *-P	Check valve on B, free flow out
FAR1-10	Flow regulator, pressure compensated and check, Meter in B
FCV7-10	Flow control and check, Meter out B
SBV11-10-C	Solenoid 2-way poppet type bi-directional load holding on B, normally closed
SBV11-10-0	Solenoid 2-way poppet type bi-directional load holding on B, normally open
SV3-10-C	Solenoid 2-way poppet type load holding on B, normally closed
SV3-10-0	Solenoid 2-way poppet type load holding on B, normally open

ISO 4401-03/CETOP03 Housing kits

### Dimensions

mm (inch)


### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

Note: This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.



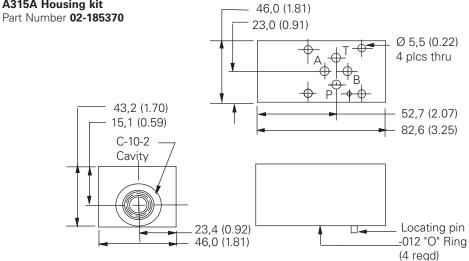

Typical cartridges	Function
SV3-10-C	Solenoid 2-way poppet type unload A-T normally closed
SV3-10-0	Solenoid 2-way poppet type unload A-T normally open
SV4-10-C	Solenoid 2-way spool type unload A-T normally closed
SV4-10-0	Solenoid 2-way spool type unload A-T normally open

### **Cavity porting**

Т

В А

В A

Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)


Note: This housing may require the use of a spacer block

02-185273 depending upon cartridge valve selection.

P

### A315B Housing kit

Part Number 02-185371

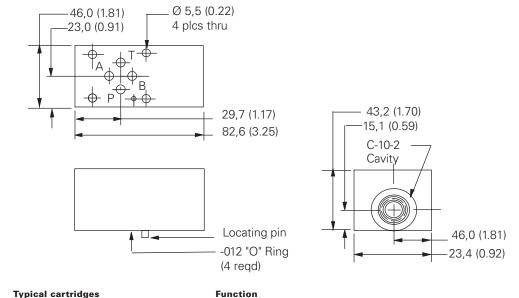

### **Typical cartridges**


SV3-10-C	Solenoid 2-way poppet type unload B-T normally closed
SV3-10-0	Solenoid 2-way poppet type unload B-T normally open
SV4-10-C	Solenoid 2-way spool type unload B-T normally closed
SV4-10-0	Solenoid 2-way spool type unload B-T normally open

Ø 5,5 (0.22)

### Dimensions

mm (inch)

### **Cavity porting**




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)


### A318W Housing kit

Part Number 02-185376

A321A Housing kit

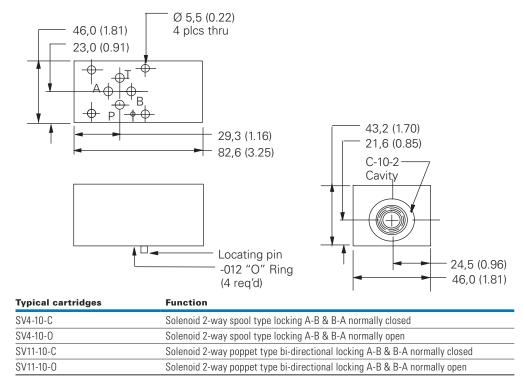



### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

**Note**: This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.



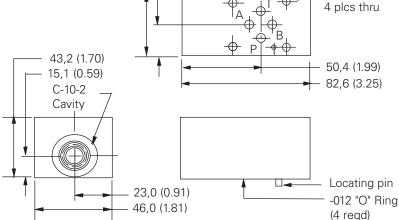

Typical cartridges	Function
ERV1-10	Proportional relief valve A-T
RV1-10	Relief valve A-T
RV5-10	Relief valve A-T

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.


L-31

ISO 4401-03/CETOP03 Housing kits

#### **Dimensions**


mm (inch)


#### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

Note: This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.



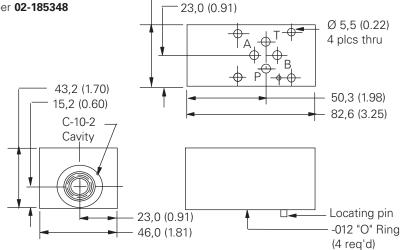

46,0 (1.81)


Typical cartridges	Function
FAR1-10	Flow regulator pressure compensated and check, meter out A
FCV7-10	Flow control and check, meter in A
SV3-10-C	Solenoid 2-way poppet type blocking on A, normally closed
SV3-10-0	Solenoid 2-way poppet type blocking on A, normally open
SV4-10-C	Solenoid 2-way spool type blocking on A, normally closed
SV4-10-0	Solenoid 2-way spool type blocking on A, normally open


### **Cavity porting**

R

48-54 Nm (35-40 ft. lbs)

#### A324B Housing kit Part Number 02-185349

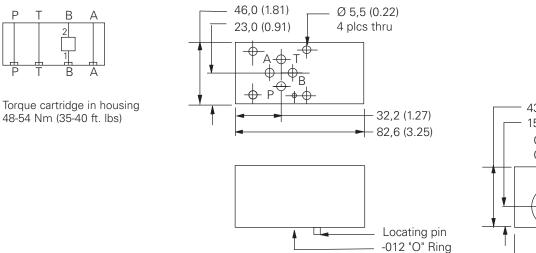

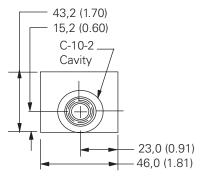


Typical cartridges	Function
FAR1-10	Flow regulator pressure compensated and check, meter out B
FCV7-10	Flow control and check, meter in B
SV3-10-C	Solenoid 2-way poppet type blocking on B, normally closed
SV3-10-0	Solenoid 2-way poppet type blocking on B, normally open
SV4-10-C	Solenoid 2-way spool type blocking on B, normally closed
SV4-10-0	Solenoid 2-way spool type blocking on B, normally open

(4 reqd)


mm (inch)

### **Cavity porting**




Torque cartridge in housing 34-40 Nm (25-30 ft. lbs)

A307T Housing kit Part Number 02-185357

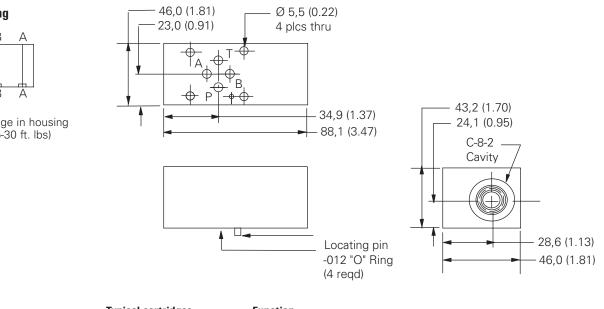


Typical cartridges	Function
CV3-8	Check valve on T

### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

#### A321B Housing kit Part Number 02-185341

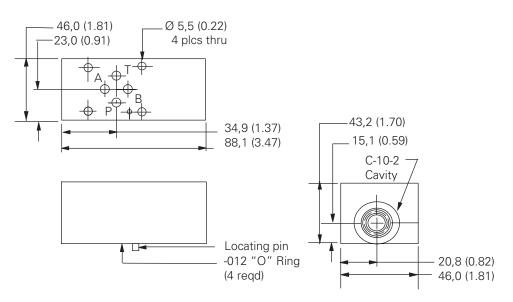

Typical cartridges	Function
ERV1-10	Proportional relief valve B-T
RV1-10	Relief valve B-T
RV5-20	Relief valve B-T


ISO 4401-03/CETOP03 Housing kits

#### **Dimensions**

mm (inch)


#### A321P Housing kit Part Number 02-185342

**Cavity porting** 




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

**Note:** This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.

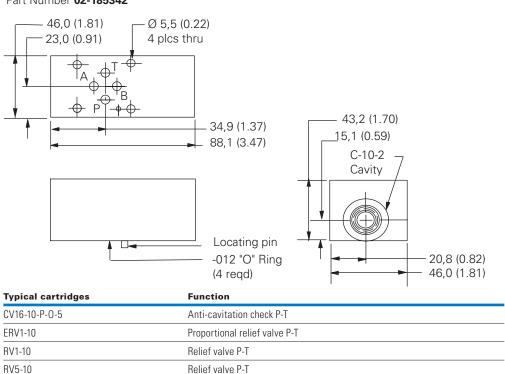


### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

**Note:** This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.


### A324P Housing kit

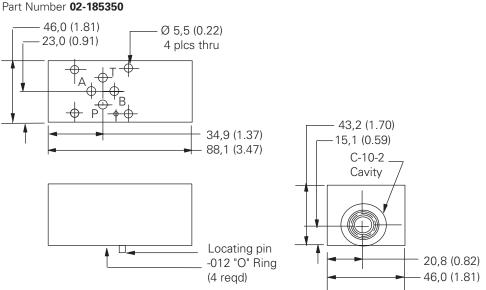

Typical cartridges	Function
CV3-10	Check valve on P
FAR1-10	Flow regulator pressure compensated, meter in P
NV1-10	Flow control, meter in P

mm (inch)

### **Cavity porting**




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

**Note:** This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.

### A325P Housing kit

Part Number 02-185352

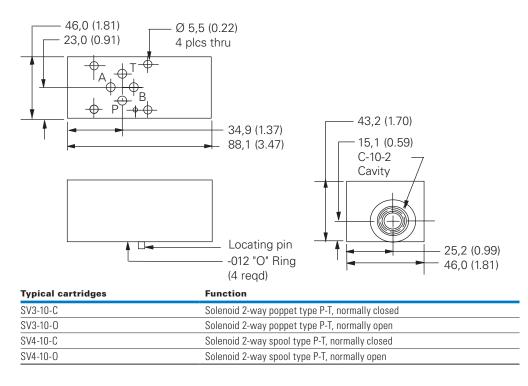



ISO 4401-03/CETOP03 Housing kits

### **Cavity porting**

### A311W Housing kit

Part Number 02-185364



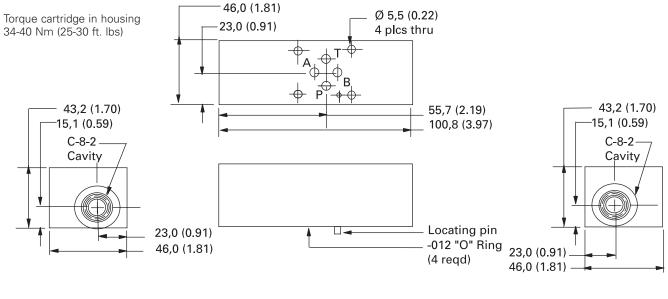


Typical cartridges	Function
1DR30	Dual relief valve A-T, B-T


mm (inch)

### A312W Housing kit

Part Number 02-185365

### **Cavity porting**

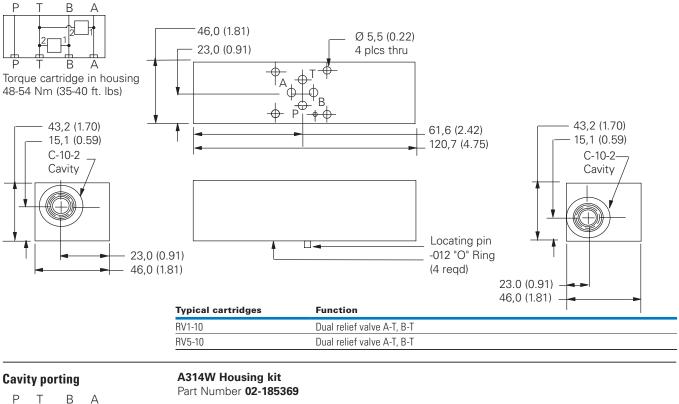

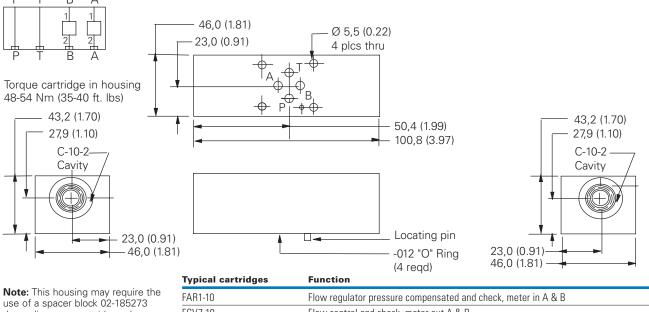

depending upon cartridge valve selection.

,	(4 reqd) 46,0 (1.81)						
Typical cartridges	Function						
FAR1-10	Flow regulator pressure compensated and check, meter in A & B						
FCV7-10	Flow control and check, meter out A & B						
SBV11-10-C	Solenoid 2-way poppet type bi-directional load holding on A & B, normally closed						
SBV11-10-0	Solenoid 2-way poppet type bi-directional load holding on A & B, normally open						
SV3-10-C	Solenoid 2 way poppet type load holding on A & B, normally closed						
SV3-10-0	Solenoid 2 way poppet type load holding on A & B, normally open						


ISO 4401-03/CETOP03 Housing kits

#### Dimensions


A324W Housing kit Part Number 02-185351


mm (inch)

### **Cavity porting**






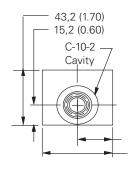

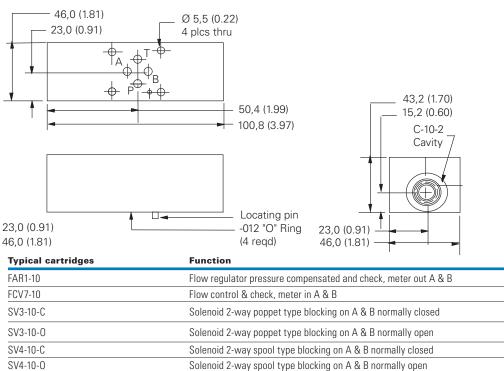


### **Cavity porting**




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

#### A326P Housing kit Part Number 02-185353

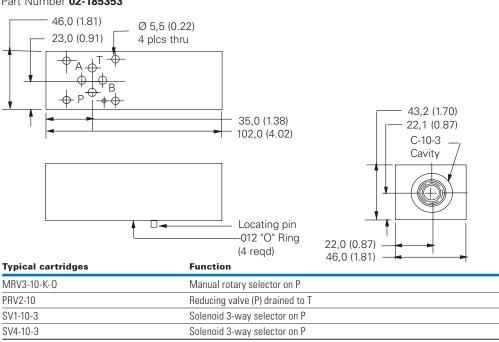

mm (inch)

#### A309W Housing kit Part Number 02-185361

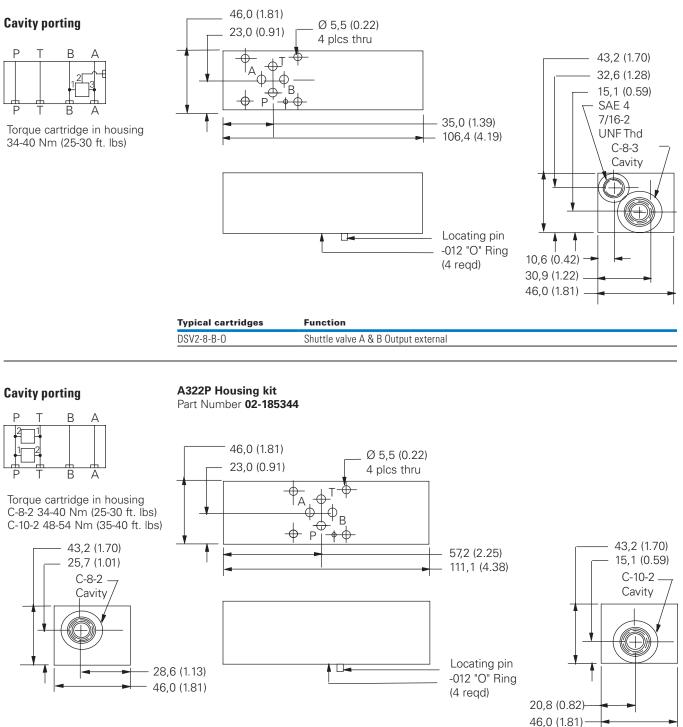

Typical cartridges	Function
SV5-8-0 & RV1-10	Solenoid control relief valve P-T, normally open
SV5-8-C & RV1-10	Solenoid control relief valve P-T, normally closed


ISO 4401-03/CETOP03 Housing kits


### Dimensions


mm (inch)

#### A316P Housing kit Part Number 02-185374









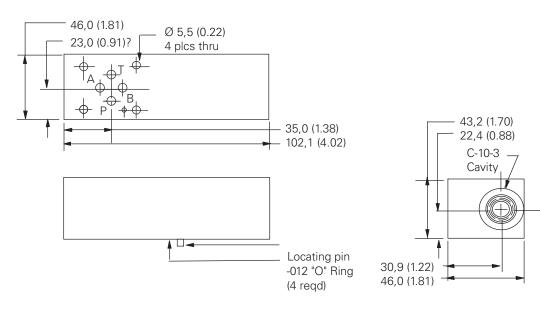



Typical cartridges	Function
PSV7-10	Sequence valve in to P

**Cavity porting** 








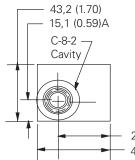

### Part Number 02-185379

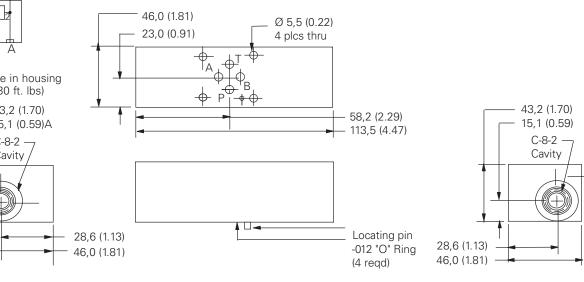


Typical cartridges	Function
CV3-8	Check valve on T to A & B

mm (inch)

# A321W Housing kit Part Number 02-185343

### **Cavity porting**

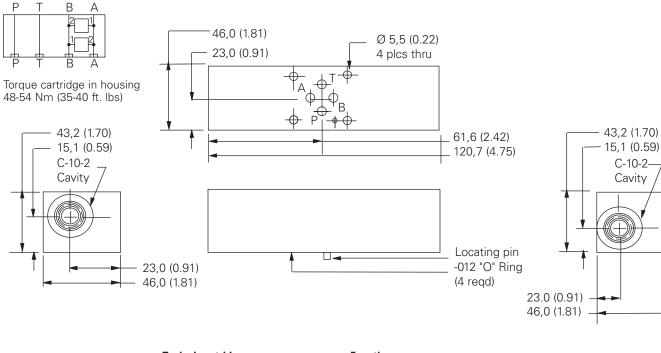


Typical cartridges	Function
RV1-10	Cross port relief valve A & B
RV5-10	Cross port relief valve A & B

ISO 4401-03/CETOP03 Housing kits


### **Dimensions**


#### A317A Housing kit Part Number 02-185375

mm (inch)



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)



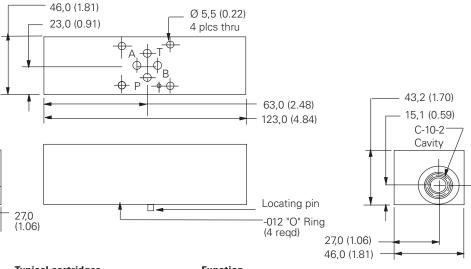



Note: This housing may require the use of a spacer block 02-185273 depending upon cartridge valve selection.


Typical cartridges	Function				
CV3-10	Check valve on T to A & B				
SV3-10-C	Solenoid 2-way poppet type unload A & B-T, normally closed				
SV3-10-0	Solenoid 2-way poppet type unload A & B-T, normally open				
SV4-10-C	Solenoid 2-way spool type unload A & B-T, normally closed				
SV4-10-0	Solenoid 2-way spool type unload A & B-T, normally open				

### **Cavity porting**


#### A310A Housing kit Part Number 02-185362





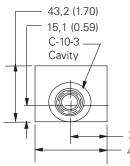

46,0 (1.81) 23,0 (0.91)

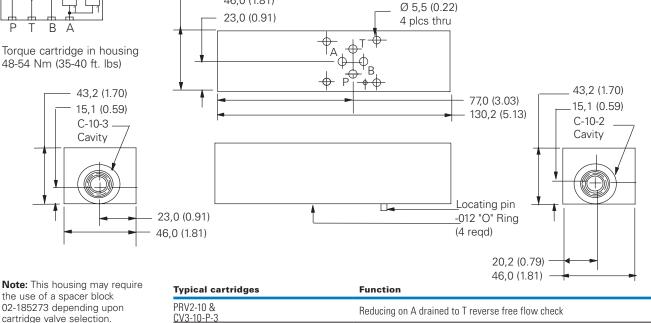


02-185273 depending upon cartridge valve selection.

mm (inch)


### A310B Housing kit


Part Number 02-185363

### **Cavity porting**





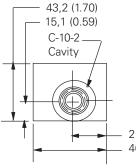

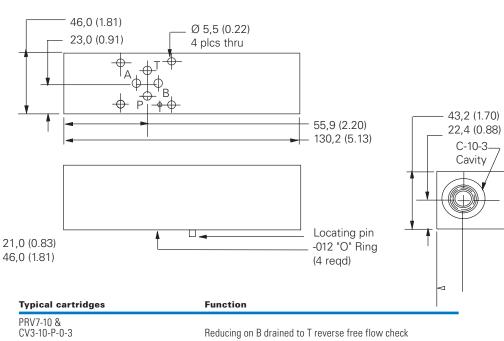


### **Cavity porting**

Ρ Т B

Ρ Т В



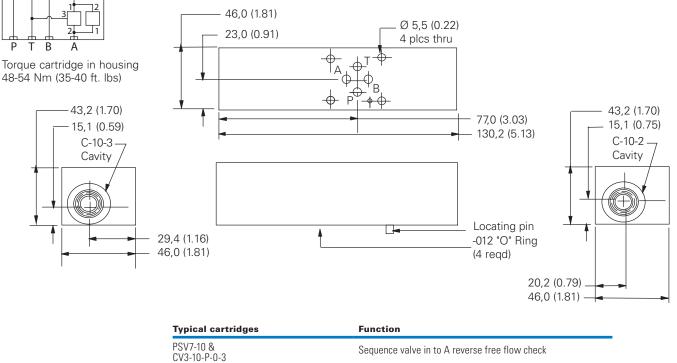

Sequence valve in to A reverse free flow check

ISO 4401-03/CETOP03 Housing kits

### Dimensions


A316B Housing kit Part Number 02-185373

46,0 (1.81)


23,0 (0.91)

mm (inch)

### **Cavity porting**




Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

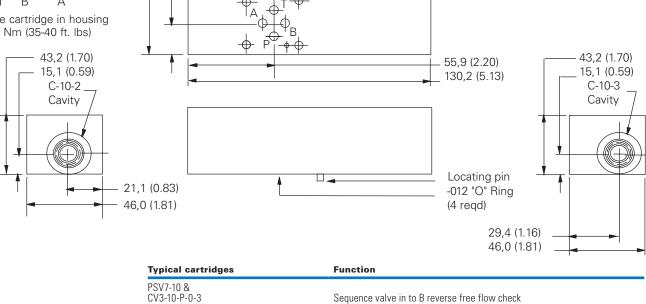


Ø 5,5 (0.22)

4 plcs thru

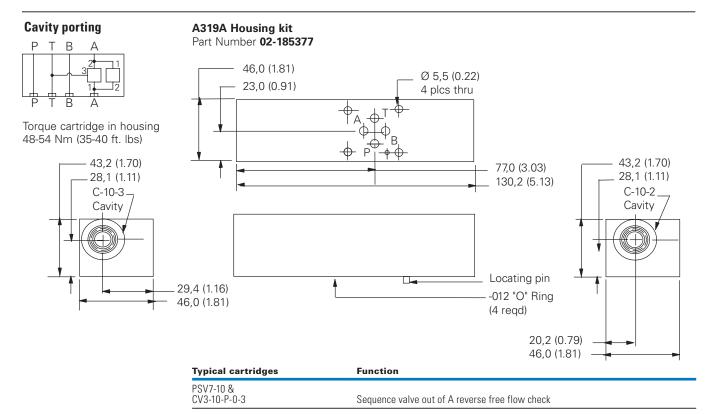


mm (inch)

### **Cavity porting**



Torque cartridge in housing 48-54 Nm (35-40 ft. lbs)

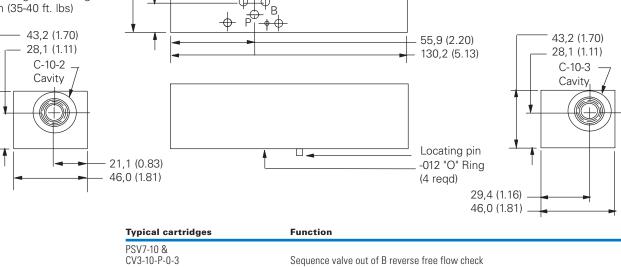


Ø 5,5 (0.22)

4 plcs thru

### **Cavity porting**

Ρ




A319B Housing kit

Part Number 02-185378

46,0 (1.81)

23,0 (0.91)

Λ

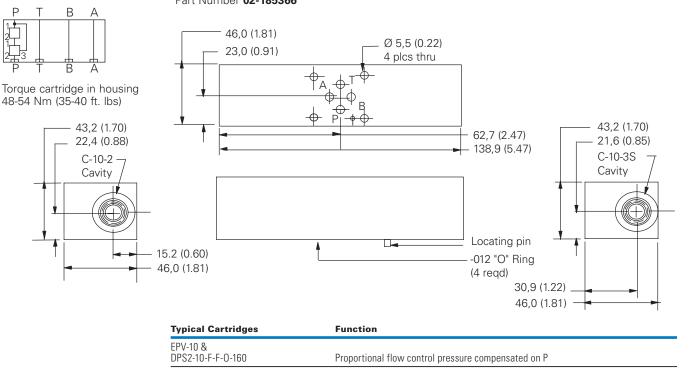

ISO 4401-03/CETOP03 Housing kits


### **Dimensions**

A309P Housing kit Part Number 02-185381


46,0 (1.81)

mm (inch)

### **Cavity porting**



Torque cartridge in housing C-8-3 34-40 Nm (25-30 ft. lbs) C-10-3 48-54 Nm (35-40 ft. lbs)

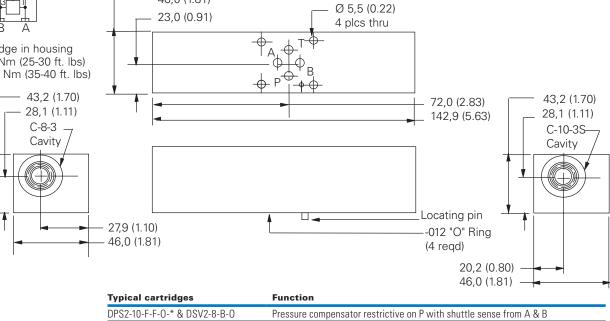



#### **Cavity porting** A319P Housing kit Part Number 02-185382 D 46,0 (1.81) Ø 5,5 (0.22) 23,0 (0.91) 4 plcs thru Torque cartridge in housing C-8-3 34-40 Nm (25-30 ft. lbs) C-10-3 48-54 Nm (35-40 ft. lbs) 43,2 (1.70) 43,2 (1.70) 72, 0 (2.83) 28,1 (1.11) 28,1 (1.11) 142,9 (5.63) C-8-3 C-10-3S Cavity Cavity Locating pin Π 27.9 (1.10) -012 "O" Ring 46,0 (1.81) (4 reqd) 21,1 (0.83) 46,0 (1.81)

Typical cartridges	Function		
DPS2-10-P-F-O-* & DSV2-8-B-0	Pressure compensator bypass to T with shuttle sense from A & B		


### A323A Housing kit

mm (inch)



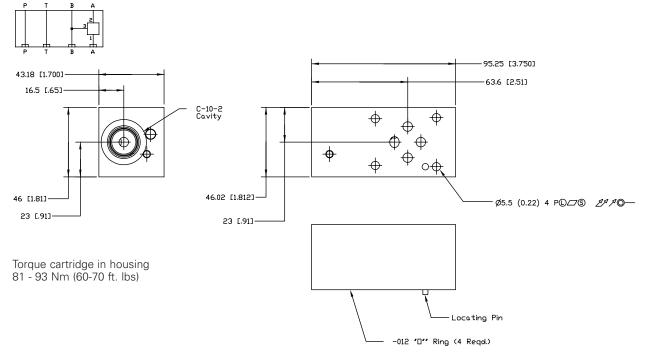

Typical cartridges	Function
4CK30	PO Check Valve on A and Pilot from B
1CE30	Counterbalance Valve on A and Pilot from B

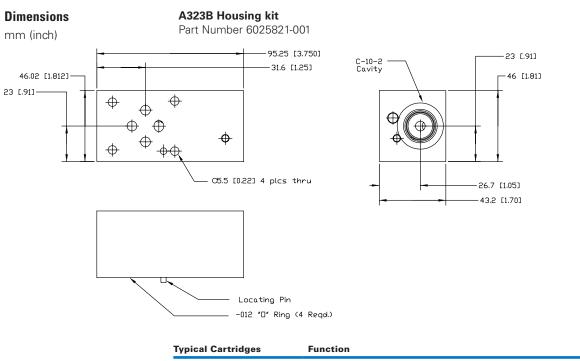

Typical Cartridges	Function				
4CK30	PO Check Valve on B and Pilot from A				
1CE30	Counterbalance Valve on B and Pilot from A				


ISO 4401-03/CETOP03 Housing kits

### Dimensions

### A323W - Housing Kit

mm (inch)

Part Number 6025822-001

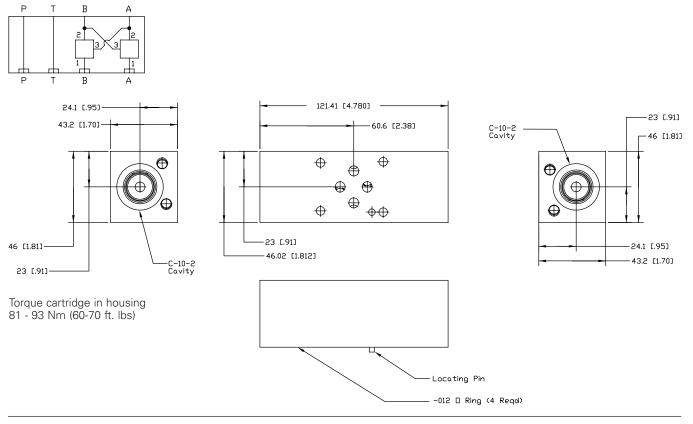

Typical cartridges	Function
4CK30	PO Check Valve on A and B Cross Piloted
1CE30	Counterbalance Valve on A and B Cross Piloted



## Sandwich valves

CETOP05 Sandwich valve bodies and assemblies for applications up to 210 bar (3000 psi)



### Pressure control functions

 $\square$ 

Sandwich valves ISO 05/DO5/NG 10/CETOP5 series

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

				]				
Function		Functio	onal symb	ol		Model code	Housing kit	
Relief valve P-T	P		「 」 	B , 	A 	RV1-12**A521P**/****00	Model Part No. Cartridge Cartridge data sheet	A521P 6021302-001 RV1-12 Section E
Relief valve A-T	· · · · · · · · · · · · · · · · · · ·					RV1-12**A521A**/****00	Cavity Model Part No. Cartridge	C-12-2 A521A 6021299-001 RV1-12
Relief valve					• 	RV1-12**A521B**/****00	Cartridge data sheet Cavity Model	Section E C-12-2 A521B
B-T				•			Part No. Cartridge Cartridge data sheet Cavity	6021295-001 RV1-12 Section E C-12-2
Relief valve P-T					 	RV11-12**A521P**/***00	Model Part No.	A521P 6021302-001
							Cartridge Cartridge data sheet Cavity	RV11-12 Section E C-12-2
Relief valve A-T	[				 	RV11-12**A521A**/***00	Model Part No.	A521A 6021299-001
			· · · · · · · · · · · · ·		•		Cartridge Cartridge data sheet Cavity	RV11-12 Section E C-12-2
Relief valve B-T	[					RV11-12**A521B**/***00	Model Part No.	A521B 6021295-001
				• 			Cartridge Cartridge data sheet Cavity	RV11-12 Section E C-12-2
Dual Relief valve A-T, B-T	[					RV1-10**A511W A**/**B**/**	Model Part No.	A511W 6021337-001
A 1, U 1							Cartridge Cartridge data sheet Cavity	RV1-10 [qty 2] Section E C-10-2 [qty 2]
Dual Relief valve A-T, B-T						RV1-12**A512W A**/**B**/**	Model Part No.	A512W 6021184-001
A-1, U-1							Cartridge Cartridge data sheet Cavity	RV1-12 [qty 2] Section E C-12-2 [qty 2]
	P	Т  Т С. С	 В [	A				

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.

L-50

## Pressure control functions

Sandwich valves ISO 05/DO5/NG 10/CETOP5 series

Function		Functional symbol			Model code	Housing kit	
Dual —— Relief Valve	P		3 A		RV11-12**A512W A**/**B**/**	Model Part No.	A512W 6021184-001
А-Т, В-Т						Cartridge Cartridge data sheet Cavity	RV11-12 [qty2] Section E C-12-2 [qty2]
Cross Port Relief Valve A-B					RV3-12**A521WA**/**B**/**	Model Part No.	A521W 6021158-001
A-D						Cartridge Cartridge data sheet Cavity	RV3-12 [qty2] Section E C-12-2 [qty2]
Cross Port Relief Valve A-B		l			RV11-12**A521WA**/**B**/**	Model Part No.	A521W 6021158-001
						Cartridge Cartridge data sheet Cavity	RV11-12 [qty2] Section E C-12-2 [qty2]
Reducing Valve on P Drained to T					PRV12-12**A526P**/***00	Model Part No.	A526W 6021329-001
						Cartridge Cartridge data sheet Cavity	PRV12-12 Section E C-12-3
Reducing Valve on B Drained					PRV12-12** A510B**/***00	Model Part No.	A510B 6021352-001
to T Reverse FF Check						Cartridge Cartridge data sheet Cavity	PRV12-12/CV11-12 Section E & G C-12-3/C-12-2
	P T		A				

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.

L

## **Check functions**

Sandwich valves ISO 05/DO5/NG 10/CETOP5 series

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

			<u> </u>					
			*					
Function	I	Functi	onal syn	nbol		Model code	Housing kit	
Check Valve	P -	г т		3 <u>,</u> 	م ۱	CV11-12*P A524P***00	Model Part No.	A524P 6021186-001
				 			Cartridge Cartridge data sheet Cavity	CV11-12 Section G C-12-2
Check Valve on A Free Flow Out						CV3-10*P A507A***00	Model Part No.	A507A 6021185-001
					≩ 		Cartridge Cartridge data sheet Cavity	CV3-10 Section G C-10-2
Check Valve on A Free Flow out						CV11-12*P A514A ***00	Model Part No.	A514A 6021288-001
					∑ ₩ 		Cartridge Cartridge data sheet Cavity	CV11-12 Section G C-12-2
Check in A Piloted from B						4CK90*A523A**00	Model Part No.	A523A 6021282-001
					♪ 		Cartridge Cartridge data sheet Cavity	4CK90 Section G A12336
Check in A & B Cross Piloted				•		4CK90*A523W**00	Model Part No.	A523W 5999906-001
			( 	× ×	• •		Cartridge Cartridge data sheet Cavity	4CK90 (qty2) Section G A12336 (qty 2)
Check Valve on B Free Flow out						CV11-12*P A514B ***00	Model Part No.	A514B 6021273-001
							Cartridge Cartridge data sheet Cavity	CV11-12 Section G C-12-2
Shuttle Valve A and B Output						DSV2-8*B A509W 00	Model Part No.	A509W 6021189-001
External					•		Cartridge Cartridge data sheet Cavity	DSV2-8-B-0 Section G C-8-3
	РТ	Т	B	A				
	$\cup$ $\Box$		- L					

## Flow control functions

Sandwich valves ISO 05/DO5/NG 10/CETOP5 series

Function	Function	al symbol	Model code	Housing kit	
Flow Regulator		B A	FAR1-12** A524P ***00	Model Part No.	A524P 6021186-001
Compensated and Check Meter in P	*			Cartridge Cartridge data sheet Cavity	FAR1-12 Section H C-12-2
Flow Regulator Pressure Compensated			FAR1-12** A514A ***00	Model Part No.	A514A 6021288-001
and Check Meter in A				Cartridge Cartridge data sheet Cavity	FAR1-12 Section H C-12-2
Flow Regulator Pressure Compensated			FAR1-12** A524A ***00	Model Part No.	A524A 6021181-001
and Check meter out A		*		Cartridge Cartridge data sheet Cavity	FAR1-12 Section H C-12-2
Flow Regulator Pressure Compensated			FAR1-12** A514B ***00	Model Part No.	A514B 6021273-001
and Check meter in B				Cartridge Cartridge data sheet Cavity	FAR1-12 Section H C-12-2
Flow Regulator Pressure Compensated			FAR1-12** A524B ***00	Model Part No.	A524B 6021182-001
and Check meter out B				Cartridge Cartridge data sheet Cavity	FAR1-12 Section H C-12-2
Flow Regulator Pressure			FAR1-12** A514W A***B***00	Model Part No.	A514W 4998388-001
Compensated and Check meter in A & B				Cartridge Cartridge data sheet Cavity	FAR1-12 qty 2 Section H C-12-2 qty 2
Flow Regulator Pressure			FAR1-12** A524W A***B***00	Model Part No.	A524W 4998389-001
Compensated and Check meter out A & B				Cartridge Cartridge data sheet Cavity	FAR1-12 qty 2 Section H C-12-2 qty 2
ſ	р т т	ВА			
(					

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.

L

## Solenoid control functions

Sandwich valves ISO 05/DO5/NG 10/CETOP5 series

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Func	tional sym	bol	Model code	Housing kit	
Solenoid 2/2 Poppet type (P-T)				SV3-12*C A525P *** *00	Model Part No.	A525P 6021293-001
Normally Closed					Cartridge Cartridge data sheet Cavity	SV3-12-C Section A C-12-2
Solenoid 2/2				SV3-12*0 A525P *** *00	Model Part No.	A525P 6021273-001
Normally Open					Cartridge Cartridge data sheet Cavity	SV3-12-0 Section A C-12-2
Solenoid 2/2 Poppet type Blocked on A		-		SV3-12*C A524A *** *00	Model Part No.	A524A 6021181-001
Normally Closed					Cartridge Cartridge data sheet Cavity	SV3-12-C Section A C-12-2
Solenoid 2/2 Poppet type Blocked on A				SV3-12*0A524A *** *00	Model Part No.	A524A 6021181-001
Normally Open					Cartridge Cartridge data sheet Cavity	SV3-12-0 Section A C-12-2
Poppet type Blocked on B Normally Closed				SV3-12*C A524B *** *00	Model Part No.	A524B 6021182-001
					Cartridge Cartridge data sheet Cavity	SV3-12-C Section A C-12-2
Poppet type Blocked on B Normally Open			↓ ↓	SV3-12*0 A524B *** *00	Model Part No.	A524B 6021182-001
					Cartridge Cartridge data sheet Cavity	SV3-10-0 Section A C-12-2
Poppet type Load Holding on A & B Normally Closed				SV3-12*C A524W *** *00	Model Part No.	A524W 4998379-001
					Cartridge Cartridge data sheet Cavity	SV3-12-C qty 2 Section A C-12-2 qty 2
Poppet type Load Holding on A & B Normally Closed		-;		SV3-12*0 A524W*** *00	Model Part No.	A524W 4998379-001
					Cartridge Cartridge data sheet Cavity	SV3-12-0 qty 2 Section A C-12-2 qty 2
Poppet type Load Holding on A Normally Closed		-		SV3-12*C A514A *** *00	Model Part No.	A514A 6021288-001
					Cartridge Cartridge data sheet Cavity	SV3-12-C Section A C-12-2
Poppet type Load Holding on A Normally Open		-		SV3-12*0 A514A *** *00	Model Part No.	A514A 6021288-001
	 				Cartridge Cartridge data sheet Cavity	SV3-12-0 Section A C-12-2
Poppet type Load Holding on B Normally Open				SV3-12*0 * A514A ***00	Model Part No.	A514A 6021288-001
P	тт	В			Cartridge Cartridge data sheet Cavity	SV3-10-0 Section A C-12-2
Ć		Г				

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

## Solenoid control functions

Function		unctional symbol	ol	Model code	Housing kit	
Poppet type				SV3-12-C A514B *** *00	Model Part No.	A514B 6021273-001
Load Holding on B Normally Closed					Cartridge Cartridge data sheet Cavity	SV3-12-C Section A C-12-2
Poppet type Load Holding			 	SV3-12*0 A514B *** *00	Model Part No.	A514B 6021273-001
on B Normally Open					Cartridge Cartridge data sheet Cavity	SV3-12-0 Section A C-12-2
Poppet type Load Holding on A & B				SV3-12*C A514W *** *00	Model Part No.	A514W 4998388-001
Normally Closed					Cartridge Cartridge data sheet Cavity	SV3-12-C qty 2 Section A C-12-2 qty 2
Poppet type Load Holding on A & B				SV3-12*0 A514W*** *00	Model Part No.	A514W 4998388-001
Normally Closed					Cartridge Cartridge data sheet Cavity	SV3-12-0 qty 2 Section A C-12-2 qty 2
Poppet Bi-Directional Load Holding	<u>r</u>			SBV11-10*C A514A *** *00	Model Part No.	A514A 6021181-001
on A Normally Closed					Cartridge Cartridge data sheet Cavity	SBV11-12-C Section A C-12-2
Poppet Bi-Directional Load Holding				SBV11-10*0 A514A *** *00	Model Part No.	A514A 6021181-001
on A Normally Open					Cartridge Cartridge data sheet Cavity	SBV11-12-0 Section A C-12-2
Poppet Bi-Directional Load Holding			I	SBV11-10*C A514B *** *00	Model Part No.	A514B 6021273-001
on B Normally Closed					Cartridge Cartridge data sheet Cavity	SBV11-12-C Section A C-12-2
Poppet Bi-Directional	R			SBV11-10*0 A514B *** *00	Model Part No.	A514B 6021273-001
Load Holding on B Normally Open		\$			Cartridge Cartridge data sheet Cavity	SBV11-12-0 Section A C-12-2
Poppet Bi-Directiona Load Holding				SBV11-12*C A514W *** *00	Model Part No.	A514W 4998388-001
on A & B Normally Clc					Cartridge Cartridge data sheet Cavity	SBV11-12-C qty 2 Section A C-12-2 qty 2
Poppet Bi-Directional Load Holding on A & B				SBV11-12*0 A514W *** *00	Model Part No.	A514W 4998388-001
on A & B Normally Open					Cartridge Cartridge data sheet Cavity	SBV11-12-0 qty 2 Section A C-12-2 qty 2
Poppet Bi-Directional Blocked A and B				SBV11-12*C A518W *** *00	Model Part No.	A518W 6021277-001
Normally Closed					Cartridge Cartridge data sheet Cavity	SBV11-12-C Section A C-12-2
Poppet Bi-Directional Blocked A and B	N			SBV11-12*0 A518W *** *00	Model Part No.	A518W 6021277-001
Normally Open					Cartridge Cartridge data sheet Cavity	SBV11-12-0 Section A C-12-2
Solenoid 3-Way Selector on P				SV11-12*3 A526P *** *00	Model Part No.	A526P 6021329-001
					Cartridge Cartridge data sheet Cavity	SV11-12-3 Section A C-12-3
					·	

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.

L

## Load control functions

 $\bowtie$ 

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature.

Function	Functio	na slymbol	Model code	Housing kit
Overcenter in A Pilot from B	P T	ТВ/	A 1CE90 * A523AA 20S/*B20	Model A523A S/** ** Part No. 6021282-001 Cartridge Data Sheet 1CE90 Cartridge Data Sheet A12336
Overcenter in A & B Cross Piloted			1CE90 * A523WA 20S/*B20	DS/** ** Model A523W Part No. 5999906-001 Cartridge 1CE90 qty 2 Cartridge Data Sheet Section F Cavity A12336 qty
		B A		

### $\triangle$ Caution

Sandwich valve flow ratings are limited by the ratings of individual cartridges. Consult cartridge valve literature. **Note:** O-Rings to be ordered separately.

## Blanking and linking plates


Function	Functional symbol	Part number
Blanking Plate	P T <sub>B</sub> T <sub>A</sub> B A	6030861-001 Buna N O-Ring Kit 9900941-000 Viton O-Ring Kit 9900942-000
Linking Plate P to A with B & T Blocked	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	6030883-001 Buna N 0-Ring Kit 9900941-000 Viton 0-Ring Kit 9900942-000
Linking Plate P to A & B to T	P T <sub>B</sub> T <sub>A</sub> B A	6030885-001 Buna N O-Ring Kit 9900941-000 Viton O-Ring Kit 9900942-000
Linking Plate P to B & A to T	$P$ $T_B$ $T_A$ $B$ $A$	6030887-001 Buna N O-Ring Kit 9900941-000 Viton O-Ring Kit 9900942-000
Linking Plate P to T with A & B Blocked	$P T_B T_A B A$	6030889-001 Buna N 0-Ring Kit 9900941-000 Viton 0-Ring Kit 9900942-000
Linking Plate A to B with P & T Blocked	$P$ $T_B$ $T_A$ $B$ $A$	6030891-001 Buna N O-Ring Kit 9900941-000 Viton O-Ring Kit 9900942-000
Linking Plate P to B with A & T Blocked	$P T_{B} T_{A} B A$	6030893-001 Buna N 0-Ring Kit 9900941-000 Viton 0-Ring Kit 9900942-000
Linking Plate P to A & B with T Blocked		6030895-001 Buna N O-Ring Kit 9900941-000 Viton O-Ring Kit 9900942-000

5

Viton® is a registered trademark of E.I.DuPont


## Model codes

For sandwich valve assemblies with two valves

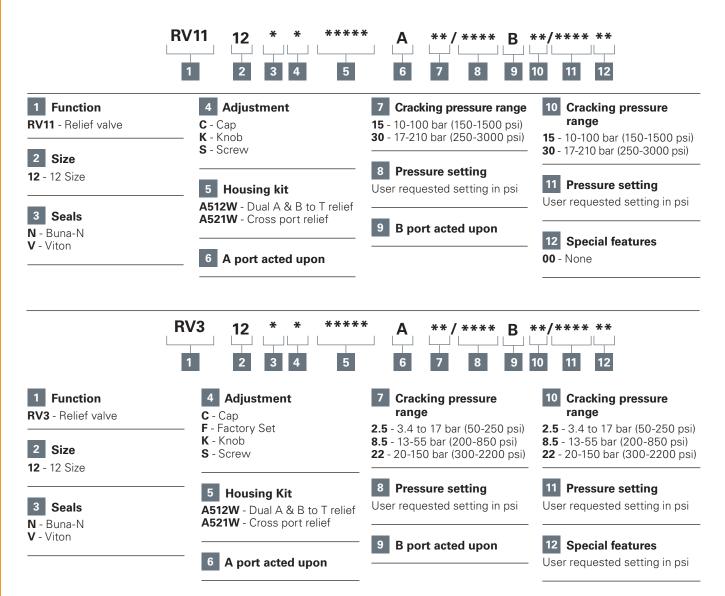

### Model codes

For sandwich valve assemblies with two valves

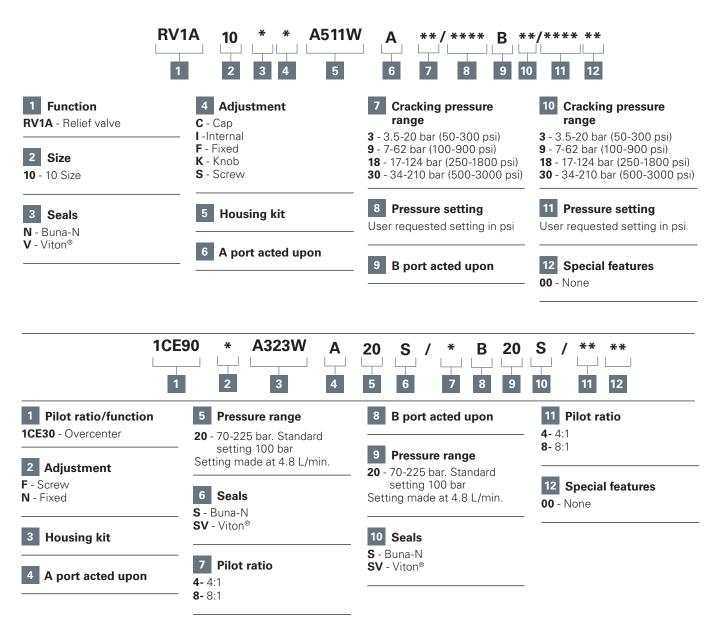

## Model codes

For sandwich valve assemblies with two valves


	4CK90 * A523W A 1 2 3 4	
1 Function 4CK90 - Check Valve	4 A port acted upon	6 B port acted upon
2 Pilot port size 1 - Internal	5 Adjustment S - Buna-N SV - Viton®	7 Seals S - Buna-N SV - Viton®
3 Housing kit		8 Special features 00 - None

### **Dimensions** ISO 05/D05/NG 10/CETOP5 Housing kits

### **Dimensions**

mm (inch)


### **Cavity porting**



Torque cartridge in housing 108-122 Nm (80-90 ft. lbs)



A514A Housing Kit Part Number 6021288-0 01

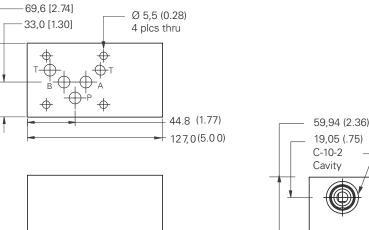


59,94 (2.36) 31,24 (1.23) 14-014 "O" Ring 69,6 (2.74)

**Typical Cartridges** Function CV3-10 Check valve on A, free flow out

(5 read)

### **Dimensions**

mm (inch)

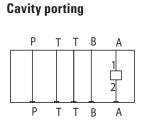

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

69,6 [2.74] Ø 5,5 (0.28) 33,0 [1.30] 4 plcs thru Æ 46,1 (1.82) 59,9 (2.36) 126,2(4.97) 20,3 (.80) C-12-2 Cavity 31,2 (1.23) 14-014 "O" Ring 69,6 (2.74) (5 reqd) Typical Cartridges Function


Typical Cartridges	Function
CV11-12	Check valve on A, Free Flow Out
FAR1-12	Flow regulator pressure compensated and check, Meter in A
SBV11-12-C	Solenoid 2-way poppet type bi-directional load holding on A, normally closed
SBV11-12-0	Solenoid 2-way poppet type bi-directional load holding on A, normally open
SV3-12-C	Solenoid 2-way poppet type load holding on A, normally closed
SV3-12-0	Solenoid 2-way poppet type load holding on A, normally open

ISO 05/D05/NG 10/CETOP5 Housing kits

#### **Dimensions**

mm (inch)


### **Cavity porting**



Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

A514B Housing Kit

A518W Housing kit

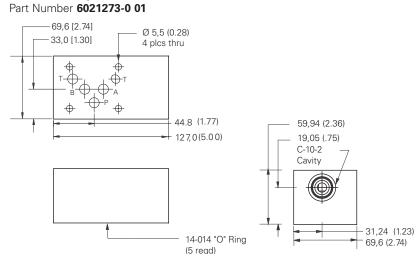


Typical Cartridges	Function
CV11-12	Check valve on B, Free Flow Out
FAR1-12	Flow Regulator pressure compensated and check, Meter in B
SBV11-12-C	SBV11-12-C Solenoid 2-way poppet type bi-directional load holding on B, normally closed
SBV11-12-0	SBV11-12-O Solenoid 2-way poppet type bi-directional load holding on B, normally open
SV3-12-C	Solenoid 2-way poppet type load holding on B, normally closed
SV3-12-0	Solenoid 2-way poppet type load holding on B, normally open

### **Dimensions**

mm (inch)


Ρ

Ρ Т

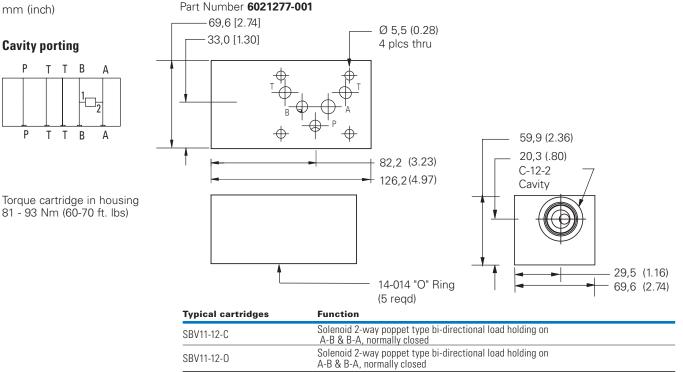


mm (inch)

### **Cavity porting**



Torque cartridge in housing-81-93 Nm (60-70 ft bls)

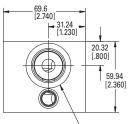

2.740 1.300 3.235 6.470 59.94 [2.360]

 $\oplus$ 

¢

A514W Housing kit

Part Number 4998388-001

-C-12-2 Cavity

ty	C-12-2 Cavity
Typical cartridges	Function
FAR1-12	Flow regulator pressure compensated and check, Meter in A
SBV11-12-C	Solenoid 2-way poppet type bi-directional load holding on A, normally closed
SBV11-12-0	Solenoid 2-way poppet type bi-directional load holding on A, normally open
SV3-12-C	Solenoid 2-way poppet type load holding on A, normally closed
SV3-12-0	Solenoid 2-way poppet type load holding on A, normally open

20.32 [.800]

69.6 [2.740]

- 31.24 [1.230]

Ø 5.5 (0.28) 4 plcsThru

Where measurements are critical request certified drawings. We reserve the right to change specifications without notice.


ISO 05/D05/NG 10/CETOP5 Housing kits

### Dimensions

mm (inch)

### A521A Housing kit

Part Number 6021299-0 01

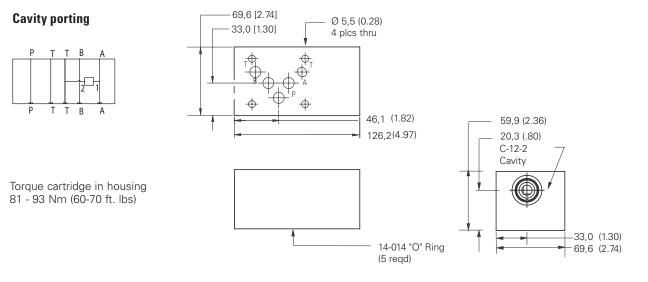


Typical cartridges	Function
RV1-12	Relief valve A-T
RV11-12	Relief valve A-T

### Dimensions


mm (inch)


### A524W Housing Kit Part Number 4998389-001

### **Cavity porting**

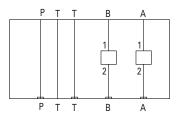

Torque cartridge in housing-

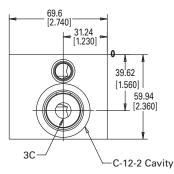

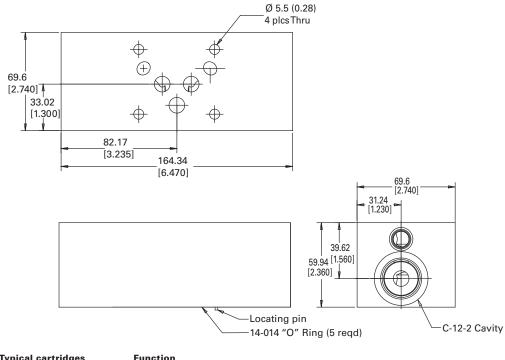

Typical cartridges	Function
FAR1-12	Flow regulator pressure compensated and check, Meter in B
SV3-12-C	Solenoid 2-way poppet type load holding on B, normally closed
SV3-12-0	Solenoid 2-way poppet type load holding on B, normally open


L

mm (inch)


### A524B Housing kit

Part Number 6021282-0 01

### **Cavity porting**



Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

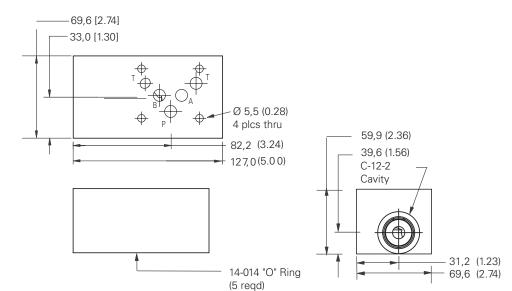


Typical cartridges	Function
FAR1-12	Flow regulator pressure compensated and check, Meter in B
SV3-12-C	Solenoid 2-way poppet type load holding on B, normally closed
SV3-12-0	Solenoid 2-way poppet type load holding on B, normally open

### Dimensions


mm (inch)

### A521B Housing kit

Part Number 6021295-0 01

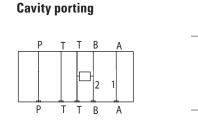

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

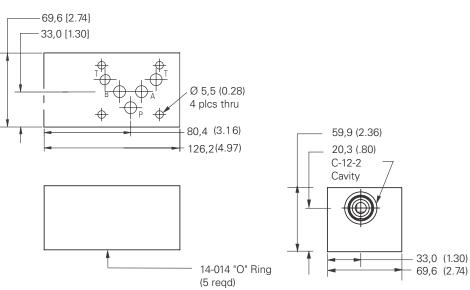

Typical cartridges	Function
RV1-12	Relief valve B-T
RV11-12	Relief valve B-T


ISO 05/D05/NG 10/CETOP5 Housing kits

#### Dimensions


### A521P Housing kit

mm (inch)

### **Cavity porting**



Part Number 6021302-0 01

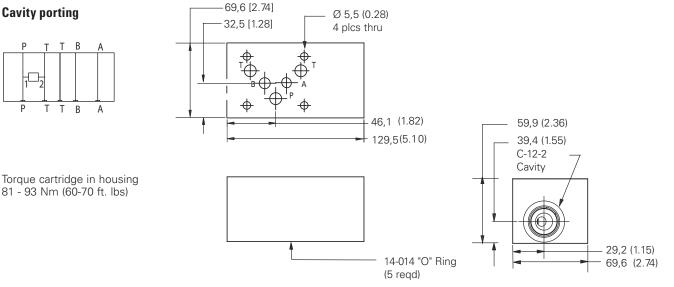

_

### Dimensions mm (inch)

**Cavity porting** 

т т В


ΤТ В А

Ρ

Ρ

А

#### A524P Housing kit Part Number 6021186-001

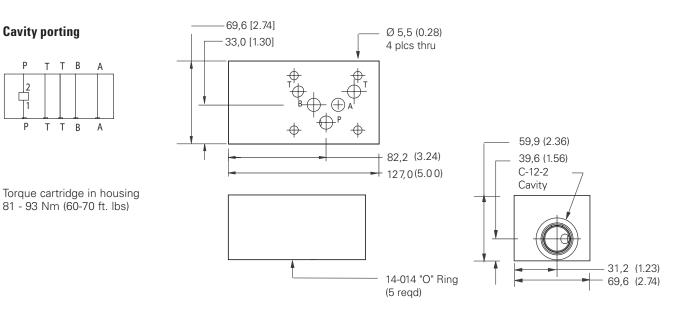


Typical cartridges	Function
CV11-12	Check vavle on P
FAR1-12	Flow regulator pressure compensated, meter in P


mm (inch)

#### A525P Housing kit

Part Number 6021293-0 01

### **Cavity porting**



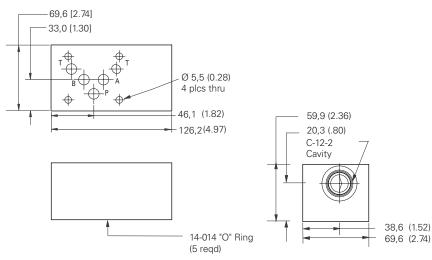

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs


Typical cartridges	Function
SV3-12-C	Solenoid 2-way poppet type P-T, normally closed
SV3-12-0	Solenoid 2-way poppet type P-T, normally open

### Dimensions

### A511W Housing kit


mm (inch)

### **Cavity porting**

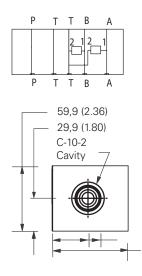

81 - 93 Nm (60-70 ft. lbs)

Part Number 4998388-001

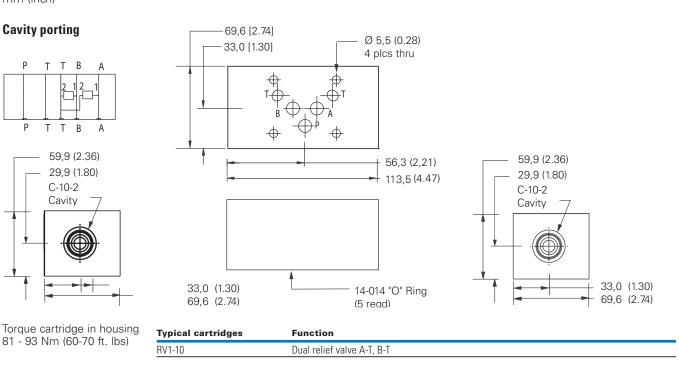

ISO 05/D05/NG 10/CETOP5 Housing kits


#### **Dimensions**


#### A512W Housing kit


mm (inch)

Part Number 6021184-001





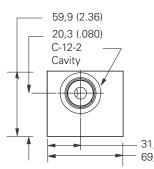

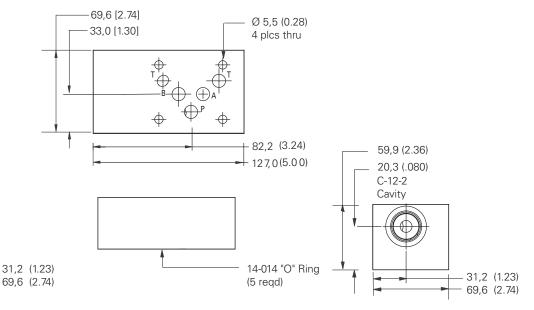

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs


Typical cartridges	Function
RV1-12	Dual relief valve A-T, B-T
RV11-12	Dual relief valve A-T, B-T

### **Dimensions**

mm (inch)


### A526P Housing kit

**Cavity porting** 



Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)


Part Number 6021158-0 01

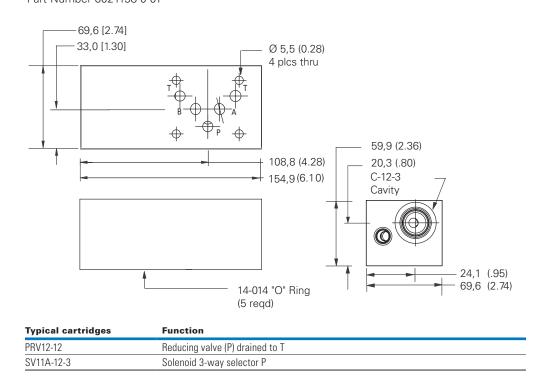

mm (inch)

### A509W Housing kit

Part Number 6021189-001

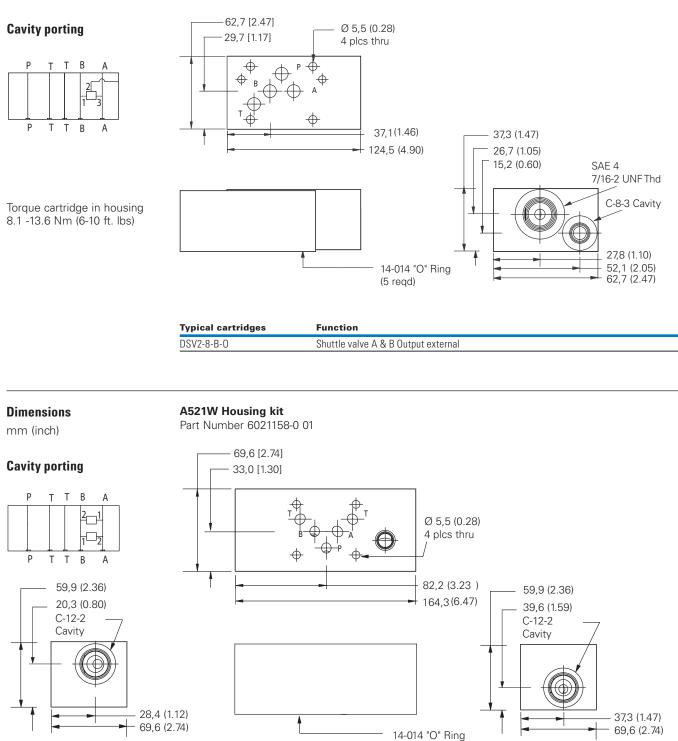

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

Typical cartridges	Function	
RV3-12	Cross port relief valve A& B	
RV11-12	Cross port relief valve A& B	

(5 reqd)


### Dimensions ISO 05/D05/NG Housing kits


**Dimensions** mm (inch)


#### A510B Housing kit

Part Number 6021352-0 01





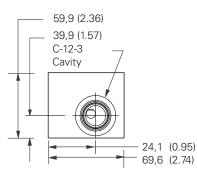

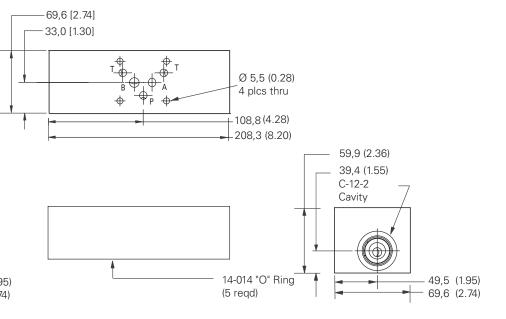


Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

### Typical cartridges PRV12-12/CV11-12

Reducing valve (B) drained to T, reverse free-flow check

### Dimensions

A523W Housing kit Part Number 5999906-0 01

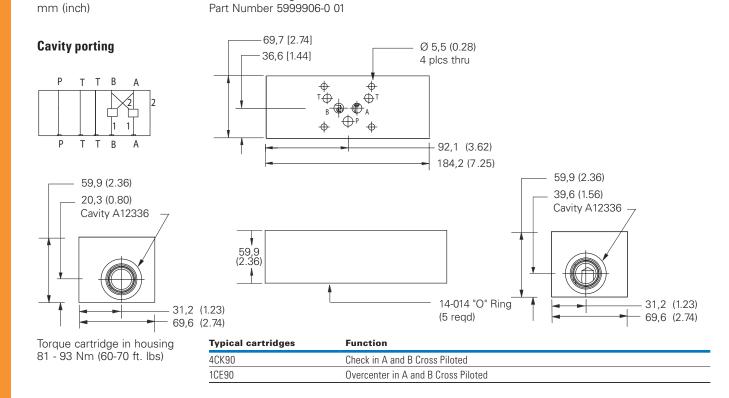

Function

mm (inch)


### A523A Housing kit


Part Number 6021282-0 01

A514W Housing kit Part Number 4998388-001

2.740

1.300

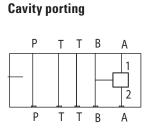

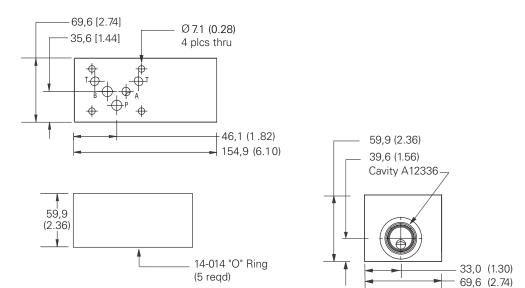


Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)


Typical cartridges	Function
4CK90	Check in A and Piloted from B
1CE90	Overcenter A and Piloted from B


ø 5.5 (0.28) 4 plcs Thru

### Dimensions

mm (inch)

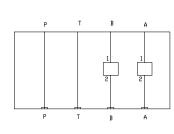

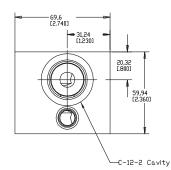

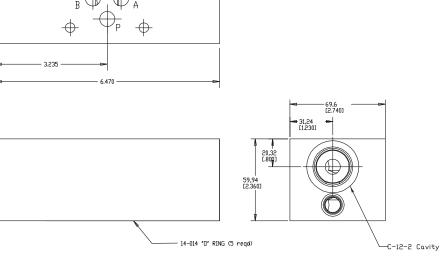

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)


Typical cartridges	Function
4CK30	PO Check Valve on A and Pilot from B
1CE30	Counterbalance Valve on A and Pilot from B

ISO 05/D05/NG 10/CETOP5 Housing kits

### Dimensions

### A524W Housing kit

Part Number 4998389-001

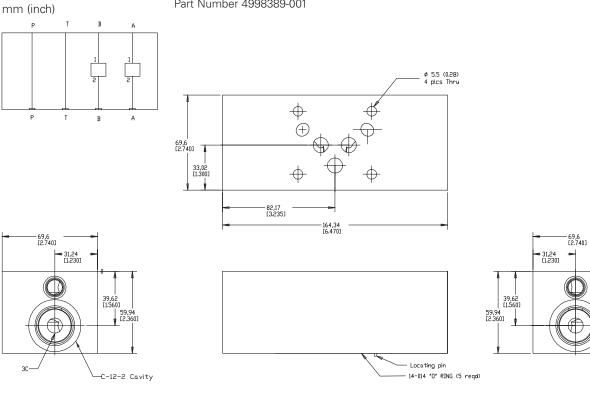

Torque cartridge in housing 81 - 93 Nm (60-70 ft. lbs)

Typical cartridges	Function
4CK90	PO Check Valve on A and Pilot from B
1CE90	Counterbalance Valve on A and Pilot from B

-C-12-2 Cavity

L