

# Understanding the 2015 Canadian Electrical Code Requirements for Arc-Fault Protection

Eaton  
Residential Products  
Group (Canada)

## What is an Arc Fault?

An arc-fault is an unintended arc created by current flowing through an unplanned path.

Arcing creates excessive heat that can easily ignite surrounding materials, such as wood framing or insulation, resulting in a hazardous fire.


## Typical causes of arc faults are:

1. Arcing in installed electrical wiring from physical damage such as:
  - Wires accidentally punctured by nails or screws
  - Cables that are stapled tightly against wall studs
  - Animal and vermin chewing through wiring insulation
  - Heat, humidity and voltage stress
2. Arcing at loose connections or joints in the circuit or at outlets
  - Bent or crimped cords
  - Brittle or aged cords
  - Cords under or behind furniture
3. Arcing in appliance or extension cords
  - Bent or crimped cords
  - Brittle or aged cords
  - Cords under or behind furniture

## Arc-Fault Circuit Interrupters

Today's arc-fault technology, available in both circuit breaker and receptacle form, has been proven via the use of arc-fault circuit breakers, saving lives and property as an industry standard for more than 15 years. The technology has gone through several iterations to reduce unwanted tripping due to non-hazardous arcs that are part of the normal operation of appliances and devices in the home.

Both AFCI circuit breakers and receptacles are designed to detect both series and parallel arcing conditions. However, an AFCI receptacle will not protect against parallel arcing upstream of the device as the current path does not flow through the AFCI receptacle. A combination AFCI circuit breaker will protect the entire circuit.

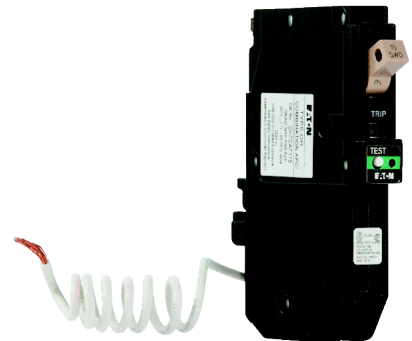

# EATON

Powering Business Worldwide

## Understanding the 2015 Canadian Electrical Code provisions

In simplified terms, arc-fault circuit protection is required in 125Vac, 15A and 20A circuits supplying receptacles throughout the home with the exception of those outlined in the 2015 CE Code. Be reminded that enforcement and interpretation of the code is up to the discretion of the local inspection authority having jurisdiction (AJH).

The new Rule 26-724(f) of the 2015 Canadian Electrical Code requires all branch circuits in dwelling units supplying 125V receptacles rated 20A or less to be protected by a Combination-Type arc-fault circuit interrupter (AFCI), except that branch circuits supplying receptacles installed in accordance with Rules 26-710 (f) and 26-712(d) (i), (iii), (iv) and (v), and those supplying only one receptacle for the connection of a cord-connected sump pump, are exempt from the requirement for arc-fault protection.

A combination-type AFCI is defined in the new Rule 26-720 as a device that provides both series and parallel arc-fault protection to the entire branch circuit wiring, including cord sets and power supply cords connected to the outlets, against the unwanted effects of arcing.

## Outlet Branch-Circuit-Type Arc-Fault Circuit Interrupter

Rule 26-720 also defines an Outlet Branch-Circuit-Type AFCI - a device that provides both series and parallel arc-fault protection to downstream branch circuit wiring, cord sets, and power supply cords against the unwanted effects of arcing and also provides series arc-fault protection to upstream branch circuit wiring. The new CE Code Rule 26-724 (g) allows the use of an Outlet Branch-Circuit Type arc-fault circuit interrupter (OBC AFCI) instead of the Combination circuit breaker type required with Rule 26-724 (f), provided that the OBC AFCI is installed at the first outlet on the branch circuit and the wiring method for the portion of the branch circuit between the branch-circuit overcurrent device and the first outlet is comprised of metal raceway, armoured cable, or non-metallic conduit or tubing.

The reason behind the added mechanical protection is that the OBC AFCI does not provide parallel arc-fault protection to the upstream branch circuit wiring. The mechanical protection is to minimize the risk of direct contact and damage to the circuit conductors that could cause arcing and ignition, and to localize the flames should ignition occur.

## A look inside an AFCI Circuit Breaker

