nEVLL Hazard•Gard® **LED Luminaire**

Crouse-Hinds

Installation & Maintenance Information

IF 1687

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

APPLICATION

- IECEx UL 14.0053X
- DEMKO 14 ATEX 1302151X

Refer to the luminaire nameplate for specific classification information, maximum ambient temperature suitability and corresponding operating temperature (T-Code).

nEVLL HAZARD•GARD® LED Luminaire is designed for use indoors and outdoors in marine and wet locations, where moisture, dirt, corrosion, vibration, and rough usage may be present.

IECEx & ATEX 0359

CE SII 2 G Ex d IIB+ H2 T5 Gb

C€ II 2 D Ex tb IIIC T95°C Db IP66 -20 °C < Tamb < +55 °C

Ex d IIB+H2 T5 Gb

Ex tb IIIC T95°C Db IP66

NEVLL 5L, 7L, 9L Tamb < +65 °C

NEVLL 11L, 13L Tamb < +55 °C

nEVLL HAZARD•GARD® LED Luminaires are supplied for use with a choice of voltages:

- 100VAC 277VAC, 50/60Hz, 108-250VDC
- 347VAC 480VAC, 50/60Hz



FIGURE 1

EN 60079-0:2012 IEC60079-0 ED:6 EN 60079-0:2007 IEC60079-1 ED:6 EN 60079-31:2009 IEC60079-31 ED:1

∆WARNING

To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

\triangle WARNING

To avoid electric shock:

Be certain electrical power is OFF before and during installation and maintenance.

Luminaire must be supplied by a wiring system with an equipment grounding conductor.

↑ WARNING

To avoid explosion:

Make sure that the supply voltage is the same as the luminaire

Do not install where the marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.


Do not operate in ambient temperatures above those indicated on the luminaire nameplate.

All gasket seals must be clean and undamaged.


Use proper supply wiring as specified on the luminaire nameplate.


Before dismounting, electrical power to the luminaire must be turned off. Keep tightly closed when in operation.

DIMENSIONS

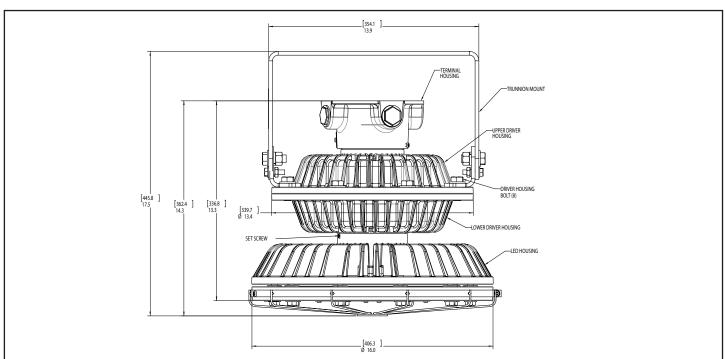


TRUNNION MOUNT INSTALLATION

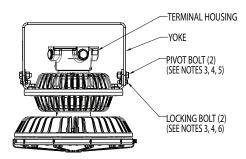

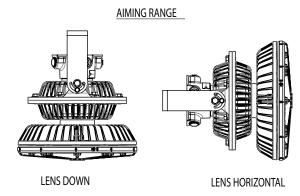


- Using yoke as a template, mark and drill desired location on mounting surface.
- Secure yoke to surface using 1/2" bolts or lag screws (not provided).
- 3. To make final adjustment, loosen the pivot and locking bolts to position at the desired angle*.
- 4. Rotate fixture to the desired position.
- Tighten the two (2) 1/2-13 pivot bolts to 45±1.7 lbs.-ft. [61.01±2.3 N-m].
- 6. Tighten the two (2) 5/16-18 locking bolts to 11.45±1.2 lbs.-ft. [15.6±1.6 N-m].
- Tighten bolts on LED housing to 54±20 lbs.-ft. [61±2.5 N-m] in star fashion.
- 8. Cover entries are M25 1.5 pitch.
- Only cable glands and blanking elements with d, tb and IP66 ratings may be used.
- All unused openings must be provided with certified blanking element with appropriate protection techniques and ratings.
- 11. If conduits are used, seals must be installed within 50mm. Conduit seals must be rated d. tb and IP66.

WIRING DIAGRAMS

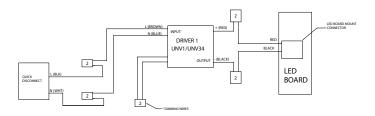

2 WAGO 2 - POLE LEVER LOCK PN:222-412
* UNIV1 DIMMING WIRES: + (VIOLET) & - (GRAY)

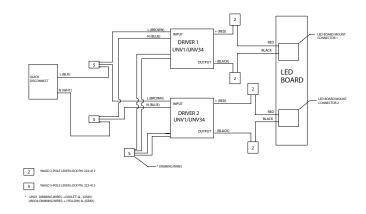

100V to 277VAC 50 or 60 Hz or 180V to 250VDC Input 347V to 480VAC 50 or 60Hz Input

CONDITIONS OF SAFE USE

- To minimize risk of Electrostatic Discharge adequate grounding must be maintained.
- Use at least 90°C wire.
- Contact Crouse-Hinds for replacement fasteners.
- Only joints that are opened by the user are the driver housing and ceiling mount.
- Contact Crouse-Hinds by Eaton for information on flameproof joints.

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.

