

The filter bag that works better than a filter cartridge

Eaton's PROGAF filter bags are suitable for a wide range of applications such as the filtration of food and beverages, pharmaceuticals, chemicals, inks, colors and water purification, as well as applications in microelectronics and many more.

PROGAF filter bags constitute a new, high-performance alternative for applications requiring *absolute* filtration. The multistage filtration, with filter material that gets finer from layer to layer, provides optimum efficiency (greater than 99.9%) and a long operating life.

Features and benefits

- Fully-welded construction with patented SENTINEL® seal ring provides 100% bypass-free filtration and better performance for critical applications
- The pressure-activated SENTINEL seal ring provides a flexible, chemically resistant seal which adapts to any bag filter housing
- The specially developed filter material structure provides a long operating life as well as *absolute* filtration
- The structure of the filter bag consists of up to twelve layers of a medium that gets finer and finer from one layer to the next
- The 100% polypropylene design stands for "silicone-free" materials¹ combined in an economical and easily disposable filter bag
- PROGAF filter bags are made from the finest hydrophobic polypropylene fibers that require wetting with an aqueous solution (detailed instructions for use are included in every box of PROGAF filter bags)
- Eaton strongly recommends the use of an insertion tool that facilitates the insertion of the filter bag into the bag filter housing and ensures the correct alignment of the filter bag inside the restrainer basket

Filter specifications

Material
Melt-blown polypropylene

Cover layer
Polypropylene mesh

Seal ring
Welded polypropylene
SENTINEL seal ring

Retention ratings²
1, 2, 12 µm @ > 99.9% efficiency

Dimensions/Parameters

Size
02: Ø 180 x 810 mm L

Filter area
02: 0.48 m²

Max. operating temperature
90 °C

Max. differential pressure
2.5 bar

Recommended change-out pressure for disposal³
0.8 – 1.5 bar

Max. flow rate⁴
02: 10 m³/h

FDA/EC Conformity


All propylene materials used for manufacturing comply with the FDA requirements according to title 21, Section 177 and the EC Directives 1935/2004 and 2002/72/EC for contact with food and beverages.




Powering Business Worldwide

PROGAF Filter Bag Range

Flow rates

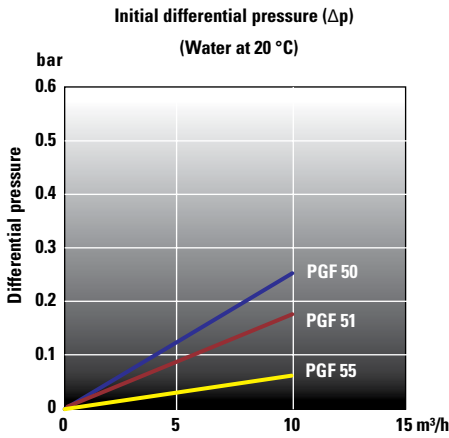


Ordering information

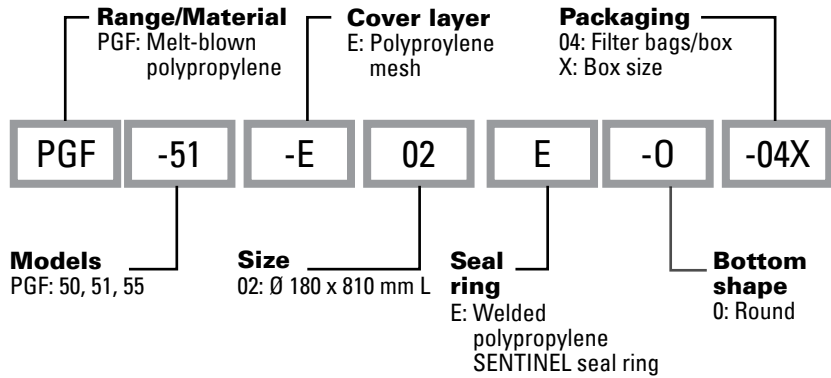


Filter removal efficiency

Models	Particle sizes (µm) at common removal efficiencies (%)					Δp (bar) size 02 @ 10 m³/h	Max. operating temperature (°C)
	> 60%	> 90%	> 95%	> 99%	> 99.9%		
PGF 50	-	-	0.15	0.45	1	0.25	90
PGF 51	> 80 @ 0.15	0.3	0.45	0.5	2	0.17	90
PGF 55	1	3	6	10	12	0.06	90

Comparison

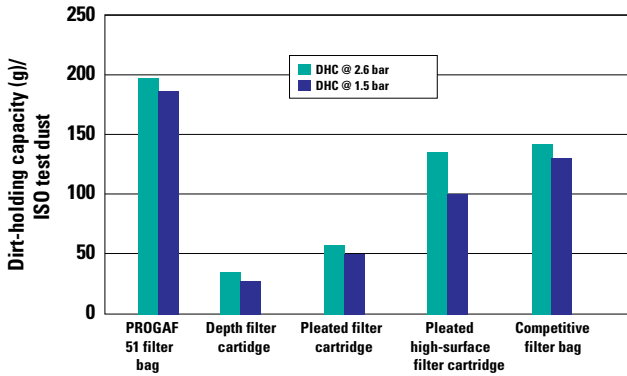

Average operating Δp

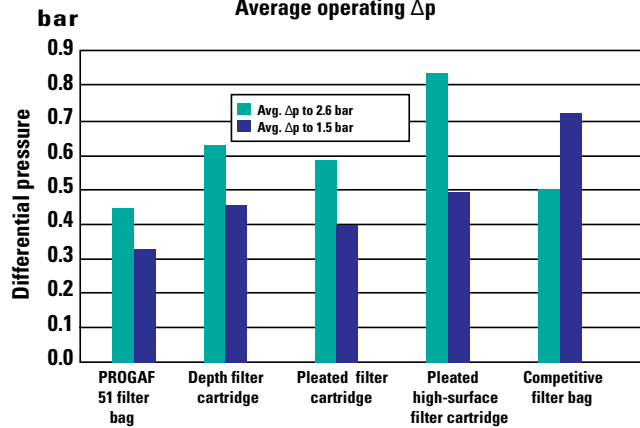

¹ Based on an accepted paint compatibility test (see document QUC-STA-10).

² Reference values based on single pass tests in ambient lab conditions with ISO test dust in water at 10 m³/h/size 02.

³ Depending on the respective applications and their requirements.

⁴ For liquids with a dynamic viscosity of 1 mPa·s @ 20 °C.

North America
44 Apple Street
Tinton Falls, NJ 07724
Toll Free: 800 656-3344
(North America only)
Tel: +1 732 212-4700

China
No. 3, Lane 280,
Linhong Road
Changning District, 200335
Shanghai, P.R. China
Tel: +86 21 5200-0099

Europe/Africa/Middle East
Auf der Heide 2
53947 Nettersheim, Germany
Tel: +49 2486 809-0

Singapore
4 Loyang Lane #04-01/02
Singapore 508914
Tel: +65 6825-1668

Friedensstraße 41
68804 Altlußheim, Germany
Tel: +49 6205 2094-0
An den Nahewiesen 24
55450 Langenlonsheim, Germany
Tel: +49 6704 204-0

Brazil
Av. Julia Gaioli, 474 – Bonsucesso
07251-500 – Guarulhos, Brazil
Tel: +55 11 2465-8822

For more information, please
email us at filtration@eaton.com
or visit www.eaton.com/filtration

EN
EF-FTB-03
06-2016

© 2016 Eaton. All rights reserved. All trademarks and registered trademarks are the property of their respective owners. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.



Powering Business Worldwide