Type CLC Coalescer/Separator

Model 31L-CLC for Horizontal or Vertical Applications



- Two-Stage Design for Maximum Efficiency
- Flanged Connections
- Carbon Steel or Stainless Steel Construction
- Horizontal or Vertical Flow

FEATURES

- Removes 99% of Liquid and Solid Entrainment Particles Larger Than 4 Microns
- Easy Maintenance
- Three Flow Configurations
- · Gas, Steam, or Air Applications
- High Efficiency Over Wide Flow Range

OPTIONS

ASME Code Stamp

Model 36L-CLC with Vertical Upflow Inlet and Horizontal Outlet Model 35L-CLC with side Inlet for Vertical Upflow







High-Efficiency Separation Down to 4 Microns

The unique two-stage design of these Type CLC Coalescers/Separators allows them to remove 99% of all liquid and solid particles larger than 4 microns in size. Standard, one-stage separators are only capable of removing particles larger than 10 microns in size. The efficiency of Eaton's Coalescer/Separator far exceeds that of any other type of centrifugal, cyclone, turbine or vane type separator. And it works with no moving parts to fail or wear out.

Applications

The Eaton Coalescer/Separator provides two-stage separation of liquid that is in the form of a fine mist or fog from a gas or vapor. The Coalescer/Separator is primarily used in applications where a fine mist is encountered in processes involving cooling, condensation, flashing, or evaporation, such as:

- Compressed refrigeration gases
- Evaporator overhead steam
- Compressed air prior to desiccant dryer beds
- High-pressure gas at injection wells
- Fuel gas lines to engines in power
- Industrial plants
- Natural gas and gas distribution lines
- Regulator stations

Two-Stage Separation

In the first stage, the coalescer stage, smaller liquid droplets enter a special wire mesh de-misting pad in the vessel. The pad's purpose is to increase the size of the droplets as they pass through it so they can be removed. The larger liquid droplets exit the de-misting pad and enter the second, separation stage. In the second stage, the droplets are centrifugally thrown to the outside wall of the vessel by a unique Cenpellar™ and flow to the bottom for draining. Eaton's Vortex Containment Plate (VCP) prevents the droplets from being re-entrained after separation.

Easy Maintenance

The only maintenance required is the inspection, cleaning, or replacement of the de-misting pad. This is easily accomplished through either a quick-opening body closure or body flanges.

Engineering Specifications

All gas/liquid separators are fabricated carbon steel or stainless steel construction with two-stage coalescer/ separator design and flanged connections. Separators have an ASME Code Stamp.

Type CLC Coalescers/Separators

Dimensions: Model 31L-CLC (in/mm)

Pipe Size	А	В	С	D	Drain NPT	Wt (lb/kg)
2-1/2	34 / 864	28 / 711	3 / 76	6.62 / 168	1	125 / <mark>57</mark>
3	36 / 914	30 / 762	3 / 76	8.62 / <mark>219</mark>	1-1/2	180 / 82
4	42 / 1067	34 / 864	4 / 102	10.75 / <mark>273</mark>	1-1/2	280 / 127
5	46 / 1168	38 / <mark>965</mark>	4 / 102	12.75 / <mark>324</mark>	1-1/2	390 / 177
6	48 / 1219	40 / 1016	4 / 102	14 / 356	1-1/2	510 / <mark>232</mark>
8	58 / 1473	48 / 1219	5 / 1 <mark>27</mark>	16 / 406	2	665 / 302
10	64 / 1626	54 / 1372	5 / 1 <mark>27</mark>	20 / 508	2	1060 / 482
12	72 / 1829	62 / 1575	5 / 1 <mark>27</mark>	24 / 610	2-1/2	1415 / 643
14	78 / 1 <mark>981</mark>	68 / 1727	5 / 127	28 / 711	2-1/2	1830 / 832
16	86 / 2184	76 / 1930	5 / 127	30 / 762	3	2130 / 968

See Steam and Air Charts on the Technical Information Page for sizing information.


Dimensions: Model 36L-CLC (in/mm)

D	onion mode		.,,				
Pipe Size	С	D	Т	W	Χ	Drain NPT	Wt (lb/kg)
2-1/2	3 / 76	6.62 / 168	7 / 178	37 / 940	30 / 762	1	130 / 59
3	3 / 76	8.62 / <mark>219</mark>	8 / 203	41 / 1041	33 / 838	1-1/2	165 / <mark>75</mark>
4	4 / 102	10.75 / <mark>273</mark>	10 / 254	44 / 1118	36 / 914	1-1/2	295 / 134
5	4 / 102	12.75 / <mark>324</mark>	11 / 279	51 / 1295	41 / 1041	1-1/2	420 / <mark>191</mark>
6	4 / 102	14 / 356	12 / 305	54 / 1372	42 / 1067	1-1/2	475 / <mark>216</mark>
8	5 / 127	16 / 406	13 / 330	66 / 1676	53 / 1346	2	525 / <mark>239</mark>
10	5 / 127	20 / 508	15 / <mark>381</mark>	77 / 1956	60 / 1524	2	590 / <mark>268</mark>
12	5 / 127	24 / 610	17 / 432	88 / 2235	70 / 1778	2-1/2	1125 / <mark>511</mark>
14	5 / 127	28 / 711	19 / 483	96 / 2438	77 / 1956	2-1/2	1475 / <mark>670</mark>
16	5 / 127	30 / 762	20 / 508	101 / 2565	80 / 2032	3	1925 / 875


Dimensions: Model 35L-CLC (in/mm)

Pipe Size	С	L	0	Р	Q	Drain NPT	Weight (lb/kg)
2-1/2	3 / 76	8.62 / <mark>219</mark>	30 / 762	24 / 610	8 / 203	1	145 / <mark>66</mark>
3	3 / 76	10.75 / <mark>273</mark>	34 / 864	28 / 711	9 / 229	1-1/2	195 / 89
4	4 / 102	14 / 356	39 / 991	31 / 787	11 / 279	1-1/2	305 / 139
5	4 / 102	16 / 406	45 / 1143	35 / 889	12 / 305	1-1/2	435 / 198
6	4 / 102	18 / 457	50 / 1270	39 / <mark>991</mark>	13 / 330	1-1/2	530 / <mark>241</mark>
8	5 / 127	20 / 508	56 / 1422	45 / 1143	15 / <mark>381</mark>	2	665 / <mark>302</mark>
10	5 / 127	24 / 610	67 / <mark>1702</mark>	53 / 1346	17 / 432	2	975 / 443
12	5 / 127	30 / 762	76 / 1930	61 / <mark>1549</mark>	19 / 483	2-1/2	1390 / 632
14	5 / 127	36 / 914	86 / <mark>2184</mark>	67 / 1 <mark>702</mark>	23 / 584	2-1/2	1920 / 873
16	5 / 127	40 / 1016	98 / 2489	77 / 1956	25 / 635	3	2645 / 1202


Three Flow Patterns for **Application Flexibility**

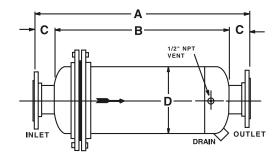

Horizontal Inlet and Outlet

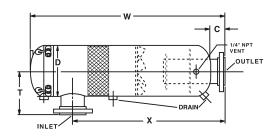

Vertical Upflow Inlet and Horizontal Outlet

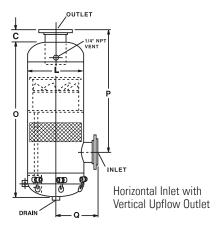

North America

44 Apple Street Tinton Falls, NJ 07724 Toll Free: 800 656-3344 (North America only) Tel: +1 732 212-4700

Europe/Africa/Middle East

Auf der Heide 2 53947 Nettersheim, Germany Tel: +49 2486 809-0

Friedensstraße 41 68804 Altlußheim, Germany Tel: +49 6205 2094-0

An den Nahewiesen 24 55450 Langenlonsheim, Germany Tel: +49 6704 204-0

China No. 3, Lane 280, Linhong Road Changning District, 200335 Shanghai, P.R. China Tel: +86 21 5200-0099

100G Pasir Panjang Road #07-08 Singapore 118523 Tel: +65 6825-1668

Av. Ermano Marchetti, 1435 -Água Branca, São Paulo - SP, 05038-001, Brésio Tel: +55 11 3616-8461

For more information, please email us at filtration@eaton.com or visit www.eaton.com/filtration

© 2019 Eaton. All rights reserved. All trademarks and registered trademarks are the property of their respective owners. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations

US 07-2019



