
Series HPV 170-450 6000 PSI

Dimensions:

Type	HPV 170			
connection	-16SAE -20SAE		-24SAE	
Α	13.26	13.26	13.46	
В	7.48			
С	2.87	2.87	2.95	
D	2.91 2.91		3.03	
weight	33 lbs.	36 lbs		
volume tank	0.18 Gal.			
Type		HPV 240		
connection	-16SAE	-20SAE	-24SAE	
Α	15.23	15.23	15.43	
В	9.44			
С	2.87	2.87	2.95	
D	2.91	2.91 2.91		
weight	35 lbs. 37 lbs.		38 lbs.	
volume tank	0.23 Gal.			
Type	HPV 360			
		~~~ ~ =		
connection	-16SAE	-20SAE	-24SAE	
Α	-16SAE 18.38	-20SAE 18.38	-24SAE 18.58	
A B				
Α		18.38		
A B	18.38	18.38 12.59	18.58	
A B C	18.38	18.38 12.59 2.87	18.58	
A B C D	18.38 2.87 2.91	18.38 12.59 2.87 2.91	18.58 2.95 3.03	
A B C D weight	18.38 2.87 2.91	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal.	18.58 2.95 3.03	
A B C D weight	18.38 2.87 2.91	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal.	18.58 2.95 3.03	
A B C D weight volume tank	18.38 2.87 2.91	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal. HPV 450 -20SAE	18.58 2.95 3.03	
A B C D weight volume tank  Type connection A	18.38 2.87 2.91 40 lbs.	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal.	18.58 2.95 3.03 43 lbs.	
A B C D weight volume tank  Type connection A B	2.87 2.91 40 lbs.	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal. HPV 450 -20SAE	2.95 3.03 43 lbs.	
A B C D weight volume tank  Type connection A B C	2.87 2.91 40 lbs.	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal. HPV 450 -20SAE 22.51	2.95 3.03 43 lbs. -24SAE 22.71	
A B C D weight volume tank  Type connection A B	2.87 2.91 40 lbs. -16SAE 22.51	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal. HPV 450 -20SAE 22.51 16.73	2.95 3.03 43 lbs. -24SAE 22.71	
A B C D weight volume tank  Type connection A B C	2.87 2.91 40 lbs. -16SAE 22.51	18.38 12.59 2.87 2.91 42 lbs. 0.31 Gal. HPV 450 -20SAE 22.51 16.73 2.87	2.95 3.03 43 lbs. -24SAE 22.71	



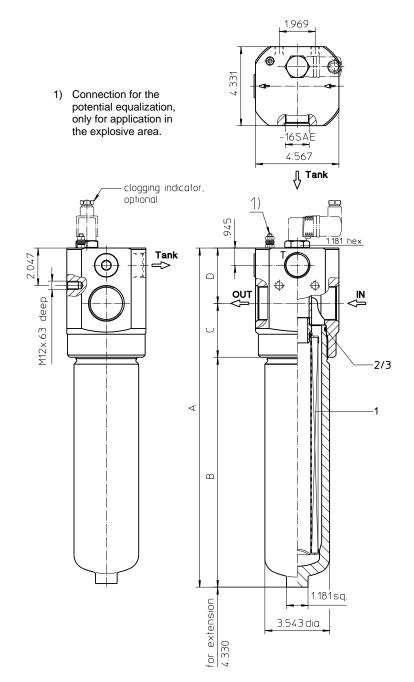

Dimensions: inches

### **Pressure Filter** Series HPV 170-450 6000 PSI

#### **Description:**

Pressure filter series HPV 170-450 have a working pressure up to 6000 PSI. Pressure peaks can be absorbed with a sufficient safety margin. The HPV-filter is in-line mounted.

The filter element consists of star-shaped, pleated filter material, which is supported on the inside by a perforated core tube and is bonded to the end caps with a highquality adhesive. The flow direction is from outside to inside. Filter elements are available down to 5  $\mu m_{(c)}$ . Finer filtration is available upon request.

For cleaning the stainless steel mesh element or changing the filterer element, remove the cover and take out the element. The mesh elements are not guaranteed to maintain 100% performance after cleaning.

Eaton filter elements are known for high intrinsic stability and an excellent filtration capability, a high dirt-retaining capacity and a long service life.

Eaton filter can be used for petroleum-based fluids, HW emulsions, water glycols, most synthetic fluids and lubrication fluids. Consult factory for specific fluid applications.

Eaton filter elements are available up to a pressure resistance of  $\Delta p$  2320 PSI and a rupture strength of  $\Delta p$  3625

The differential pressure-valve opens independently of the operating pressure at a chosen differential pressurevalve between IN and OUT and leaves an unfiltered partial-flow flowing from "IN" to the tank.

#### Type index:

Complete filter: (ordering example)

HPV. 360.10VG. HR. E. P. -, UG. 7. -, D2. AE 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |

1 series:

HPV = pressure filter with differential pressure-valve

2 | nominal size: 170, 240, 360, 450

3 filter-material:

80G, 40G, 25G stainless steel wire mesh 25VG, 16VG, 10VG, 6VG, 3VG microglass

4 filter element collapse rating:

= ∆p 435 PSI

=  $\Delta p$  2320 PSI (rupture strength  $\Delta p$  3625 PSI)

5 | filter element design:

F = single-end open

6 sealing material:

= Nitrile (NBR) = Viton (FPM)

7 filter element specification:

= standard = stainless steel

8 process connection:

UG = thread

9 process connection size:

5 = -16 SAE = -20 SAE 6

= -24 SAE

10 filter housing specification:

= standard

11 internal valve:

= with differential pressure-valve Δp 51 PSI D1 = with differential pressure-valve Δp 102 PSI

12 clogging indicator or clogging sensor:

- = without AOR = visual, see sheet-no. 1606

AOC = visual, see sheet-no. 1606

AE = visual-electric, see sheet-no. 1615 VS5 = electronic, see sheet-no. 1619

To add an indicator/sensor to your filter, use the corresponding indicator data sheet to find the indicator details and add them to the filter assembly model code.

Filter element: (ordering example)

01E. 360. 10VG. HR. E. P. -1 | 2 | 3 | 4 | 5 | 6 | 7 |

1 series:

01E. = filter element according to company standard

2 **nominal size:** 170, 240, 360, 450

3 - 7 see type index-complete filter

#### Technical data:

operating temperature: +14°F to +212°F

operating medium mineral oil, other media on request

max. operating pressure:6000 PSItest pressure:8700 PSIprocess connection:threadhousing material:C-steel

sealing material: Nitrile (NBR) or Viton (FPM), other materials on request

installation position: vertical

Classified under the Pressure Equipment Directive 2014/68/EU for mineral oil (fluid group 2), Article 4, Para. 3. Classified under ATEX Directive 2014/34/EU according to specific application (see questionnaire sheet-no. 34279-4).

#### Pressure drop flow curves:

#### Filter calculation/sizing

The pressure drop of the assembly at a given flow rate Q is the sum of the housing  $\Delta p$  and the element  $\Delta p$  and is calculated as follows:

 $\Delta p$  assembly =  $\Delta p$  housing +  $\Delta p$  element  $\Delta p$  housing = (see  $\Delta p$  = f (Q) - characteristics)

$$\Delta p \, _{\text{element}} \left( \text{PSI} \right) = \quad Q \, \left( GPM \right) \, x \, \, \frac{MSK}{1000} \, \left( \frac{PSI}{GPM} \right) x \, \, \nu \left( SUS \right) \, x \, \, \frac{\rho}{0.876} \, \left( \frac{kg}{dm^3} \right)$$

For ease of calculation our Filter Selection tool is available online at <a href="www.eaton.com/hydraulic-filter-evaluation">www.eaton.com/hydraulic-filter-evaluation</a>


#### Material gradient coefficients (MSK) for filter elements

The material gradient coefficients in psi/gpm apply to mineral oil (HLP) with a density of 0.876 kg/dm³ and a kinematic viscosity of 139 SUS (30 mm²/s). The pressure drop changes proportionally to the change in kinematic viscosity and density.

HPV	VG			G				
	3VG	6VG	10VG	16VG	25VG	25G	40G	80G
170	2.714	1.884	1.206	1.036	0.708	0.0839	0.0783	0.0537
240	2.092	1.452	0.930	0.799	0.546	0.0651	0.0607	0.0416
360	1.530	1.062	0.680	0.584	0.399	0.0475	0.0444	0.0304
450	1.126	0.782	0.500	0.430	0.294	0.0349	0.0326	0.0223

#### $\Delta p = f(Q) - characteristics according to ISO 3968$

The pressure drop characteristics apply to mineral oil (HLP) with a density of 0.876 kg/dm³. The pressure drop changes proportionally to density.

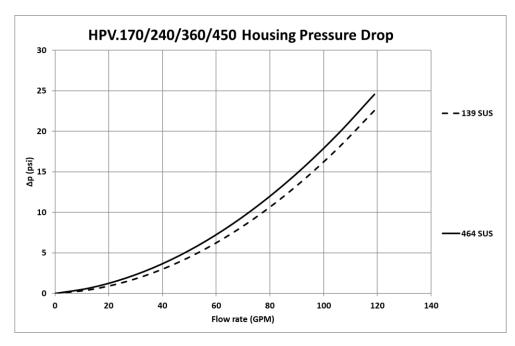

#### Symbols:

filter with

differential pressure-valve

without indicator



with electric indicator AE30 / AE40



with visual-electric indicator AE50 / AE62



with visual-electric indicator AE70 / AE80 / AE90



with visual indicator AOR/AOC



with electronic clogging sensor VS5

# I bub

#### Spare parts:

item	qty.	designation	dimension			article-no.		
			HPV 170	HPV 240	HPV 360	HPV 450		
1	1	filter element	01E.170	01E.240	01E.360	01.E450		
3	1	O-ring	75 x 3			302215 (NBR)	304729 (FPM)	
4	1	support ring	81 x 2,6 x 1			3045	81	

**Test methods:** Filter elements are tested according to the following ISO standards:

ISO 2941 Verification of collapse/burst resistance ISO 2942 Verification of fabrication integrity

ISO 2943 Verification of material compatibility with fluids

ISO 3723 Method for end load test

ISO 3724 Verification of flow fatigue characteristics

ISO 3968 Evaluation of pressure drop versus flow characteristics ISO 16889 Multi-pass method for evaluating filtration performance

North America

44 Apple Street Tinton Falls, NJ 07724 Toll Free: 800 656-3344 (North America only) Tel: +1 732 212-4700

Europe/Africa/Middle East

Auf der Heide 2 53947 Nettersheim, Germany Tel: +49 2486 809-0

Friedensstraße 41 68804 Altlußheim, Germany Tel: +49 6205 2094-0

An den Nahewiesen 24 55450 Langenlonsheim, Germany Tel: +49 6704 204-0

#### Greater China

No. 7, Lane 280, Linhong Road Changning District, 200335 Shanghai, P.R. China Tel: +86 21 5200-0099

#### Asia-Pacific

100G Pasir Panjang Road #07-08 Interlocal Centre Singapore 118523 Tel: +65 6825-1668 For more information, please email us at *filtration* @eaton.com or visit www.eaton.com/filtration

© 2021 Eaton. All rights reserved. All trademarks and registered trademarks are the property of their respective owners. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, on guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.

