



EZD-CP4

User Manual

April 2005





Warning! Dangerous electrical voltage!

Before commencing the installation

- Disconnect the power supply of the device.
- Ensure that devices cannot be accidentally restarted.
- Verify isolation from the supply.
- Short circuit to earth.
- Cover or enclose neighboring units that are live.
- Follow the engineering instructions (AWA) of the device concerned.
- Only suitably qualified personnel in accordance with EN 50110-1/-2 (VDE 0105 Part 100) may work on this device/system.
- Before installation and before touching the device ensure that you are free of electrostatic charge.
- The functional earth (FE) must be connected to the protective earth (PE) or to the potential equalization. The system installer is responsible for implementing this connection.
- Connecting cables and signal lines should be installed so that inductive or capacitive interference does not impair the automation functions.
- Install automation devices and related operating elements in such a way that they are well protected against unintentional operation.
- Suitable safety hardware and software measures should be implemented for the I/O interface so that a line or wire breakage on the signal side does not result in undefined states in the automation devices.
- Ensure a reliable electrical isolation of the low voltage for the 24 volt supply. Only use power supply units complying with IEC 60364-4-41 (VDE 0100 Part 410) or HD 384.4.41 S2.
- Deviations of the mains voltage from the rated value must not exceed the tolerance limits given in the specifications, otherwise this may cause malfunction and dangerous operation.

- Emergency stop devices complying with IEC/EN 60204-1 must be effective in all operating modes of the automation devices. Unlatching the emergency-stop devices must not cause restart.
- Devices that are designed for mounting in housings or control cabinets must only be operated and controlled after they have been installed with the housing closed. Desktop or portable units must only be operated and controlled in enclosed housings.
- Measures should be taken to ensure the proper restart of programs interrupted after a voltage dip or failure. This should not cause dangerous operating states even for a short time. If necessary, emergency-stop devices should be implemented.
- Wherever faults in the automation system may cause damage to persons or property, external measures must be implemented to ensure a safe operating state in the event of a fault or malfunction (for example, by means of separate limit switches, mechanical interlocks etc.).

Contents

About This Manual	3
Explanation of terms	3
Other manuals	4
Writing conventions	4

1 About the Display/Operator System	5
Target readership	5
Proper use	5
Overview	6
– Display/operator system at a glance	8
Type references	9
Operating principles	10
Main menu	11

2 Installation	13
Mounting	13
– Fitting the protective membrane	14
– Mounting the protective cover	15
– Mounting the display/operator unit (front mounting)	18
– Removing the display/operator unit (front mounting)	20
– Mounting the power supply/communication module	21
– Removing the power supply/communication module	22
Terminals	22
– Terminals	22
– Connecting the power supply	23
– Connecting the connection cable	24

3	Commissioning	27
	Switching on	27
	Initial Commissioning	28
<hr/>		
4	Use	29
	Point-to-point connection	29
	Net operation	30
	Connection faulty	31
	Graphic mode on the remotely operated device	31
<hr/>		
5	Settings	33
	Station selection	33
	Setting the menu language	34
	Changing the lighting	35
	Changing the contrast	36
<hr/>		
	Appendix	37
	Dimensions	37
	– EZD-80.. display/operator unit	37
	Technical data	38
	– General ambient conditions	38
	– EZD-80.. display/operator unit	40
	– EZD-XM-80 protective membrane	42
	– EZD-XS-80 protective cover	42
	– EZD-CP4 power supply/communication module	43
<hr/>		
	Index	45

About This Manual

This manual describes the installation, commissioning and possible settings on the display/operator system.

Explanation of terms

The display/operator system described here consists of the EZD-CP4 power supply/communication module, the EZD-80.. display/operator unit and an EZD-CP4-...-CAB connection cable for the EZ basic units.

If the display/operator system is connected with an EZ basic unit, it can be used to read the text and status display of the basic unit or operate the basic unit remotely via the keypad.

The following table shows the individual components of the display/operator system with their type designations. Components that can be ordered are indicated by a gray background.

Table 1: Components of the display/operator system with type designation and possible order combinations

Display/ operator unit	Power supply unit/ communication module	Connection cable to EZ basic unit
EZD-80 EZD-80-B	EZD-CP4	EZD-CP4-500-CAB5/ EZD-CP4-800-CAB5
	EZD-CP4-500 or EZD-CP4-800	

Other manuals

The EZD-CP4 can be connected to EZ500, EZ700, EZ800 or EZD-CP8... basic units.

These EZ basic units are described in separate manuals:

- EZ500/700 (MN05013003E)
- EZ800 (MN05013004E)
- EZD, multi-function display (MN05013005E)

All manuals can be downloaded as PDF files from the Internet. To find the manual quickly, enter the documentation number at www.EatonElectrical.com.

Writing conventions

Symbols used in this manual have the following meanings:

► Indicates actions to be taken.



Attention!

Warns of the possibility of slight damage.



Caution!

Warns of the possibility of serious damage and slight injury.



Warning!

Warns of the possibility of substantial damage, serious injury or death.



Indicates interesting tips and additional information

For greater clarity, the name of the current chapter is shown in the header of the left-hand page and the name of the current section in the header of the right-hand page. This does not apply to pages at the start of a chapter and empty pages at the end of a chapter.

1 About the Display/Operator System

Target readership

The EZD-CP4 must only be installed and connected up by trained electricians or persons familiar with the installation of electrical equipment.

A specialist knowledge of electrical engineering is needed for commissioning. When controlling active components such as motors or pressure cylinders, parts of the system can be damaged and persons put at risk if the EZD-CP4 is connected or programmed incorrectly.

Proper use

The EZD-CP4 must be properly installed before use.

- The EZD-80/EZD-80-B display and operator unit is protected to IP65 and does not normally require any special housing protection.
- The rear of the EZD-CP4 unit is designed as a mounting unit and must be installed in an enclosure, control cabinet or a service distribution board.
- The installation must comply with regulations for electromagnetic compatibility (EMC).
- The power up of the EZD-CP4 must not cause any hazards arising from activated devices, such as unexpected motor startups or power ups.

Overview

The display/operator system can be connected with EZ500, EZ700, EZ800 or EZD-CP8... basic units to implement the following tasks:

- Display on the EZD-CP4 of the status or text display of the connected basic unit.
- Remote operation of the connected basic unit via the EZD-CP4 keypad.

The devices can be linked together easily via the serial interface.

If the display/operator system is connected to an EZ basic unit in the EZ-NET network, it is also possible to operate any other device in the EZ-NET via the display/operator unit and display its status, regardless of the device in the EZ-NET to which the display/operator system is connected.

Legend for figure 1:

- ① EZ500 basic units
- ② EZ700 basic units
- ③ EZD80-B/EZD-80 multi-function display
- ④ Power supply/communication module with EZD-CP4-500 (above) or EZD-CP4-800 (below) connection cable
- ⑤ EZ800 basic units

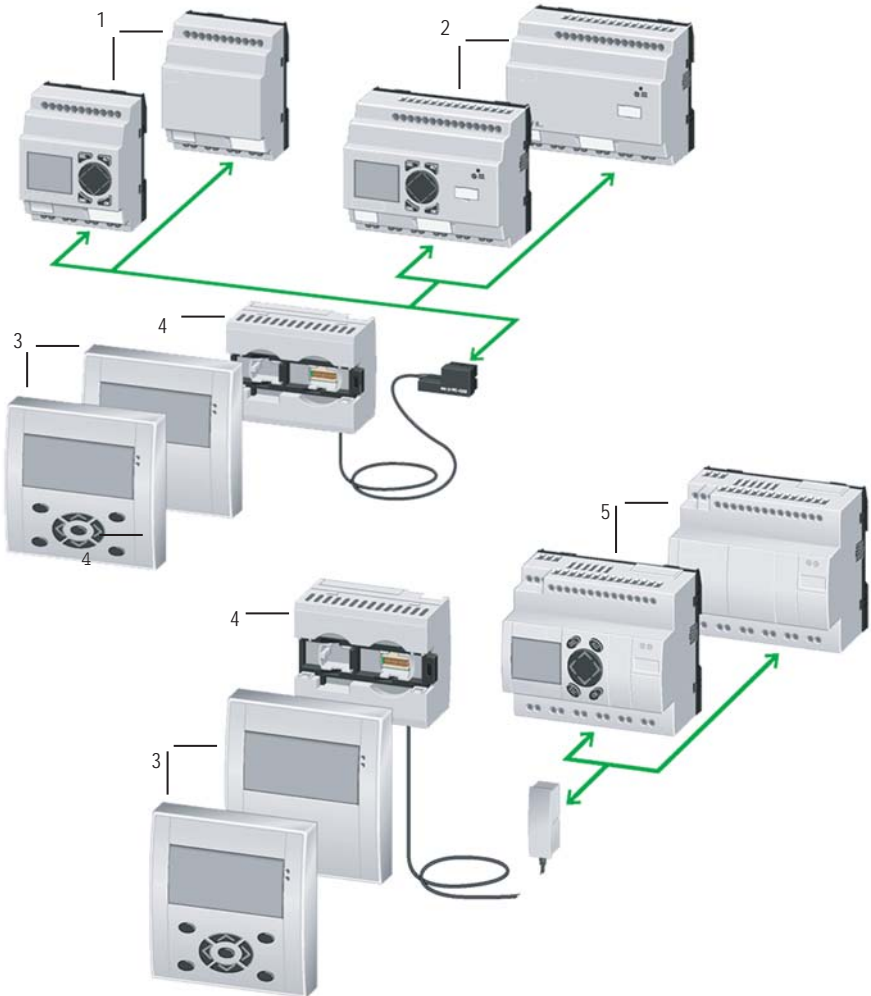


Figure 1: System overview (Legend → page 6)

Display/operator system at a glance

The display/operator system consists of the power supply unit/communication module and the display/operator unit.

Display and operator unit

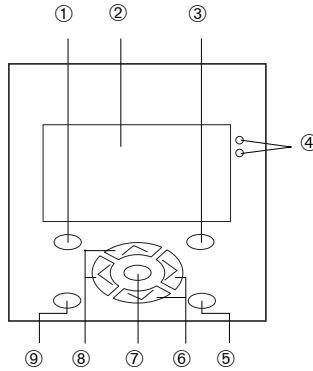


Figure 2: Display/operator unit

- ① DEL button
- ② Graphic display
- ③ ALT button
- ④ LEDs for signalling
- ⑤ Mode button
- ⑥ Right, down cursor buttons
- ⑦ OK button
- ⑧ Left, up cursor buttons
- ⑨ ESC button

Power supply/communication module


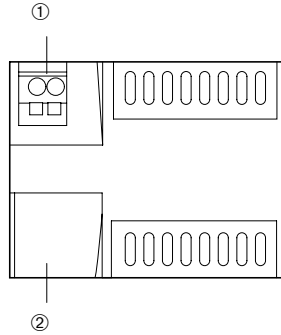


Figure 3: Power supply/communication module

- ① Power supply
- ② Serial interface for point-to-point connection

Type references

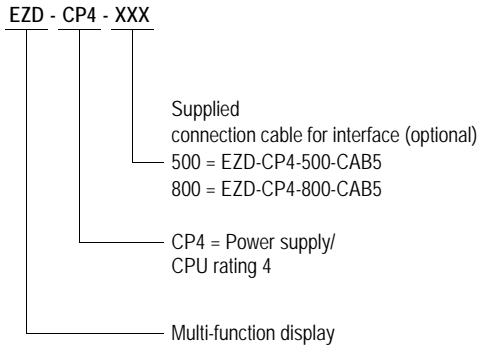

Operating principles

The buttons of the display/operator unit have the following functions:



Go to next menu level
Select menu item
Activate, modify, save your entry



Return to last menu level
Cancel your entry since the last **OK**




^ ∨ Change menu item
Change value
< > Change place



Toggle between Terminal mode and main menu.

Main menu

Status display

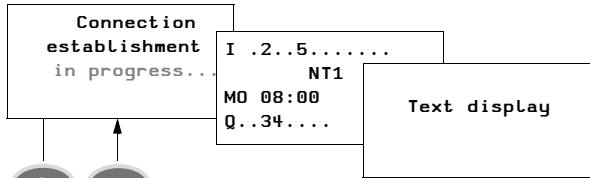

Status or text display of the connected device

Main menu

Current selection flashes in the EZD-CP4 menu

COM...
MENU LANGUAGE...
LIGHTING: 60%
CONTRAST: +2

OK

ESC

STATION ID: 0
BAUDRATE: 9600B

Cursor
^ v



COM...
MENU LANGUAGE...
LIGHTING: 60%
CONTRAST: +2

OK

ESC

ENGLISH ↑
DEUTSCH
FRANCAIS
ESPAÑOL ↓
ITALIANO
PORTUGUES
NEDERLANDS
SVENSKA
POLSKI
TÜRKCE
MAGYAR
CESKY
RUSSKIJ

Cursor
^ v



COM...
MENU LANGUAGE...
LIGHTING: 60%
CONTRAST: +2

→ page 12

Cursor
^ v



COM...
MENU LANGUAGE...
LIGHTING: 60%
CONTRAST: +2

→ page 12

Setting values



Selection mode:
Black rectangle flashing


or

Entry mode:
Number flashing



Press **OK** to toggle between Selection and Entry modes.

Press **OK** or **ESC** to move from Entry mode to Selection mode of the main menu



^ v Change value

The result of the value change is immediately visible

Special function



If the remotely operated device is an EZD device in graphic mode, this button combination can be used to close the graphic mode on this device. The "*" button on the remotely operated EZD device has the same local function when pressed.

2 Installation

The EZD-CP4 must only be installed and connected up by trained electricians or a person familiar with the installation of electrical equipment.

The EZD-CP4 is installed in the following order:

- Mounting,
- Connecting the serial interface,
- Connecting the power supply.

Mounting

Install the display/operator unit in the front of a control cabinet, a service distribution board, operator panel or in an enclosure. You can protect the display/operator unit with a protective membrane or cover, depending on the environment in which it is to be used. This must be fitted before the EZD-CP4 is mounted and is therefore described in the next section.

The EZD-CP4 power supply/communication module must be mounted in such a way that all the terminals are protected against direct contact, liquids and dust during operation.

For sufficient heat circulation around the device, the rear of the EZD-CP4 and the terminals must have a clearance of at least 30 mm from the wall or adjacent devices.

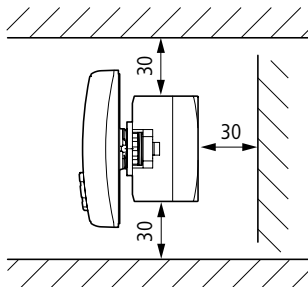


Figure 4: Minimum clearance to EZD-CP4

Fitting the protective membrane

For special applications such as in the food industry, the operator unit must be protected against the ingress of dust, liquids etc. In this case fit the protective membrane over the display/operator unit.



Fit the protective membrane before mounting the display/operator unit.

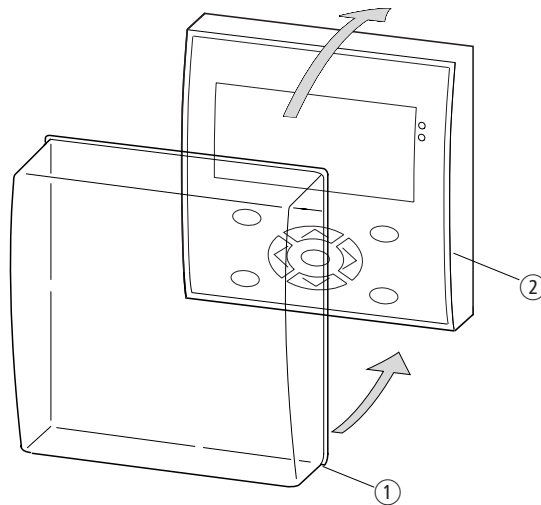


Figure 5: Fitting the protective membrane

- ① Protective membrane
- ② Display and operator unit



Caution!

Ensure that the membrane fits snugly in the groove of the display/operator unit.

Otherwise a proper seal cannot be guaranteed and particles may enter underneath the membrane. This may cause malfunctions in the keypad.

In food industry applications, there is the risk of bacteria building up underneath the membrane.

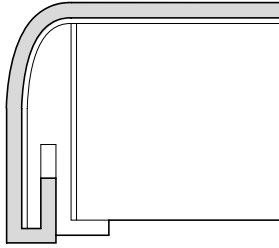


Figure 6: Correct position of the protective membrane



If the protective membrane has to be replaced, the display/operator unit has to be removed. Replace the membrane and refit the device.

Mounting the protective cover

The protective cover is provided for using the device in aggressive environments. This protects the display and the operator unit against mechanical damage or destruction. Protection to IP65 is maintained.

The protective cover can be opened so that the operator buttons can be used.

The protective cover can be closed with a sealing facility to provide protection against unauthorized operation.



Fit the protective cover before mounting the display/operator unit.

► First remove the front frame before mounting.

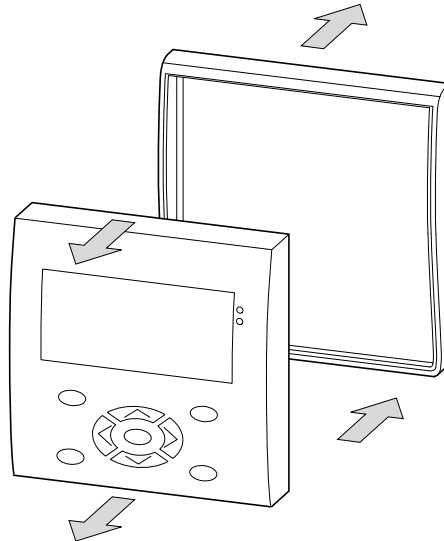


Figure 7: Removing the front frame

The protective cover can be mounted in two different positions.

► Choose the position that is most suitable for the application at hand and your requirements.

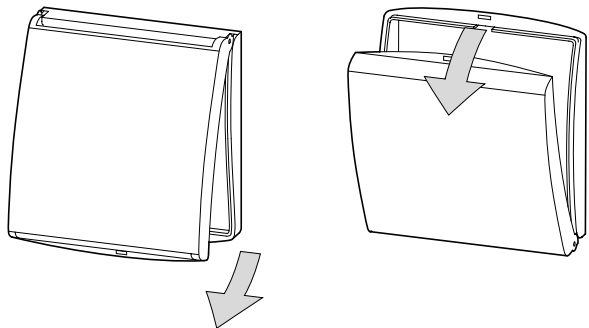


Figure 8: Position of the protective cover

► Mount the protective cover as shown in the figure.

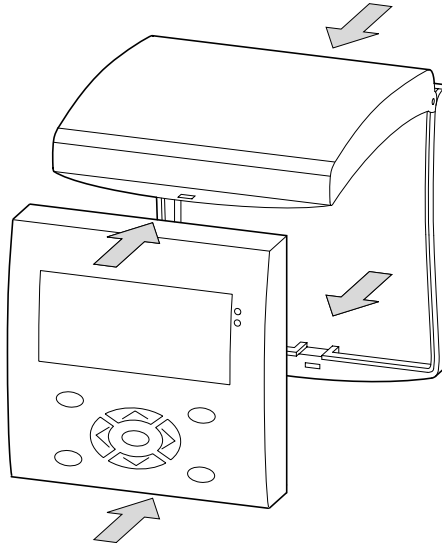


Figure 9: Mounting the protective cover

Sealing the protective cover

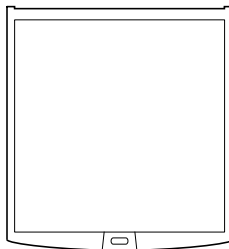


Figure 10: Sealing the protective cover

The grip handle of the protective cover is provided with holes that can be used in any mounting position. You can fit a wire or similar material through these holes in order to seal the cover. The cover is sealed properly if the wire is provided with a lead seal. The cover can then only be opened by breaking the seal or the wire.

Mounting the display/operator unit (front mounting)



The protective membrane or the protective cover must be fitted beforehand.

- ▶ Drill and punch out two 22.5 mm diameter holes in the front plate. The diameter is the same as is normally required for control circuit devices.



Observe the following technical requirements:

- The hole spacing is 30 mm.
- The maximum thickness of the front plate for mounting the power supply/CPU module must not be more than 6 mm.
- Ensure minimum clearances for the power supply/CPU module → page 13
- In order to ensure protection to IP65, the surface of the mounting front must be even and smooth.

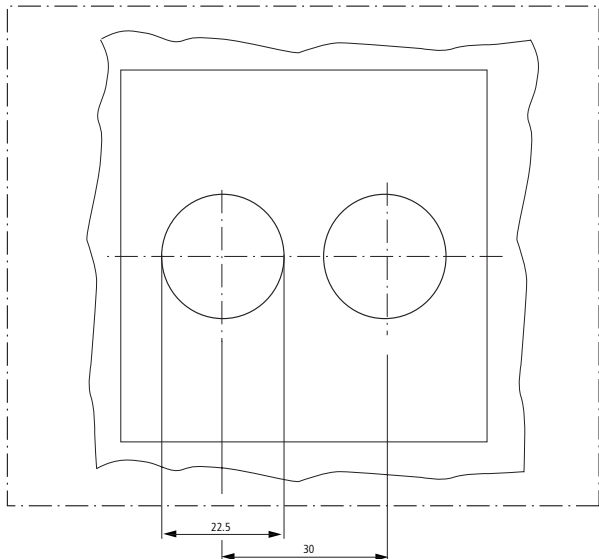


Figure 11: Drill holes for the EZD

- ▶ Fit the display/operator unit in the punched fixing holes.

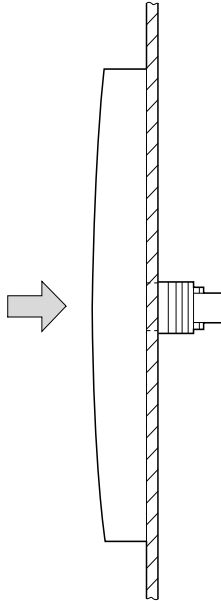


Figure 12: Mounting the display/operator unit

- ▶ Tighten the display/operator unit with the screw fasteners (→ Figure 13).
The tightening torque must be between 1.2 and 2 Nm
(10.6 and 17.7 in.lb)



Ensure that the correct torque is used. If the tightening torque is too low or high, this may impair the seal.

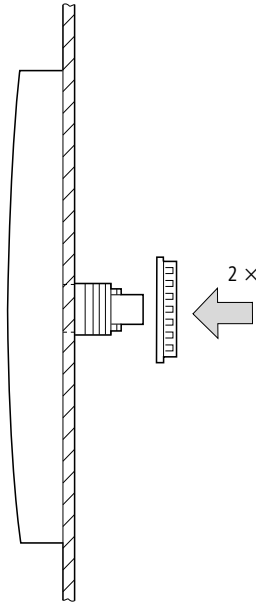


Figure 13: Screw fastening the display/operator unit

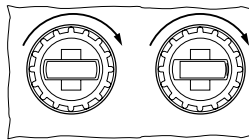


Figure 14: Rear of the mounted display/operator unit

Removing the display/operator unit (front mounting)

- ▶ Unscrew the fixing element and remove the display/operator unit.

Mounting the power supply/communication module

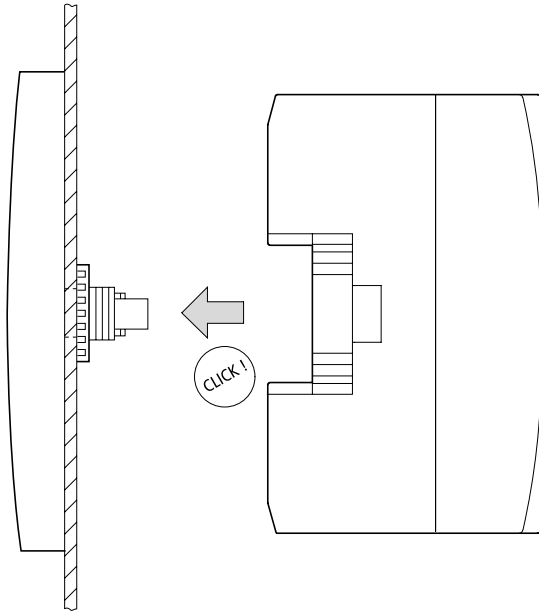


Figure 15: Mounting the power supply/communication module

Removing the power supply/communication module

Use a screwdriver with a 100 x 3.5 mm slot width.

- ▶ Insert the screwdriver into the lug of the fixing shaft catch. **1**
- ▶ Lever out the slide catch. **2**
- ▶ Pull out the power supply/CPU module from the fixing shafts. **3**

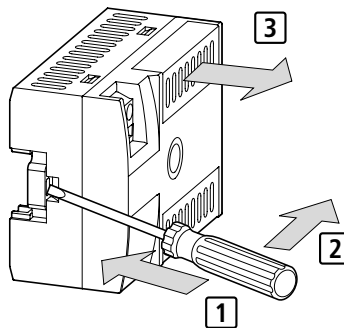


Figure 16: Releasing the fixing shaft

Terminals

Terminals

The EZD-CP4 is fitted with cage clamp terminals for connecting the power supply and the connection cable to the serial interface.

Tool for cage clamp terminals

Slot-head screwdriver, width 3.5 mm x 0.6 mm.

Connection cross-sections of the EZD cage clamp terminal cables

- Power supply terminal:
0.08 to 2.5 mm² (AWG 28 – 12)
- Interface terminal
0.14 to 0.5 mm² (AWG 26 – 20)

Connecting the power supply



The required connection data for the EZD-CP4 is provided in the Section "Technical data", Page 38.

DC power supply EZD-CP4

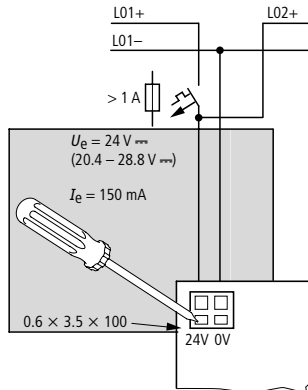


Figure 17: Power supply on the EZD



The EZD-CP4 is protected against polarity reversal. Ensure the correct polarity of the terminals to ensure that the EZD-CP4 functions correctly.

Cable protection

Provide cable protection (F1) of at least 1 A (slow) on the EZD-CP4.



When the EZD-CP4 is switched on for the first time, its power supply circuit behaves like a capacitor. Use a suitable device for switching on the power supply and do not use any reed relay contacts or proximity switches.

With the power supply ensure that the response threshold for the short-circuit current is higher than the inrush current of the EZD-CP4.

Connecting the connection cable

The EZD-CP4 is provided with a serial interface. This is used for point-to-point communication between the EZD-CP4 and an EZ500, EZ700, EZ800 or EZD-CP8.. if there is no PC connected to these devices.

Selecting a suitable connection cable

Different connection cables are required depending on which device is connected to the EZD-CP4:

Table 2: Selecting connection cables

EZD-CP4 connected to ...	Connection cable
EZ500	EZD-CP4-500-CAB5
EZ700	
EZ800	
EZD-CP8..	EZD-CP4-800-CAB5
EZD-AC-CP8..	

The EZD-CP4-500-CAB5 and EZD-CP4-800-CAB5 connection cables are 5 m long.



In order to ensure correct EMC, the EZD-CP4-500-CAB5 and EZD-CP4-800-CAB5 connection cables must not be lengthened.

Connecting the connection cable

- ▶ Remove the interface cover carefully. **1**
- ▶ Use a screwdriver to press down the recess next to the terminal **2** and connect the wires of the connection cable to the terminals in the order stated **3**. Proceed accordingly in the reverse order to remove the connection cable **4**.
- ▶ Refit the interface cover. **5**

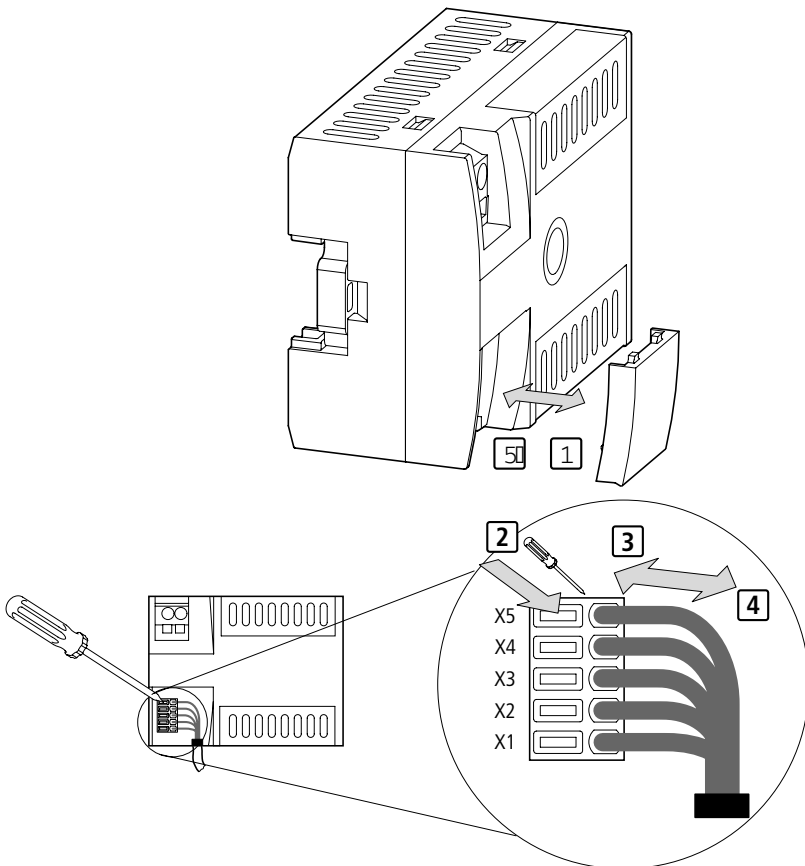


Figure 18: Connecting the connection cable

X1=gray, X2=brown, X3=yellow, X4=white, X5=green

► Fit the connection cable plug into the EZ basic unit.

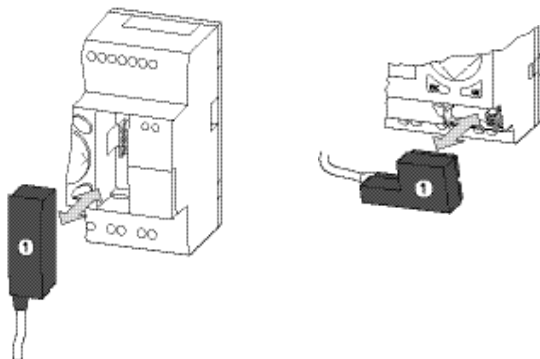


Figure 19: Fitting the connection plug ① to the EZ basic unit
Left: EZ800/EZD, right: EZ500/700

3 Commissioning

Switching on

Before switching on check that the power supply and the connection cable are properly connected:

- Terminal +24 V: voltage +24 V
- Terminal 0 V: voltage 0 V

If you have already integrated devices into a system, secure any parts of the system connected to the working area to prevent access and ensure that no-one can be injured if, for example, motors start up unexpectedly.



Caution!

The EZD-CP4 allows you to operate a device that may be positioned far from your actual location. All access rights that you would also require “locally” are granted to you. It is not always possible to obtain a view of the situation “locally”. Use of this operating mode and the execution of any changes to device settings should only be carried out with the utmost caution.

You can also carry out settings locally on the device while you are operating a device remotely via the keypad. In this case, the local operation on the device is always faster than the remote operation in Terminal mode. Bear in mind that this may lead to conflicts that may trigger faults or unforeseen events.



A EZD-CP4 makes its display and operator unit available to the connected device. Only data for the display and the status of the buttons is sent via the connection. This ensures that the local data of the connected device is not destroyed in the event of a communication fault.

Initial Commissioning

When you switch on the display/operator system for the first time, you will be asked to select the menu language.

- ▶ Select the required menu language and confirm the setting by pressing the OK button.
- ▶ Press ESC to exit language selection.



If you do not set the language, the display/operator system will display this language menu every time you switch on, and wait for you to select a language.

You can change the language setting at a later time as required, (see → Section "Setting the menu language", Page 34).

**Connection
establishment
in progress...**

If the device was switched on for the first time, the display/operator system will try to establish a connection with the default settings to a connected device. The status and text display of the remotely operated device is displayed as soon as the connection can be established.

4 Use

You can use the display/operating system for a point-to-point connection or in the EZ-NET network. EZ-NET operation is only possible in combination with EZ800/EZD devices.

Point-to-point connection


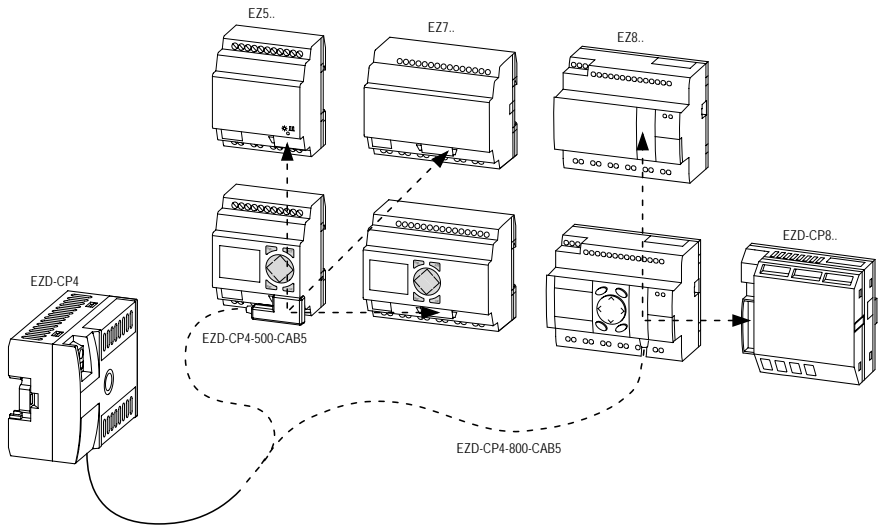


Figure 20: Possible point-to-point connection via the serial interface

Net operation

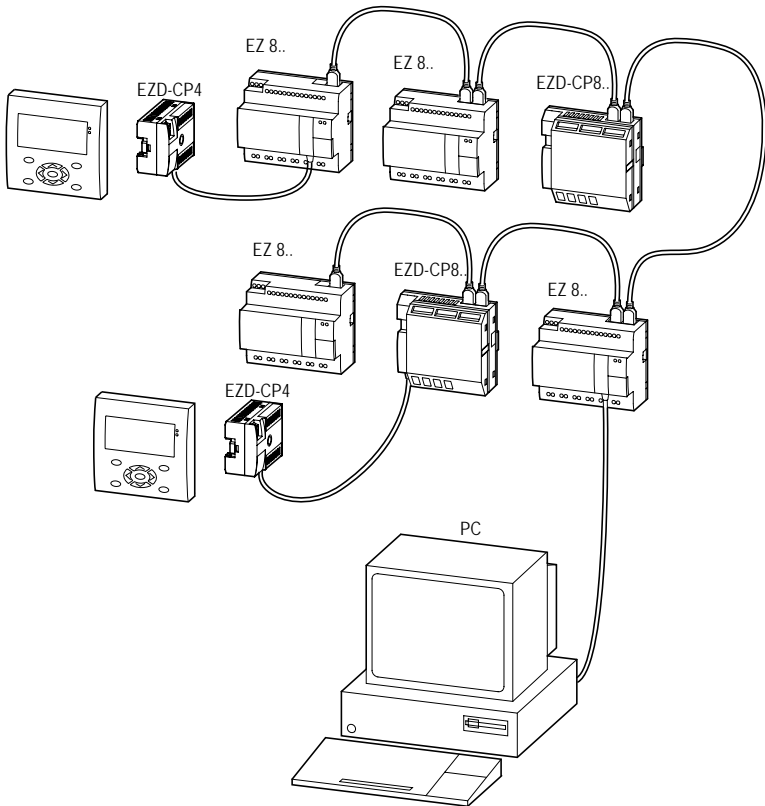

Communication via EZSoft is not possible if a network station (EZ800 or EZD-CP8) is connected with a PC and an EZD-CP4 is accessing this device. This also applies to program uploads and downloads.


To enable communication simply set a different station ID in the main menu of the CP4 in the COM menu (→ page 11).



Avoid data conflicts between the connected devices!

Connection faulty

If the connection is faulty or interrupted, the EZD-CP4 will display the message "Connection establishment in progress..." continuously. This message may, however, also be due to an incorrect COM setting (→ Section "Main menu" Page 11).



Connection
establishment
in progress...

**Graphic mode on the
remotely operated device**

If the display/operator system is connected with another EZD device which is in Graphic mode, this graphic will not be shown by the display/operator system. You can terminate graphic mode from the display/operator system by pressing ALT + ESC. The same thing can be achieved by pressing the "*" button on the remotely operated EZD device as long another function was not assigned to this button (→ Section "Special function" , Page 12).

5 Settings

The following settings to the connected basic unit can be made via the display/operator system.

Station selection

Pressing the “*” activates the main menu of the display/operator system.

▶ Press the “*” button.

```
COM . . .
MENU LANGUAGE . . .
LIGHTING: 60%
CONTRAST: +2
```

The main menu will appear.

▶ Select the COM menu item and press the OK button.

```
STATION ID: 0
BAUDRATE: 9600B
```

The Station ID menu will appear.

▶ Press the OK button and select the station number with ^ and v.

▶ Confirm with OK.



Station ID 0 is always assigned to the device directly connected via the interface. All other station IDs are assigned to the NET-IDs of the individual NET stations in an EZ-NET.

```
STATION ID: 0
BAUDRATE: 9600B
```

▶ Press the OK button and select the baud rate using ^ and v.

▶ Confirm with OK.



The transfer rate for EZ500 and EZ700 is limited to 9600 baud. The maximum baud rate for EZ800 and EZD-CP8 is 19200 baud.

```
COM...
MENU LANGUAGE...
LIGHTING: 60%
CONTRAST: +2
```

► Exit the COM menu with **ESC**.

You can leave the main menu at any time by pressing the "*" button.

```
Connection
establishment
in progress...
```

When the main menu is left, the EZD-CP4 tries to establish connection to the selected device. The status and text display of the remotely operated device is displayed as soon as the connection can be established.

Setting the menu language

If the main menu of the display/operator system is not active, press the "*" button to enter the menu.

```
COM...
MENU LANGUAGE...
LIGHTING: 60%
CONTRAST: +2
```

► Use the ^ and v buttons to select the Menu language menu item.

► Confirm with **OK**.

```
ENGLISH      ↑
DEUTSCH      3
FRANCAIS
ESPANOL      ↓
```

► Use the cursor buttons ^ or v to select the language required.

- English
- German
- French
- Spanish
- Italian
- Portuguese
- Dutch
- Swedish
- Polish
- Turkish
- Hungarian
- Czech
- Russian

► Press **OK** to confirm your choice and press **ESC** to exit the menu.

You can leave the main menu at any time by pressing the "*" button.

Changing the lighting

If the main menu of the display/operator system is not active, press the "*" button to enter the menu.

```
COM . . .
MENU LANGUAGE . . .
LIGHTING: 60%
CONTRAST: +2
```

► Use the ^ and v buttons to select the Lighting menu item. The cursor moves to the percentage value of the lighting.



When Selection mode is active, the cursor appears as a black flashing rectangle. Pressing **OK** will activate Edit mode in which the cursor will disappear and the number will flash. In Edit mode, use the ^ and v to change the value. The changes are displayed immediately.

► Press **OK**.

```
COM . . .
MENU LANGUAGE . . .
LIGHTING: 70%
CONTRAST: +2
```

Now change the value in 10% steps with the ^ and v.

► Press the ^ or v buttons to change the value.

► Press **OK** or **ESC** to exit Edit mode

If Selection mode is active, you can exit the main menu at any time by pressing the "*" button.

Changing the contrast

If the main menu of the display/operator system is not active, press the "*" button to enter the menu.

COM . . .
MENU LANGUAGE . . .
LIGHTING: 70%
CONTRAST:

▶ Use the ^ and v buttons to select the Contrast menu item.

The cursor moves to the percentage value of the contrast.



When Selection mode is active, the cursor appears as a black flashing rectangle. Pressing OK will activate Edit mode in which the cursor will disappear and the number will flash. In Edit mode, use the ^ and v to change the value. The changes are displayed immediately.

▶ Confirm with OK.

COM . . .
MENU LANGUAGE . . .
LIGHTING: 70%
CONTRAST: +1

Use the ^ and v buttons to change the value between -2 and +2 in increments of 1.

▶ Press the ^ or v buttons to change the value.


▶ Press OK or ESC to exit Edit mode

If Selection mode is active, you can exit the main menu at any time by pressing the "*" button.


Appendix

Dimensions


EZD-80.. display/operator unit

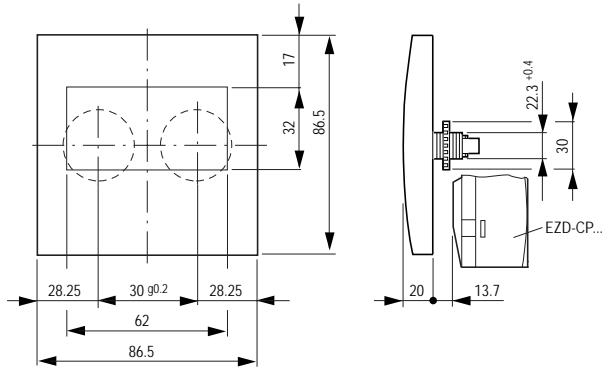


EZD-XM-80 protective membrane

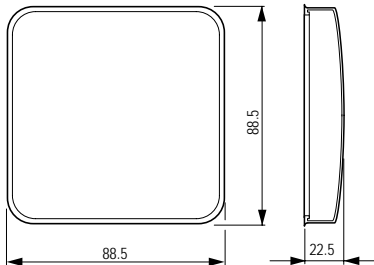

EZD-XS-80 protective cover

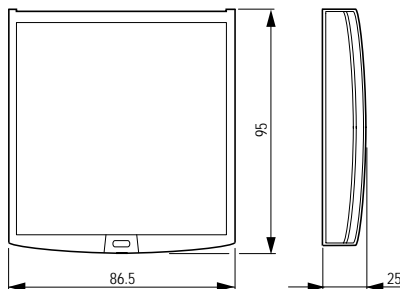

EZD-CP4 power supply/communication module

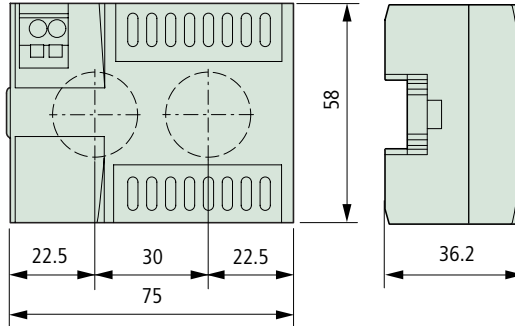

Technical data		General ambient conditions
Climatic conditions (damp heat constant to IEC 60068-2-78; cyclical to IEC 600618-2-30) (cold to IEC 60068-2-1, heat to IEC 60068-2-2)		
Ambient temperature Installed horizontally/vertically	°C, (°F)	-25 to 55, (-13 to 131)
Condensation		Prevent condensation with suitable measures
Display legibility	°C, (°F)	-5 to 50, (-23 to 122)
Storage/transport temperature	°C, (°F)	-40 to 70, (-40 to 158)
Relative humidity (IEC 60068-2-30), non-condensing	%	5 to 95
Air pressure (operation)	hPa	795 to 1080

Ambient mechanical conditions			
Pollution degree			
Power supply/CPU module			2
Display/operator unit			3
Degree of protection (EN 50178, IEC 60529, VBG4)			
Power supply/CPU module			IP20
Display/operator unit			IP65
Display/operator unit with protective cover			IP65
Display/operator unit with protective membrane			IP65
Oscillations (IEC 60068-2-6)			
Constant amplitude 0.15 mm		Hz	10 to 57
Constant acceleration 2 g		Hz	57 to 150
Shocks (IEC 60068-2-27) semi-sinusoidal 15 g/11 ms		Shocks	18
Drop (IEC 60068-2-31)		Drop height	mm
Free fall, when packed (IEC 60068-2-32)		m	1
Electromagnetic compatibility (EMC)			
Electrostatic discharge (ESD), (IEC/EN 61000-4-2, severity level 3)			
Air discharge		kV	8
Contact discharge		kV	6
Electromagnetic fields (RFI), (IEC/EN 61000-4-3)		V/m	10
Radio interference suppression (EN 55011, EN 55022), limit class			B
Burst (IEC/EN 61000-4-4, severity level 3)			
Power cables		kV	2
Signal cables		kV	2
High energy pulses (Surge) EZD (IEC/EN 61000-4-5, severity level 2), power cable symmetrical		kV	1
Line-conducted interference (IEC/EN 61000-4-6)		V	10

Dielectric strength		
Overvoltage category		II
Measurement of the air clearance and creepage distance		EN 50178, UL 508, CSA C22.2, No 142
Dielectric strength		EN 50178
Tools and cable cross-sections		
Power supply terminal		
Solid and flexible with ferrule, minimum to maximum	mm ²	0.08 to 2.5
	AWG	28 to 12
Interface terminal		
Flexible, tin-coated, minimum to maximum	mm ²	0.14 to 0.5
	AWG	26 to 20
Slot-head screwdriver, width	mm	3.5 × 0.5
	inch	0.14 × 0.02

EZD-80.. display/operator unit

Front dimensions W × H × D		
With buttons	mm	86.5 × 86.5 × 21.5
	inches	3.41 × 3.41 × 0.85
Without buttons	mm	86.5 × 86.5 × 20
	inches	3.41 × 3.41 × 0.79
Overall dimensions with fixing shaft W × H × D		
With buttons	mm	86.5 × 86.5 × 43
	inches	3.41 × 3.41 × 1.69
Thickness of fixing wall (minimum; maximum)	mm	1; 6
	inches	0.04; 0.24
Weight	g	130
	lb	0.287

Mounting		2 22.5 mm (0.886 in) holes Display fastened with two fixing rings
	Maximum tightening torque of the fixing rings [Nm]	1.2 to 2
Power supply		By means of EZD-CP4 power supply/communication module
LCD display		
	Type	Graphic/monochrome
	Visible area W × H	mm 62 × 33
	Size of pixels	mm 0.4 × 0.4
	Number of pixels (W × H)	132 × 64
	Spacing (pixel center to pixel center)	mm 0.42
LCD backlight		Yes
	Backlight color	Yellow/green
	The backlight can be used and programmed in visualization applications	Yes
LEDs		
	Number of LEDs	2
Operating buttons		
	Number	9
Pushbutton illumination (LED)		
	Number	5
	Color	Green

EZD-XM-80 protective membrane

Dimensions W × H × D	mm	88 × 88 × 25
	inches	3.46 × 3.46 × 0.98
Weight	g	25
	lb	0.055
Mounting		Is fitted over the display/ keypad (with EZD front ring)

EZD-XS-80 protective cover

Dimensions W × H × D	mm	86.5 × 94 × 25
	inches	3.41 × 3.41 × 0.98
Weight	g	36
	lb	0.079
Mounting		Is fitted over the display/ keypad (without EZD front ring)

EZD-CP4 power supply/communication module

Dimensions W × H × D	mm	75 × 58 × 36.2
	inches	2.95 × 2.28 × 1.43
Weight	g	164
	lb	0.362
Mounting		Fitted on the fixing shaft of the display
Power supply		
Rated voltage		
Rated value	V DC, (%)	24, (+20, -15)
Permissible range	V DC	20.4 to 28.8
Residual ripple	%	≤ 5
Input current		
with 24 V DC, EZD-CP4, EZD-80., normally	mA	150
Voltage dips, IEC/EN 61131-2	ms	10
Heat dissipation		
with 24 V DC, EZD-CP4, EZD-80., normally	W	3.6

Index

B	Baud rate	11
----------	-----------------	----

C	Cable protection	23
	Commissioning	27
	Communication via EZSoft	30
	Connecting the connection cable	24
	Connecting the power supply	23
	Connection	
	Connection cable	24
	Power supply	23
	Connection faulty	31
	Connection plug	26
Contrast	36	

D	Dimensions	37
	Dimensions, EZ	40
	Display and operator unit	8
	Drill holes	18

F	Fitting the protective membrane	14
----------	---------------------------------------	----

G	Graphic mode	12, 31
----------	--------------------	--------

K	Keypad	8, 10
----------	--------------	-------

L	Language setting	28
	Lighting	35

M	Main menu	
	Selection	11
	Menu language	28
	Minimum clearances, to EZD-CP4	13

	Mounting	
	Display/operator unit	18
	Power supply/communication module	21
	Protective cover	15
	Protective membrane	14
	Mounting the display/operator unit	18
	Mounting the power supply/communication module	21
<hr/>		
N	Net operation	30
	Network operation	6
<hr/>		
P	Point-to-point connection	29
	Power supply	9
	Protective cover	
	Mounting	15
	Sealing	17
<hr/>		
S	Sealing the protective cover	17
	Serial interface	9, 14
	Setting the menu language	34
	Setting values	12
	Settings	33
	Station ID	11
	Station selection	33
	Status display	11, 12
	Switching on	27
	System menu	
	Selection	11
	System overview	7
<hr/>		
T	Task	6
	Terminals	22
	Transfer rate	33
	Type references	9
	Network operation	6
<hr/>		
U	Use	29

Eaton Electrical
1000 Cherrington Parkway
Moon Township, PA 15108-4312
USA
Tel: 1-800-525-2000
www.EatonElectrical.com



© 2005 Eaton Corporation
All Rights Reserved
Printed in USA
Publication No. MN05013006E
April 2005