COOPER **Bussmann**[®]

Surge Protection Made Simple[™]




DANGER Hazardous Voltage

Will cause severe injury or death.

Working on or near energized circuits poses a serious risk of electrical shock. De-energize all circuits before installing or servicing this equipment and follow all prescribed safety procedures.

Inst	allation	Instructions

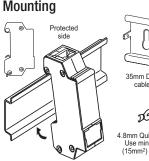

35mm DIN-Rail cable lug T 4.8mm Quick connect. Use min. 16AWG (15mm²) conductor NOTE: Miminize chances of inductive coupling of interference voltages by

Applications


Rack Mount

UL Requirements


- 1. This device are intended for ordinary indoor us on communication loop circuits that are isolated from the Public Switched Telephone Network.
- 2. The protector shall be secured using the methods described in this instruction.
- 3. Proper grounding continuity shall be determined.
- 4. Please install the protector in accordance with the applicable requirements of the National Electrical Code, Article 800 or other applicable local codes.
- 5. The maximum circuit current for UL 497 B applications is limited to 100mA.

Tabulation Strike voltage in accordance with UL 497 B (Protectors for Data Communication and Fire Alarm Circuits)										
Catalog Number	Strike voltage 100V			Strike voltage 100V / µsec						
	Shield-to-Ground		Line-to-Shield		Shield-to-Ground		Line-to-Shield			
BSPD48RJ45	70V min	110V max	7V min	11V max	70V min	600V max	7V min	15V max		

3A1979RevA © 2012 Cooper Bussmann St. Louis, MO 63178 Publication-No. DS1631/CB: ID-No. 066953

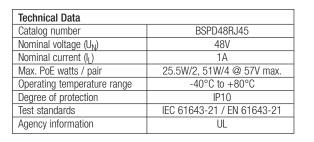

ETHERNET DATA SIGNAL APPLICATIONS

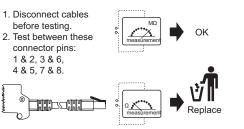

Connector Pin Assignments Circuit Diagrams Wiring Protected side ≤ 20" (0.5m) 2 - M Protected Jnprotected cable side - DKI een 🗋 OK 6 Inprotected DKIside **RJ 45 Connector** 8 4 Protected pairs


making separation distance to unprotected cables as far as possible

± 🗆 🥅 📖

Patch pan


Use min. 16AWG

(1.5mm²) conductor

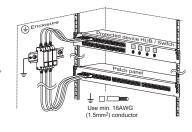

Panel Mount

Equipment Chassis Mount

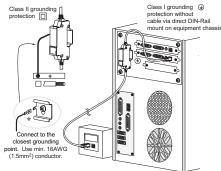

Testina

Safety Instructions

This Surge Protective Device (SPD) for coaxial connection may only be installed by gualified electrical personnel. All applicable national and local electrical standards and safety regulations must be observed. The SPD must be checked for external damage prior to installation.

If any damage or other defects are detected, do not install the device.

The installation and application of this SPD is only permitted within the limits shown and stated in these installation instructions.

The SPD and the equipment connected to it can be destroyed by loads exceeding the stated values.

Opening, modifying or otherwise tampering with the SPD invalidates the warranty.



Warranty

See document 3A1502 at www.cooperbussmann.com/surge for details of limited warranty.

